Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aowoka IT510

Aowoka IT510 Bluetooth 5.3 Wireless Earbuds User Manual

Model: IT510

Introduction

Thank you for choosing the Aowoka IT510 Bluetooth 5.3 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.3 connectivity, HiFi stereo sound, ENC noise cancellation, a clear LED display, extended battery life, and IPX7 waterproofing. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

Package Contents

- Aowoka IT510 Wireless Earbuds
- Charging Case
- USB-C Charging Cable
- Eartips (various sizes)
- User Manual

Setup and First Use

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The LED display on the case will show the charging status. A full charge takes approximately 1.5 hours for the case.



Image: Aowoka IT510 Earbuds in their charging case, displaying battery levels on the LED screen. The image highlights 7 hours of earbud playtime and 42 hours of total playtime with the charging case.

2. Pairing with Your Device

1. Ensure the charging case is open and the earbuds are inside.
2. Activate Bluetooth on your smartphone, tablet, or other device.
3. Remove the earbuds from the charging case. They will automatically enter pairing mode.
4. On your device's Bluetooth settings, search for "IT510" and select it to connect.
5. Once connected, the earbuds will automatically reconnect to your device when removed from the case for future use.



Image: Aowoka IT510 Earbuds and their charging case positioned next to a smartphone displaying the Bluetooth pairing menu, showing "IT510" as a connected device. A laptop is also visible in the background, emphasizing multi-device compatibility and the efficiency of Bluetooth 5.3.

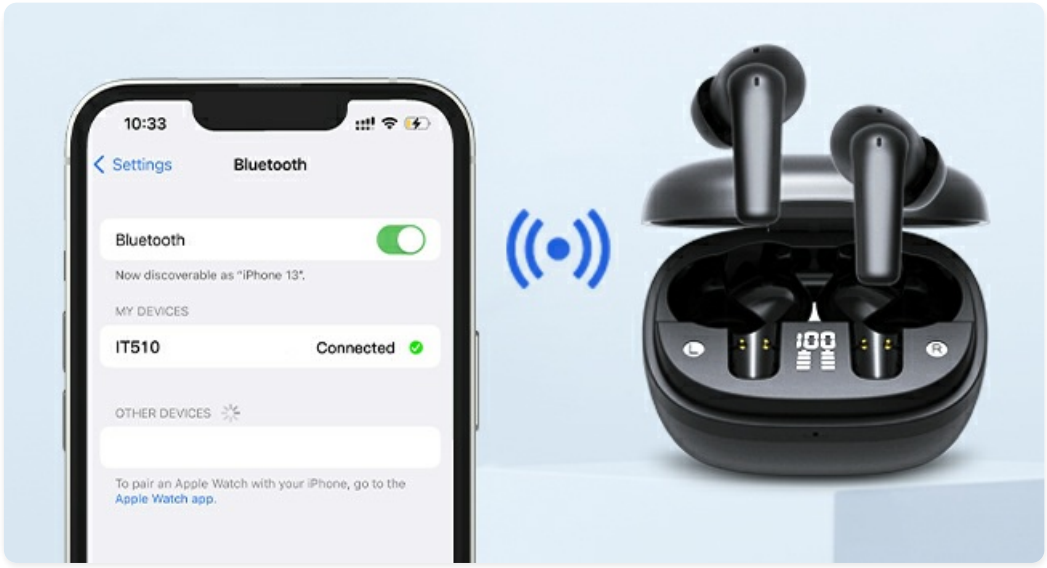


Image: A close-up of a smartphone screen showing the Bluetooth settings with "IT510" listed as a connected device, alongside the Aowoka IT510 earbuds and their charging case. This visual demonstrates the simple and quick pairing process.

Operating Instructions

Touch Controls

The Aowoka IT510 earbuds feature sensitive touch controls for easy management of music playback, calls, and voice assistant activation.



Image: A visual guide to the smart touch controls on the Aowoka IT510 earbuds. It shows icons for various functions: double tap for play/pause and answer/hang up calls, 2-second press for changing songs and rejecting calls, single tap for volume adjustment, and triple tap for voice assistant activation.

- **Play/Pause Music:** Double-tap either earbud.
- **Answer/End Call:** Double-tap either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Next Track:** Press and hold the right earbud for 2 seconds.
- **Previous Track:** Press and hold the left earbud for 2 seconds.
- **Volume Up:** Single tap the right earbud.
- **Volume Down:** Single tap the left earbud.
- **Activate Voice Assistant (Siri/Google Assistant):** Triple-tap either earbud.

Sound Quality and ENC Noise Cancellation

The IT510 earbuds feature 14.2mm titanium-coated composite diaphragm drivers and AAC/SBC audio encoding for HiFi stereo sound with enhanced bass. Equipped with 4 HD microphones and advanced ENC (Environmental Noise Cancellation) technology, these earbuds effectively filter out external noise, ensuring clear call quality even in noisy environments.



Image: An exploded view diagram of the Aowoka IT510 earbud, showcasing its internal components, specifically the 14.2mm titanium-coated diaphragm driver, which contributes to enhanced bass performance.



Image: An Aowoka IT510 earbud depicted with a sound wave graphic, illustrating the effect of ENC (Environmental Noise Cancellation) technology. The graphic shows a reduction of up to 45dB in background noise, ensuring clear voice call clarity.

Maintenance and Care

Charging

The earbuds provide 6-8 hours of playback on a single charge. The charging case extends this to up to 42 hours of total playtime. Recharge the case using the provided USB-C cable. The LED display on the case indicates the battery level of both earbuds and the case itself.



Image: The Aowoka IT510 earbuds and their charging case, highlighting the long battery life of 42 hours with the case and 7 hours per single charge. The image also indicates USB-C fast charging capability.

Water Resistance (IPX7)

The Aowoka IT510 earbuds are IPX7 waterproof, protecting them from sweat and rain. This makes them suitable for workouts and outdoor activities. However, they are not designed for swimming or prolonged submersion in water.



Image: A pair of Aowoka IT510 earbuds surrounded by splashing water, visually representing their IPX7 waterproof rating. This indicates protection against sweat and rain, making them ideal for active use.

Cleaning

Regularly clean your earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals. Remove eartips and clean them separately with mild soap and water if necessary, ensuring they are completely dry before reattaching.

Comfort and Fit

The ergonomic design ensures a comfortable and secure fit, preventing ear pain during extended use. Each earbud weighs only 3.8 grams, making them ultralight and easy to carry. Experiment with the different sized eartips provided to find the best fit for your ears.



Image: An Aowoka IT510 earbud floating with a feather, symbolizing its ultralight weight of 3.8g. The image also shows the earbud comfortably fitted in an ear and a selection of silicone ear caps (S, M, L) for a customizable fit.



Image: A woman wearing an Aowoka IT510 earbud, illustrating its comfortable and secure fit. The image also displays different sizes of eartips (L, M, S) to ensure a personalized and stable fit for all users.

Troubleshooting

- **Earbuds not pairing:** Ensure both earbuds are charged and removed from the case. Turn off and on your device's Bluetooth. If issues persist, try resetting the earbuds (refer to manufacturer's website for specific reset instructions if not in manual).
- **Only one earbud working:** Place both earbuds back into the charging case, close the lid, wait a few seconds, then open and remove them. This often re-syncs them.
- **Poor sound quality:** Ensure earbuds are clean and properly seated in your ears. Check your device's volume and audio settings. Move closer to your connected device to avoid interference.
- **Charging issues:** Ensure the USB-C cable is securely connected to both the case and the power source. Try a different cable or power adapter. Clean the charging contacts on both the earbuds and the case.

Specifications

Feature	Specification
Model Number	IT510
Bluetooth Version	5.3
Wireless Range	Up to 15 meters
Earbud Playtime	6-8 Hours
Total Playtime (with case)	Up to 42 Hours
Charging Time (Case)	Approx. 1.5 Hours (USB-C)
Water Resistance Rating	IPX7
Driver Size	14.2 mm
Microphones	4 HD Microphones with ENC
Earbud Weight (each)	3.8 grams

Feature	Specification
Charging Case Weight	23.85 grams
Compatible Devices	Mobile phones, laptops, tablets, desktops
Frequency Range	20 Hz - 20,000 Hz

Safety Information

- Do not disassemble or modify the product.
- Keep away from extreme temperatures and direct sunlight.
- Avoid exposing to fire or high heat.
- Do not use while driving or in situations where inability to hear ambient sounds could be dangerous.
- Dispose of the product responsibly according to local regulations.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Aowoka website. Please retain your proof of purchase for warranty claims.

© 2024 Aowoka. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DL8HH4D9

More documents and user manuals: **https://manuals.plus/**