Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Catitru BX17

Catitru BX17 Wireless Earbuds User Manual

Model: BX17

Introduction

Thank you for choosing the Catitru BX17 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with extended battery life, comfortable fit, and robust features for an active lifestyle. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Image: Catitru Sports Headphones designed for running and gym, highlighting key features like 80 hours playtime, Bluetooth 5.3, comfortable wear, HiFi sound, IPX7 waterproof, and physical buttons.

What's in the Box



Image: A flat lay showing the contents of the product box, including the user manual, Type-C cable, charging case, wireless earbuds, and eartips in three sizes.

- Wireless Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- User Manual
- Eartips (S, M, L sizes)

Product Overview



Image: A rose gold pair of Catitru BX17 wireless earbuds with their charging case open, showing the digital power display.

The Catitru BX17 earbuds feature an ergonomic over-ear hook design for secure and comfortable wear, especially during physical activities. The charging case includes a digital LED display to show battery levels.



Image: A person working out while wearing the earbuds, with insets showing the ergonomic design, flexible earhook, and different eartip sizes (L/M/S). The image also highlights the IPX7 waterproof rating.

These earbuds are IPX7 waterproof, making them resistant to sweat and splashes, ideal for sports, workouts, and running. They come with three sizes of ear tips (S, M, L) to ensure a perfect and comfortable fit for various ear sizes.

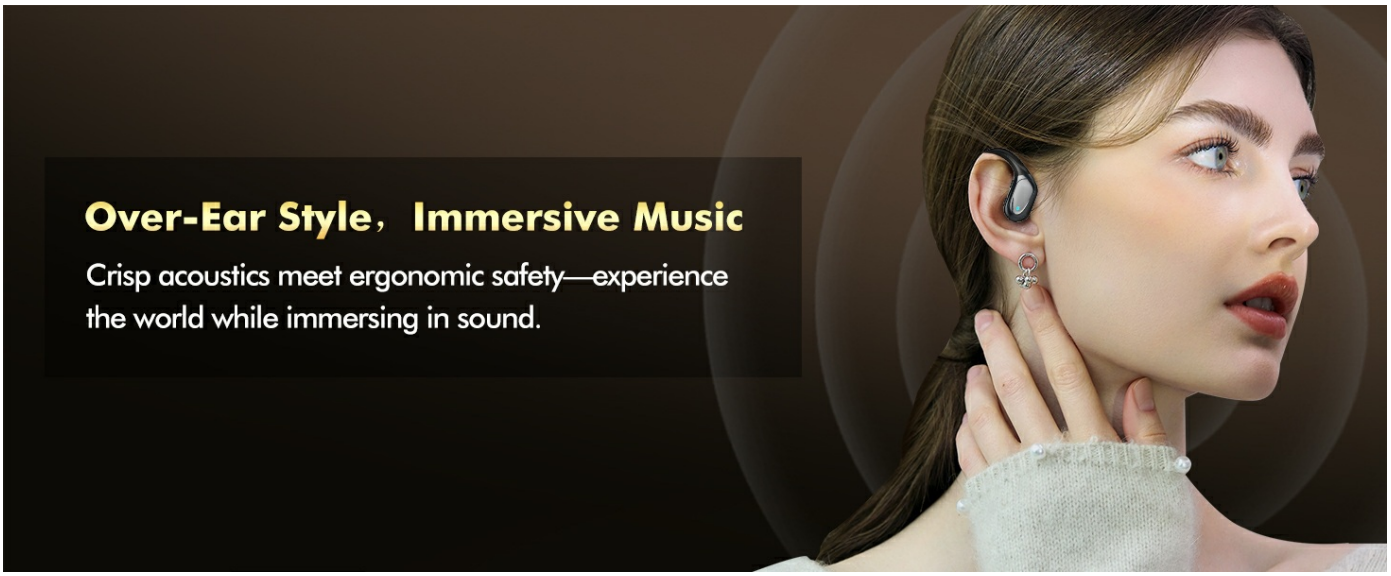


Image: A woman wearing an earbud, illustrating the over-ear style and emphasizing immersive music experience with crisp acoustics and ergonomic safety.

Setup

1. Charging the Earbuds and Case



Image: The earbuds in their charging case, illustrating 1.5 hours fast charging, 15 hours single charge, and 60 hours from the charging case, with a Type-C port shown.



Image: Earbuds in the charging case, emphasizing up to 80 hours of total listening time with 15 hours from a single charge.



Image: A man looking at the charging case, which displays the battery percentage for both the case and individual earbuds.

1. Before first use, fully charge the earbuds and the charging case.
2. Place the earbuds into the charging case. Ensure they are correctly seated.
3. Connect the Type-C charging cable to the charging port on the case and plug the other end into a USB power source (e.g., wall adapter, computer).
4. The LED digital display on the charging case will show the battery percentage of the case and the charging status of each earbud.
5. A full charge provides up to 15 hours of playback for the earbuds, and the charging case can provide an additional 8 full charges, totaling up to 80 hours of listening time.

2. Bluetooth Pairing



Image: A graphic illustrating Bluetooth 5.3 technology with a smartphone showing the earbud pairing process.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "BX17" in the list of available Bluetooth devices.
4. Select "BX17" to connect. Once connected, you will hear a confirmation prompt.
5. After the first successful connection, the earbuds will automatically reconnect to your last paired device when the charging case is opened.

3. Fitting the Earbuds



Image: A woman demonstrating how to wear the earbuds, with three steps: 1. Grab earbuds and pick best fit eartips. 2. Pop into ear canal and twist until hook is snug. 3. Adjust to comfortable angle.

1. Choose the correct size of eartips (S, M, L) that provide the best seal and comfort for your ears.
2. Gently insert the earbud into your ear canal.
3. Rotate the earbud slightly and adjust the flexible earhook over your ear until it feels snug and secure.
4. Ensure a proper seal for optimal sound quality and noise cancellation.

Operating Instructions

Touch Controls



Image: A diagram showing the earbud with various touch control functions: Answer/End Call, Voice Assistant, Previous Track, Volume+, Reject Call, Play/Pause, Next Track, Volume-.



Image: A close-up of the earbud highlighting its physical button design and listing the same touch control functions as the previous image.

Function	Action
Play/Pause	One tap on either L/R earbud
Next Track	Long press on Right earbud
Previous Track	Long press on Left earbud
Volume Up	One tap on Right earbud
Volume Down	One tap on Left earbud
Answer/End Call	One tap on either L/R earbud
Reject Call	Long press on either L/R earbud
Activate Voice Assistant	Long press on either L/R earbud

Sound Quality and Noise Cancellation



Image: An exploded view of an earbud showing its internal components, highlighting the 14.3mm Graphene Diaphragm for Hi-Fi stereo sound.

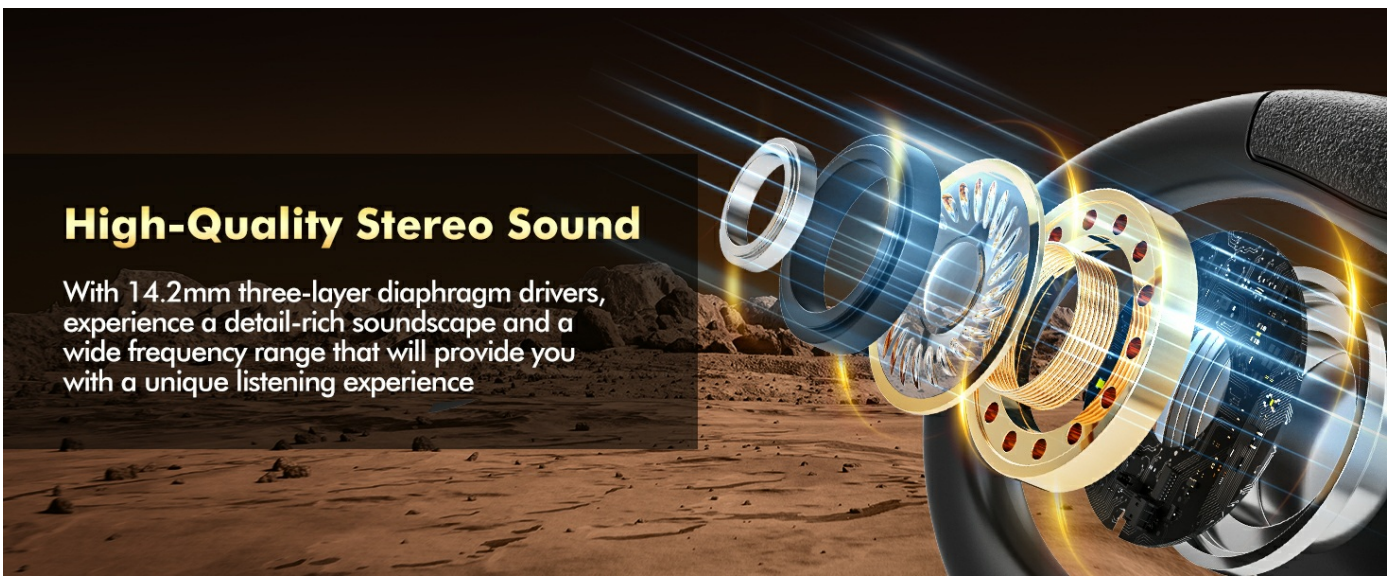


Image: A detailed view of the earbud's internal driver, emphasizing 14.2mm three-layer diaphragm drivers for high-quality stereo sound.



Image: Two earbuds with sound waves, indicating the ENC noise-canceling microphone feature for clear calls.

The BX17 earbuds are equipped with strong 14.3mm speaker driving units and an in-ear acoustic structure, producing powerful bass and clear treble. The unique acoustic design ensures stable sound and penetrating power. The ENC (Environmental Noise Cancellation) microphone eliminates disruptive background noise for clear calls, even in noisy environments.

Maintenance

To ensure the longevity and optimal performance of your Catitru BX17 Wireless Earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Eartips:** Remove and clean the eartips periodically with mild soap and water. Ensure they are completely dry before reattaching them to the earbuds.
- **Charging Ports:** Keep the charging contacts on the earbuds and inside the case clean and free of debris. Use a dry cotton swab if necessary.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Exposure:** While IPX7 waterproof, avoid prolonged submersion in water. Dry the earbuds thoroughly if they get wet before placing them back in the charging case.

Troubleshooting

If you encounter any issues with your Catitru BX17 Wireless Earbuds, please refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	◦ Ensure earbuds are fully charged. ◦ Turn off Bluetooth on your device, then turn it back on. ◦ Forget/delete "BX17" from your device's Bluetooth list and try pairing again. ◦ Place earbuds back in the case, close, wait 5 seconds, then open to re-enter pairing mode.

Problem	Possible Solution
Only one earbud working	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, and then open it again. ◦ Try resetting the earbuds (refer to manual for specific reset instructions if available, otherwise, a full charge and re-pairing often resolves this).
Earbuds not charging	◦ Ensure the charging cable is securely connected to both the case and the power source. ◦ Check if the charging contacts on the earbuds and in the case are clean. ◦ Try a different charging cable or power adapter.
Poor sound quality	◦ Ensure the eartips provide a proper seal in your ear. Try different sizes. ◦ Clean the eartips and earbud nozzles. ◦ Ensure your device is within the Bluetooth range (up to 10 meters/33 feet). ◦ Check your device's audio settings.

SPECIFICATIONS

Feature	Detail
Model Name	BX18 (Note: Product listing shows BX17, but specifications list BX18)
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.3
Audio Driver Type	Dynamic Driver (14.3mm)
Noise Control	Active Noise Cancellation (ENC Mic)
Water Resistance Level	IPX7 Waterproof
Control Method	Touch
Earbud Playtime (Single Charge)	Up to 15 hours
Total Playtime (with Charging Case)	Up to 80 hours
Charging Port	Type-C
Product Dimensions	1.54 x 2.76 x 1.1 inches
Item Weight	5 ounces
Material	Plastic
Color	Rose Gold

Warranty and Support

For warranty information and customer support, please refer to the contact details provided on the product packaging or the official Catitru website. Keep your purchase receipt as proof of purchase for any warranty claims.

Usage Scenarios

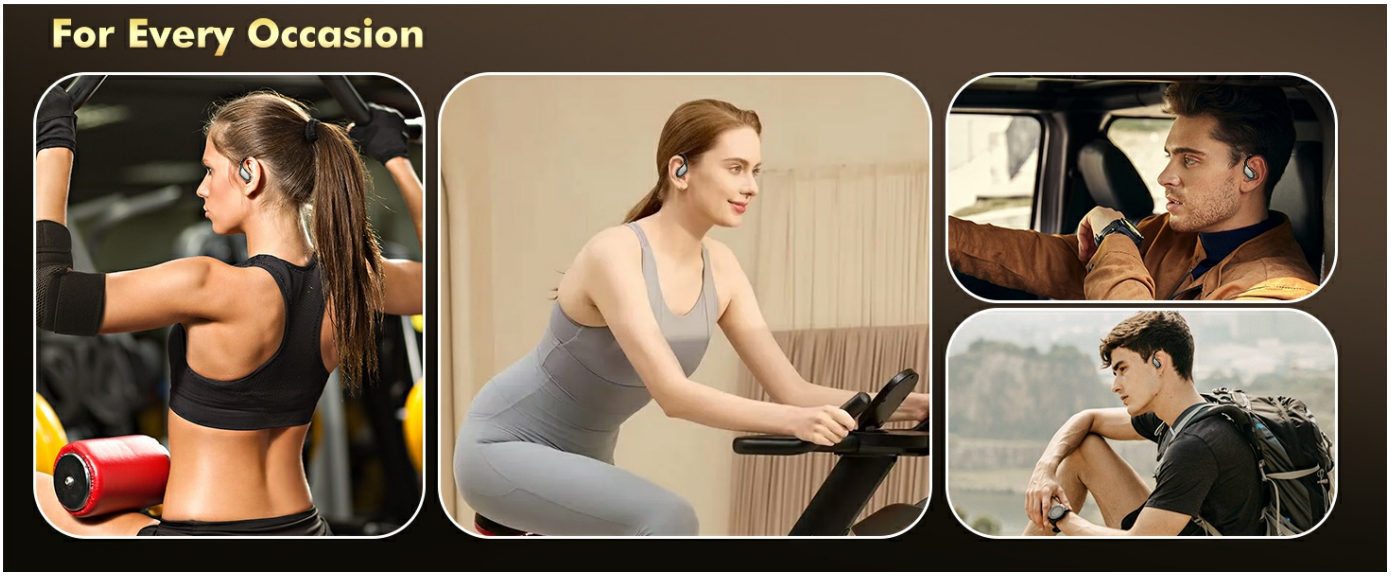


Image: A collage of people using the earbuds in various settings: gym, cycling, driving, and hiking, demonstrating their versatility.

The Catitru BX17 Wireless Earbuds are versatile and suitable for a wide range of activities, including:

- Sports and Workouts (running, gym, cycling)
- Daily Commute
- Office Work
- Travel
- Leisure and Relaxation

© 2024 Catitru. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DLB4VRZK

More documents and user manuals: **https://manuals.plus/**