POOEKEN A90B

POOEKEN Automatic Pet Feeder User Manual

Model: A90B

Introduction

This user manual provides detailed instructions for the setup, operation, and maintenance of your POOEKEN Automatic Pet Feeder. Designed for convenience and reliability, this feeder ensures your pet receives meals on schedule, even when you're away. It is suitable for house cats, small dogs, and other small animals.

Key Features

- **Programmable Feeding:** Easily schedule up to 6 meals per day, with 1-13 servings per meal, ensuring precise portion control for your pet.
- **Dual Power Options:** Operates via a 5V adapter USB power cable or 3D-cell batteries (not included) for uninterrupted feeding during power outages.
- **4L Large Capacity:** Provides a substantial food supply, reducing the frequency of refills, ideal for busy pet owners.
- **Secure Lid Lock:** Features a double-lock lid and a well-designed sealing structure to prevent pets from accessing food prematurely and eliminate leakage.
- **Voice Recording:** Record a 10-second message to call your pet to eat, providing a familiar and comforting sound at meal times.
- **Anti-Jam Design:** Engineered to prevent food blocking, ensuring smooth and consistent food dispensing.

Product Overview



Figure 1: POOEKEN Automatic Pet Feeder (4L model) with a cat.



Figure 2: Product dimensions (approx. 30cm height, 31cm width, 7.4cm top diameter).



Figure 3: Illustration of the individual meal plan feature, showing timed feeding schedules.



Figure 4: The 10-second voice recording feature, allowing you to call your pet to eat.

Setup Guide

1. **Unpack Components:** Carefully remove the feeder, feeding bowl, power cable, and manual from the packaging.
2. **Assemble Feeder:**
    - Take out all accessories and the outer containers.

- Turn the housing and insert it below, ensuring it is aimed at the correct position for secure fit.
- Place the feeding bowl and ensure it is securely stuck at the food exit.

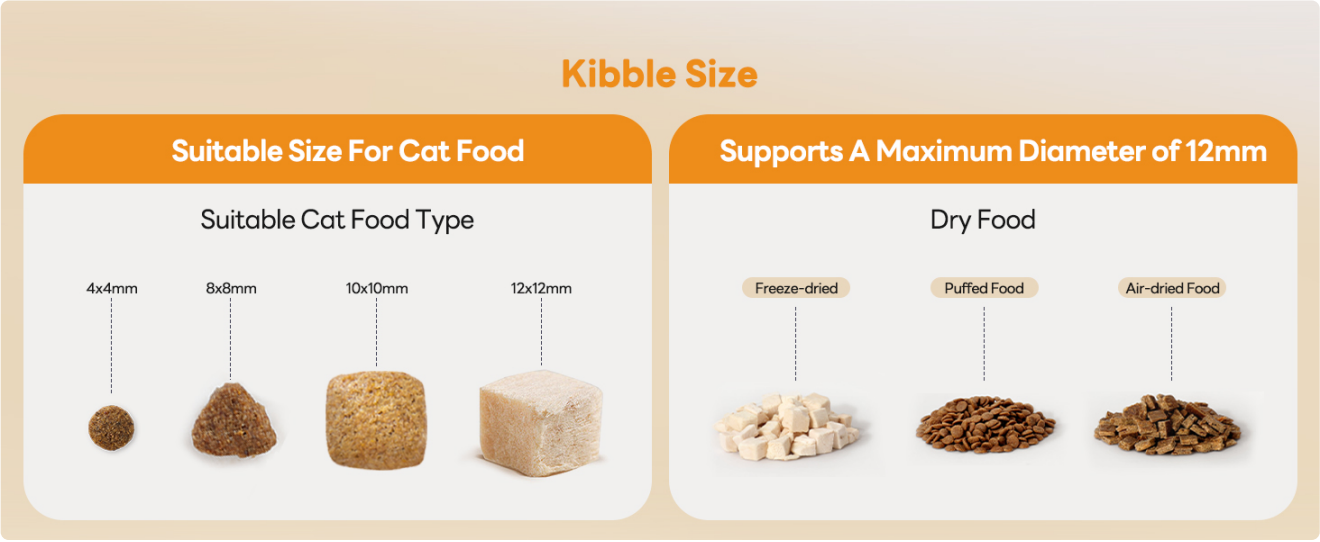


Figure 5: Visual guide for assembling the feeder components.

3. **Install Desiccant Bag:** Put the drying bag (if included) in the corresponding position within the lid to keep food fresh.



Figure 6: Proper placement of the desiccant bag for food freshness.

4. **Power Connection:**
    - Connect the feeder using the provided 5V adapter USB power cable.
    - For backup or portable use, insert 3D-cell batteries (not included) into the battery compartment at the bottom of the unit. This ensures continued operation during power outages.



Figure 7: The feeder operating with wired power, demonstrating emergency power functionality.

5. **Add Food:** Fill the food container with dry pet food. Ensure the kibble size is between 2-12mm for optimal dispensing.



Figure 8: Guide to suitable kibble sizes for the feeder.

6. **Additional Resources:** For visual setup guides, you can refer to these external videos:Setup Guide 1 and Setup Guide 2.

Operating Instructions

Setting Time and Meals

The feeder features simple button controls for programming. Refer to the quick programming guide sticker on the unit or the detailed instructions in the included paper manual for precise steps on setting the current time, meal times, and portion sizes.

- **Set Current Time:** Press the 'SET' button to enter time setting mode. Use the up/down arrows to adjust hours and minutes.
- **Program Meals:** The feeder supports 1-6 meals per day. For each meal, you can set the specific time and the number of servings (1-13 portions).
- **Voice Recording:** Press and hold the voice recording button for 3 seconds to begin recording your 10-second message. Release to save. This message will play automatically at each scheduled feeding time.
- **Manual Feeding:** Press the manual feed button to dispense one serving immediately.



Figure 9: Customization options for feeding times and portion amounts.

Maintenance

- **Cleaning:** The food container and feeding bowl are removable for easy cleaning. Hand wash these components only.
- **Base Unit:** The base part of the feeder, which contains electronic components, cannot be soaked in water. Wipe it clean with a damp cloth only.
- **Food Freshness:** Regularly check and replace the desiccant bag to maintain food freshness and prevent moisture buildup.



Figure 10: Illustration of the feeder's detachable parts for cleaning.

Troubleshooting

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food hopper empty. Kibble size too large or irregular. Food jam. Incorrect programming.	Refill food hopper. Ensure kibble size is 2-12mm. Clear any obstructions in the dispensing mechanism. Verify meal times and portion settings.
Flashing red light.	Insufficient energy (low battery or power issue).	Check power cable connection or replace batteries.
Pet accessing food outside scheduled times.	Lid not securely locked.	Ensure the double-lock lid is properly secured.
Voice recording not playing.	Recording not saved or corrupted.	Re-record the voice message, ensuring it saves correctly.

Specifications

- **Model:** A90B
- **Capacity:** 4 Liters

- **Dimensions (LxWxH):** 4 x 4 x 10 inches (Product); 8.58 x 7.09 x 7.05 inches (Package)
- **Weight:** 1.76 pounds (0.8 Kilograms)
- **Material:** Acrylonitrile Butadiene Styrene
- **Power Supply:** 5V USB adapter (included), 3D-cell batteries (not included)
- **Feeding Schedule:** 1-6 meals per day
- **Portion Size:** 1-13 servings per meal
- **Voice Recording:** 10 seconds
- **Recommended Kibble Size:** 2-12mm
- **Target Species:** Cats, Small Dogs, Small Animals
- **Care Instructions:** Hand wash removable parts; wipe base unit only.
- **Country of Origin:** China
- **First Available:** November 6, 2024

Warranty and Support

For warranty information and customer support, please refer to the contact details provided with your product packaging or visit the official POOEKEN website. Keep your purchase receipt for any warranty claims.
For further assistance, you may also contact the seller directly through the platform where the product was purchased.

© 2025 POOEKEN. All rights reserved.