JVC SI43FRF

JVC 43-inch Roku FHD TV User Manual

Model: SI43FRF

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your JVC 43-inch Roku FHD TV, Model SI43FRF. Please read this manual thoroughly before using your television to ensure proper operation and to maximize your viewing experience. Keep this manual for future reference.

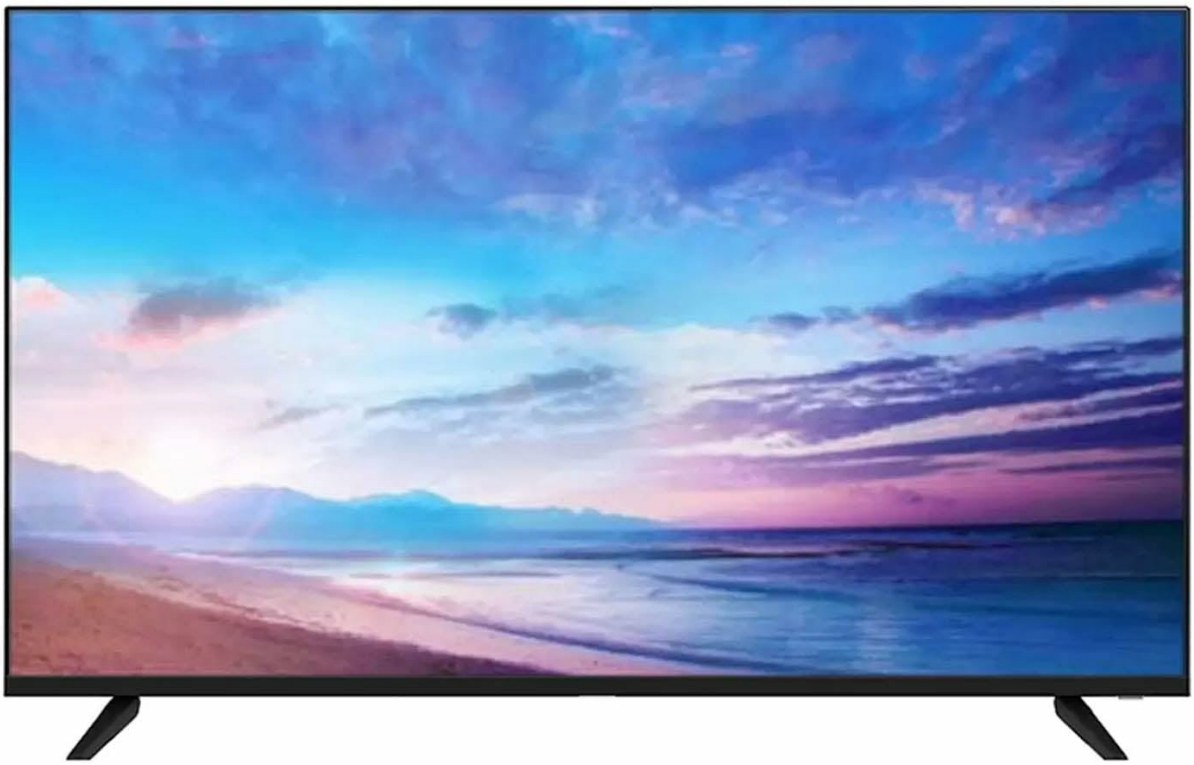


Image: Front view of the JVC 43-inch Roku FHD TV. The screen displays a colorful landscape with a blue sky, clouds, distant mountains, and a beach with ocean waves. The television has a slim black bezel and two black stand feet at the bottom corners.

Important Safety Information

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.

- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

Package Contents

Verify that all items listed below are included in your package:

- JVC 43-inch Roku FHD TV (Model SI43FRF)
- Remote Control
- Power Cord
- TV Stand Feet (2)
- Screws for TV Stand Feet
- User Manual (this document)

Setup

1. Attaching the TV Stand

If you are not wall-mounting the TV, attach the stand feet as follows:

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand foot with the corresponding screw holes on the bottom of the TV.
3. Secure each foot with the provided screws using a screwdriver. Ensure they are firmly attached.

2. Connecting Devices

Your JVC Roku TV offers versatile connectivity options:

- **HDMI Ports (3):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HDMI-enabled devices.
- **USB Port (1):** Connect USB drives for media playback.
- **AV Input:** Connect older devices using composite video and stereo audio cables.
- **Antenna/Cable Input:** Connect an antenna for over-the-air broadcasts or a cable TV connection.
- **Optical Audio Output:** Connect to a soundbar or home theater system for digital audio.
- **Headphone Jack:** Connect headphones for private listening.

Ensure all connections are secure before powering on the TV.

3. Initial Power-On and Roku Setup

1. Plug the power cord into the TV and then into a wall outlet.
2. Press the Power button on the remote control or on the TV.
3. Follow the on-screen instructions to complete the initial Roku TV setup. This includes:
    - Selecting your language.
    - Connecting to your Wi-Fi network.
    - Activating your Roku account (a free account is required).
    - Scanning for local channels (if an antenna is connected).

Operating Your JVC Roku TV

1. Remote Control Functions

Familiarize yourself with the Roku TV remote control:

- **Power:** Turns the TV on or off.
- **Home:** Returns to the Roku Home screen.
- **Directional Pad (D-Pad):** Navigates menus and selects items.
- **OK/Select:** Confirms selections.
- **Back:** Returns to the previous screen.
- **Volume Up/Down:** Adjusts the volume.
- **Mute:** Mutes or unmutes the sound.
- **Instant Replay:** Replays the last few seconds of video.
- **Star (*):** Accesses options for the selected item.
- **Play/Pause, Fast Forward, Rewind:** Media playback controls.
- **Channel Shortcuts:** Dedicated buttons for popular streaming services (e.g., Netflix, Prime Video, YouTube).

2. Navigating the Roku Home Screen

The Roku Home screen provides access to all your entertainment options:

- **Streaming Channels:** Your installed apps like Netflix, YouTube, Prime Video.
- **Live TV:** Access to over-the-air channels (if an antenna is connected).
- **Inputs:** Select connected devices (HDMI 1, HDMI 2, USB, AV).
- **Settings:** Configure TV and Roku system settings.

3. Using Streaming Services

To use streaming services:

1. From the Home screen, select the desired streaming channel (e.g., Netflix).
2. If prompted, sign in with your account credentials.
3. Browse or search for content and begin playback.

4. Adjusting Picture and Sound Settings

Access picture and sound settings via the **Star (*)** button on the remote during playback or through the **Settings** menu on the Home screen.

- **Picture Modes:** Standard, Movie, Vivid, Sports, Low Power, Custom.
- **Sound Modes:** Standard, Speech, Large Room, Night, Custom.
- **Dolby Audio:** Enabled by default for enhanced audio experience.

Maintenance

Cleaning Your TV

To maintain the appearance and performance of your TV:

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with water or a

mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.

- **Cabinet:** Wipe the cabinet and frame with a soft, dry cloth.
- **Do Not Use:** Abrasive cleaners, waxes, or solvents (alcohol, benzene, thinners) as they may damage the finish.

Software Updates

Your Roku TV automatically checks for software updates when connected to the internet. Ensure your TV is connected to Wi-Fi for optimal performance and access to the latest features and security patches.

- To manually check for updates, go to **Settings > System > Software update**

Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into the TV and a working electrical outlet. Try a different outlet.
No picture, but sound is present	Check the input source. Ensure the connected device is powered on and functioning correctly. Try a different HDMI cable.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio output settings (e.g., internal speakers, external audio system).
Remote control not working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting your router and the TV.
Apps are slow or freezing	Check your internet connection speed. Restart the TV by unplugging it for 30 seconds and plugging it back in. Remove and re-add the problematic app.

Specifications

Feature	Detail
Model Name	SI43FRF
Screen Size	43 inches
Display Technology	LED
Resolution	Full HD (1920 x 1080p)
Refresh Rate	60 Hz
Operating System	Roku TV (Linux-based)
Audio Technology	Dolby Audio, 8W Output

Feature	Detail
HDMI Ports	3
USB Ports	1
Aspect Ratio	16:9
Dimensions (W x D x H)	106 x 12 x 64 cm (approx. 41.7 x 4.7 x 25.2 inches)
Weight	8.02 kg (approx. 17.68 lbs)
Supported Internet Services	Netflix, YouTube, Prime Video, and more via Roku Channel Store

Warranty and Support

Warranty Information

Your JVC Roku TV is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.
Extended warranty options may be available from third-party providers. For details, please check with your retailer or refer to the product page where you purchased the TV.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact JVC customer support. Contact information can typically be found on the JVC official website or on the warranty card.
When contacting support, please have your TV's model number (SI43FRF) and serial number ready. The serial number is usually located on a sticker on the back of the TV.

© 2025 JVC. All rights reserved. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I wall mount my JVC 43-inch Roku QLED FHD TV (Model SI43QRF / SI43FRF) if there are no visible screws on the back?

To wall mount your JVC 43-inch Roku TV (Model SI43QRF / SI43FRF), you will need to locate the VESA mounting holes on the back of the television. If you do not see screws or...

Read full answer