Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Powaert N7S1101

Powaert N7S Cordless Vacuum Cleaner User Manual

Model: N7S1101

Introduction

The Powaert N7S Cordless Vacuum Cleaner is a versatile 6-in-1 lightweight stick vacuum designed for efficient cleaning across various surfaces. Featuring powerful suction, a long-lasting 6-cell 2200mAh rechargeable battery, and a highly efficient filtration system, it ensures a thorough and convenient cleaning experience for pet hair, carpets, and hard floors.



Figure 1: Powaert N7S Cordless Vacuum Cleaner and included accessories.



Figure 2: Key features of the N7S Cordless Stick Vacuum Cleaner.

What's in the Box

Your Powaert N7S Cordless Vacuum Cleaner package includes the following components:

- Main motor with battery
- Motorized brush head
- Wall mount & screws
- Power adapter
- Stiff roller
- Retractable metal tube
- 2-in-1 brush
- Long crevice tool
- Cleaning gadget

- Extra Filter
- User manual
- Quick Start Guide

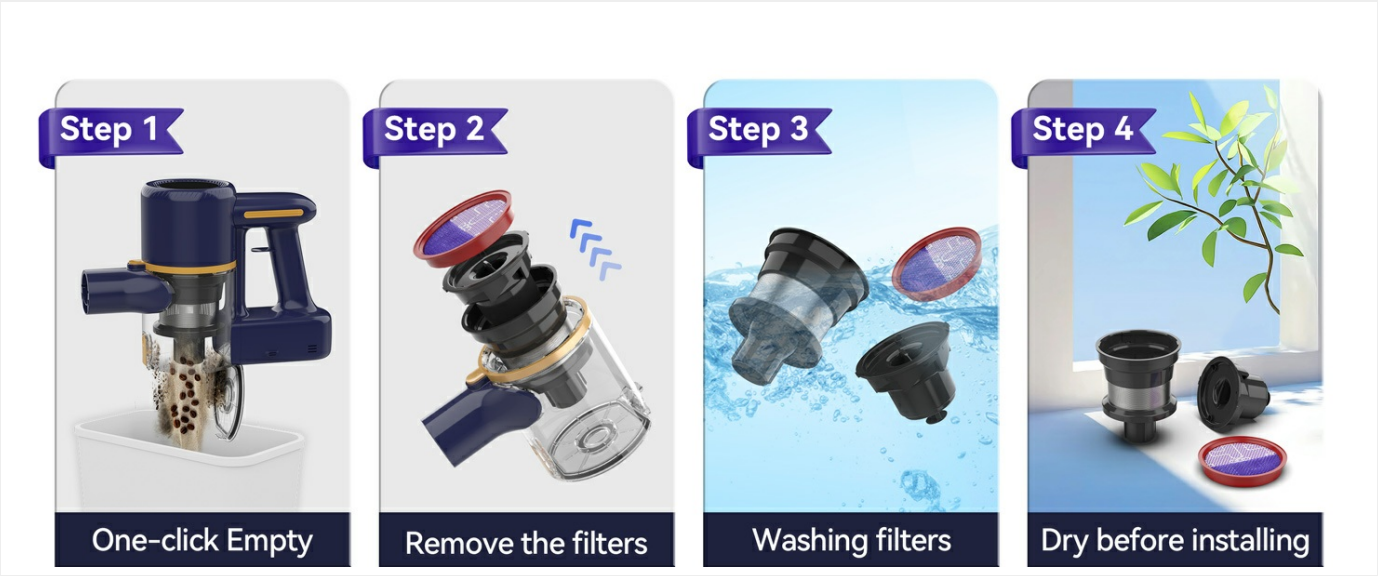


Figure 3: All components included in the Powaert N7S package.

Setup

Assembly

To assemble your Powaert N7S vacuum cleaner:

1. Attach the retractable metal tube to the main motor unit. Ensure it clicks securely into place.
2. Connect the motorized brush head to the other end of the metal tube. You can choose between the pre-installed soft roller for hard surfaces or the stiff roller for carpets.
3. For handheld use, attach the 2-in-1 brush or long crevice tool directly to the main motor unit.

Charging

Before first use, fully charge the vacuum cleaner. The 6-cell 2200mAh Lithium-Ion battery provides approximately 40 minutes of runtime.

- Connect the power adapter to the charging port on the main motor unit.
- You can charge the vacuum while it is mounted on the wall mount or as a standalone unit.



Figure 4: Convenient storage and charging options for the vacuum.

Your browser does not support the video tag.

Video 1: Demonstrates two ways to charge the cordless stick vacuum cleaner.

Operating Instructions

Power On/Off and Modes

To operate the vacuum, simply press the power button. The vacuum features two power levels for different cleaning needs. Press the power button once to turn on, and again to switch between power levels. Press a third time to turn off.

Versatile Cleaning

The N7S is designed for 6-in-1 versatility, allowing you to clean various surfaces and hard-to-reach areas:

- **Stick Vacuum Mode:** Use with the metal tube and motorized brush head for floors (hardwood, tile, marble, low-pile carpets). The LED lights on the brush head illuminate dust in dark areas.

- **Handheld Vacuum Mode:** Detach the metal tube and attach the 2-in-1 brush or long crevice tool directly to the main motor for cleaning upholstery, car interiors, keyboards, and tight spaces.
- **Adjustable Wand:** The retractable metal tube allows for adjustable height, making it suitable for cleaning high ceilings, curtains, or under furniture.



Figure 5: The Powaert N7S offers versatile cleaning options for various surfaces.



Figure 6: The flexible motorized brush with LED lights for enhanced visibility and maneuverability.



Figure 7: Choose between soft and stiff rollers for optimal cleaning on different floor types.



Figure 8: The adjustable wand allows for comfortable cleaning at various heights.

Your browser does not support the video tag.

Video 2: Demonstrates the multi-purpose use of the Powaert 6-in-1 cordless vacuum cleaner.

Your browser does not support the video tag.

Video 3: Shows the Powaert Cordless Vacuum Cleaner effectively cleaning pet hair, carpets, and hardwood floors.

Maintenance

Emptying the Dust Cup

The dust cup is designed for easy, one-click emptying. Simply hold the vacuum over a trash bin and press the release button to dispose of collected debris.



Figure 9: One-click dust cup emptying for convenient disposal.

Cleaning and Replacing Filters

The vacuum features a 99% efficient filtration system with reusable and washable filters. Regular cleaning ensures optimal performance and extends the life of your vacuum.

1. Detach the main motor unit from the dust cup.
2. Remove the filters and strainer from the dust cup.
3. Wash the filters under running water. Ensure they are completely dry before reassembling. An extra filter is included for your convenience.

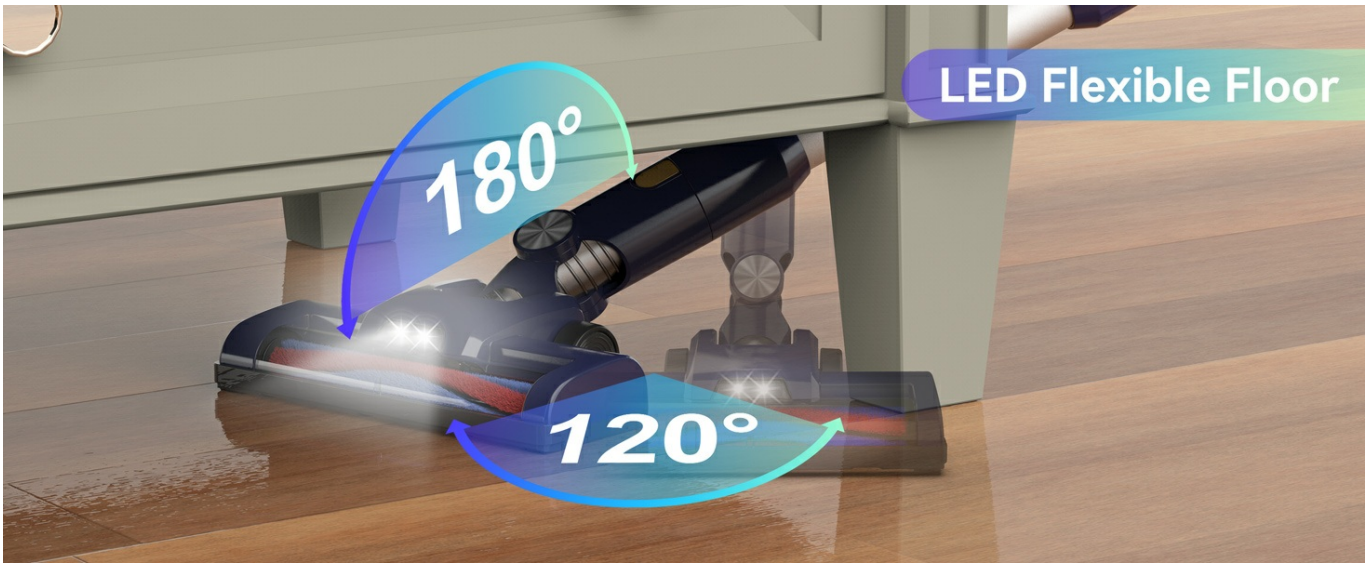


Figure 10: Step-by-step guide for cleaning the vacuum's filters.

Your browser does not support the video tag.

Video 4: Instructions on how to detach the main motor and replace the washable filter on the N7S.

Cleaning the Brush Head

Periodically check the motorized brush head for tangled hair or debris. Use the included cleaning gadget to remove any obstructions and ensure smooth operation.

Your browser does not support the video tag.

Video 5: Guide on how to clean or replace the brush head of the N7S vacuum.

Troubleshooting

If you encounter any issues with your Powaert N7S Cordless Vacuum Cleaner, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Charge the battery fully.
Reduced suction power.	Dust cup is full. Filters are clogged. Brush head is tangled with hair/debris.	Empty the dust cup. Clean or replace the filters. Clean the brush head.
Vacuum stops unexpectedly.	Overheating due to clogged filters or brush.	Turn off the vacuum, clear any blockages, and allow it to cool down before resuming use.
Brush head not spinning.	Obstruction in the brush roll.	Remove any tangled hair or debris from the brush roll.

If the problem persists after trying these steps, please contact Powaert customer support for further assistance.

Specifications

Feature	Detail
Brand	Powaert
Model Name	N7S1101
Item Weight	7.98 pounds
Product Dimensions	17.3"L x 13.4"W x 7.7"H
Battery Type	Lithium-Ion (6-cell 2200mAh)
Runtime	Up to 40 minutes
Dust Cup Capacity	1 Liters
Noise Level	65 dB
Filter Type	Reusable & Washable Filter
Special Features	Cordless, High-efficiency Filtration, Rechargeable Battery, Versatile Cleaning, Powerful Suction, 6-in-1 Lightweight, LED Motorized Brush with V-shape Roller, Adjustable Wand

Warranty and Support

For warranty information, technical support, or any inquiries regarding your Powaert N7S Cordless Vacuum Cleaner, please contact Powaert customer service. Refer to the contact details provided in your Quick Start Guide or visit the official Powaert website for assistance.

© 2024 Powaert. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DLNWYYT1

More documents and user manuals: **https://manuals.plus/**