Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Vonyx MEG075

Vonyx MEG075 Megaphone User Manual

Model: MEG075

Introduction

Thank you for purchasing the Vonyx MEG075 Megaphone. This powerful and versatile megaphone is designed for clear and loud voice amplification, suitable for various outdoor events, public announcements, and emergency situations. It features Bluetooth connectivity, a recording function, a siren, and multiple playback options. Please read this manual carefully before using the device to ensure proper operation and to maximize its lifespan.

What's in the Box

- Vonyx MEG075 Megaphone
- Detachable Microphone
- Rechargeable Li-ion Battery
- Shoulder Strap
- User Manual (this document)

Safety Instructions

To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions:

- Do not expose the megaphone to rain or moisture.
- Do not open the casing. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Keep the megaphone away from direct sunlight, heat sources, and extreme temperatures.
- Do not point the megaphone directly at people's ears at close range when operating at high volume.
- Use only the specified battery type or power source.
- Ensure the battery is inserted with correct polarity.
- Remove batteries if the device will not be used for an extended period.

Setup

Battery Installation

The Vonyx MEG075 can be powered by its rechargeable Li-ion battery or 8 x C-cell batteries (not included).

1. Locate the battery compartment on the megaphone.
2. Open the battery compartment cover.
3. Insert the rechargeable Li-ion battery, ensuring it clicks into place, or insert 8 C-cell batteries according to the polarity markings (+/-).
4. Close the battery compartment cover securely.



Image: The megaphone's battery compartment is located at the rear, near the handle. The image also illustrates the product dimensions (36cm height, 21.5cm speaker diameter) and highlights the included Li-ion battery with a built-in charger.

Microphone Connection

Connect the coiled cable of the detachable microphone to the microphone input port on the megaphone handle. Ensure a secure connection.



Image: The Vonyx MEG075 Megaphone shown with its detached microphone, connected via a coiled cable. This view provides an overall look at the product's design and components.

Attaching the Shoulder Strap

Attach the provided shoulder strap to the designated loops on the megaphone for easy portability and hands-free operation.

Operating Instructions

Power On/Off and Volume Control

To power on the megaphone, turn the volume knob clockwise. To power off, turn it counter-clockwise until it clicks. Adjust the volume by rotating the knob to your desired level.



Image: The Vonyx MEG075 Megaphone, illustrating its variable volume control feature with concentric circles representing sound waves emanating from the horn.

Voice Amplification

Hold the microphone close to your mouth and speak clearly. Ensure the volume is adjusted appropriately to avoid feedback.

Siren Function

Press the "Siren" button on the microphone to activate the integrated siren. Press it again to turn off the siren. This function is ideal for attracting immediate attention in emergencies or during events.

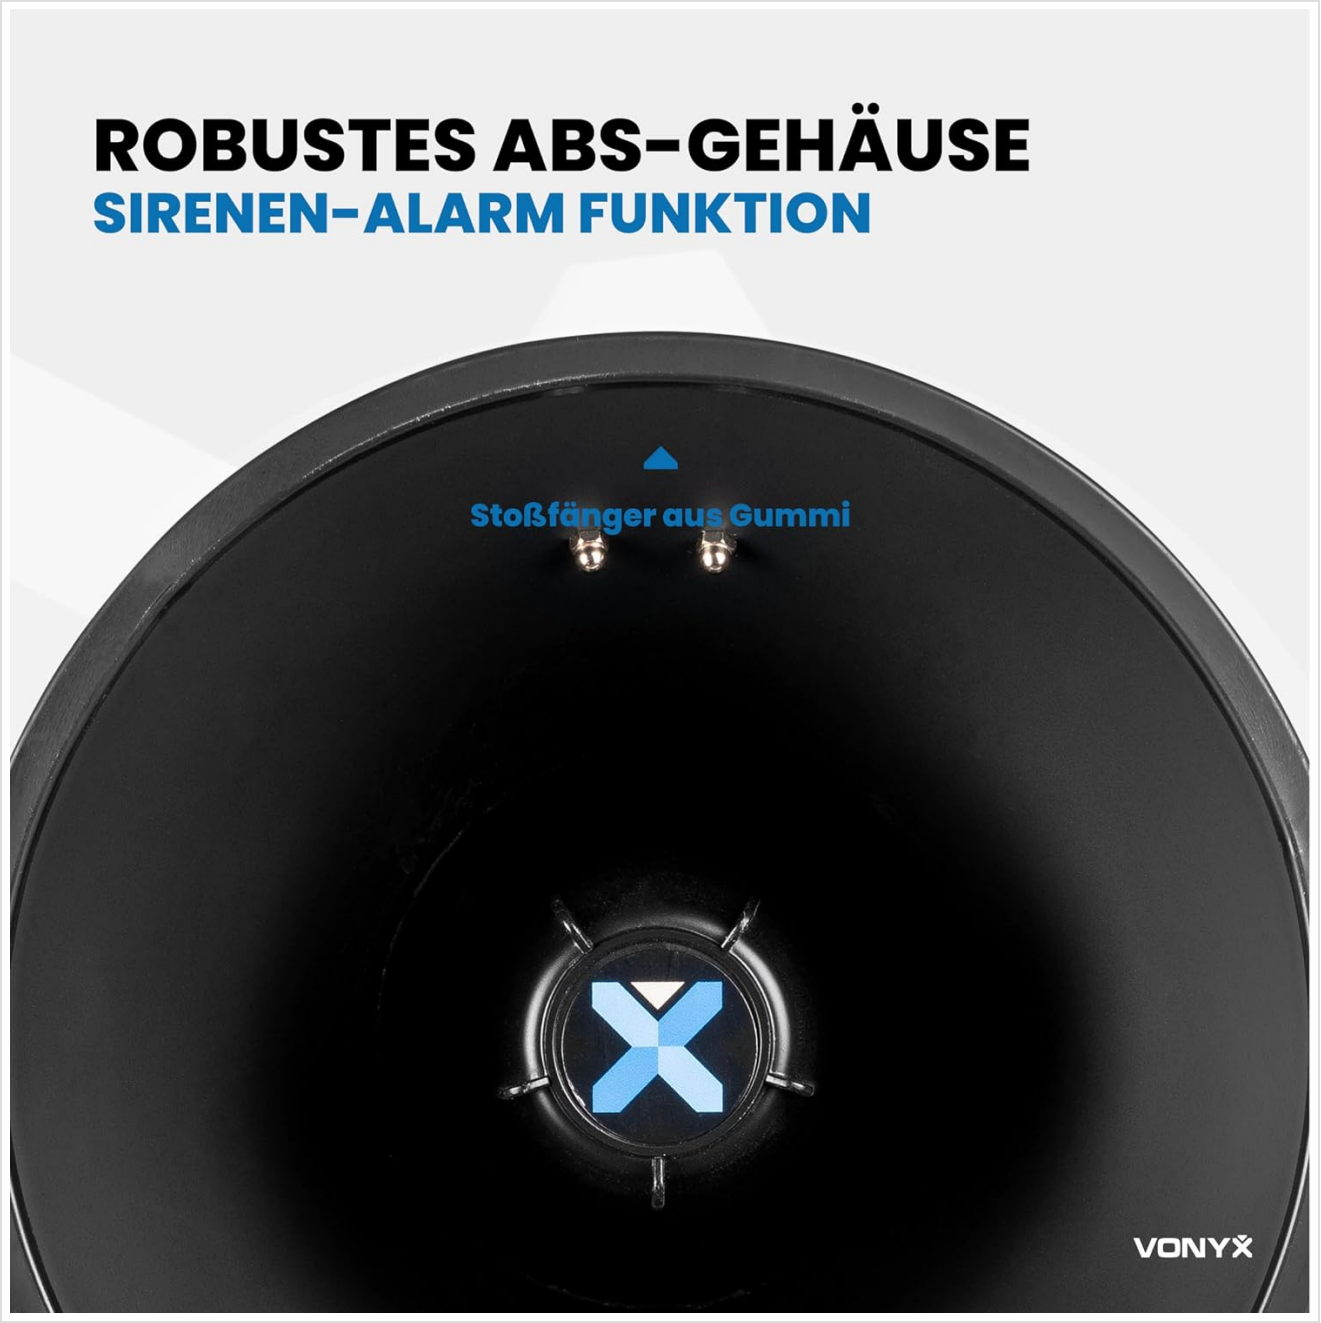


Image: A detailed view of the Vonyx MEG075 Megaphone's horn, highlighting its robust ABS housing and the siren alarm function. The image also points out the rubber bumper for durability.

Recording and Playback

The megaphone allows you to record a message and play it back repeatedly.

1. Press the "Record" button on the microphone. Speak your message clearly into the microphone.
2. Press the "Record" button again to stop recording.
3. Press the "Play" button to play back your recorded message. The message will loop until you press "Play" again or turn off the megaphone.

Bluetooth Connectivity

The MEG075 features Bluetooth for wireless audio streaming from your smartphone or other Bluetooth-enabled devices.

1. Turn on the megaphone.
2. Activate Bluetooth on your mobile device.
3. Search for "Vonyx MEG075" in your device's Bluetooth settings and pair with it.

4. Once paired, you can stream music or pre-recorded announcements wirelessly through the megaphone.



Image: The Vonyx MEG075 Megaphone being held by a hand in a crowd, with text overlays indicating "Bluetooth Audio-Streaming" and "75 Watt Leistung" (75 Watt Power), demonstrating its use for public address.

USB, SD, MP3 & AUX Playback

The megaphone supports playback from USB drives, SD cards, and external devices via AUX input.

- **USB/SD:** Insert a USB drive or SD card into the respective slot. The megaphone will automatically detect and play compatible MP3 files. Use the control buttons on the microphone to navigate tracks.
- **AUX:** Connect an external audio device (e.g., smartphone, MP3 player) to the AUX input using a 3.5mm audio cable (not included).



Image: A composite image showing the Vonyx MEG075 Megaphone from different angles, highlighting the USB and SD card input slots on the rear panel and its ergonomic pistol grip design.

Maintenance

- **Cleaning:** Wipe the megaphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the megaphone in a cool, dry place away from direct sunlight and extreme temperatures. If storing for a long period, remove the batteries.
- **Battery Care:** Recharge the Li-ion battery regularly to maintain its performance. If using C-cell batteries, replace them when power diminishes.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No sound output.	Megaphone is off. Low or dead batteries. Volume too low. Microphone not connected properly.	Turn on the megaphone. Replace or recharge batteries. Increase volume. Ensure microphone is securely plugged in.
Distorted sound or feedback.	Volume too high. Microphone too close to the megaphone horn.	Decrease volume. Increase distance between microphone and megaphone.
Bluetooth not connecting.	Bluetooth not enabled on device. Megaphone not in pairing mode. Device too far from megaphone.	Enable Bluetooth on your device. Ensure megaphone is on and discoverable. Move device closer to megaphone.
Recording not working.	"Record" button not pressed correctly. Microphone issue.	Press and hold the "Record" button until recording starts. Check microphone connection.

Specifications

Model Number	MEG075
Power Output	75 Watts
Range	Up to 1300 meters
Dimensions (L x W x H)	21.5 x 25.5 x 37 cm
Weight	1.65 Kilograms
Color	Black
Power Source	Rechargeable Li-ion Battery / 8 x C-cell Batteries
Speaker Diameter	21.5 cm
Features	Bluetooth, Recording Function, Siren, USB/SD/MP3/AUX Playback
Manufacturer	Tronios B.V.
Country of Origin	China

Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2024 Vonyx. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DM2MTZLY

More documents and user manuals: **https://manuals.plus/**