Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Folanzy WTE120P-035T

Folanzy WTE120P-035T Smart Dehumidifier Instruction Manual

Model: WTE120P-035T

Important Safety Instructions

Please read all instructions carefully before operating the dehumidifier. Retain this manual for future reference.

- Always place the unit on a stable, level surface.
- Ensure the power cord is not damaged and is properly grounded.
- Do not operate the dehumidifier near water or in excessively wet environments.
- Keep children and pets away from the unit during operation.
- Unplug the unit before cleaning or performing any maintenance.
- Allow the unit to stand upright for at least 24 hours after transport before plugging it in.

Product Overview

The Folanzy WTE120P-035T Smart Dehumidifier is designed to efficiently remove moisture from large spaces up to 6,200 sq. ft. It features smart app control, multiple operating modes, and flexible drainage options.



Image: Folanzy Smart Dehumidifier showing its dimensions (13.4 in D x 9.8 in W x 19.5 in H).

Key Features:

- **Powerful Dehumidification:** Removes up to 120 pints of moisture per day.
- **Smart Control:** Wi-Fi enabled with Smart App for remote operation and scheduling.
- **Portable Design:** Built-in handles and 360° rotatable wheels for easy movement.
- **Flexible Drainage:** Includes a 3.3ft drain hose for continuous draining or a 1.14-gallon water tank for manual emptying.
- **Multiple Modes:** Sleep Mode, Living Mode, Basement Mode, and Continuous Mode.
- **User-Friendly:** Adjustable fan speeds, 24-hour timer, child lock, auto restart, and auto defrost.
- **Washable Filter:** Removable and washable air filter for easy maintenance.

Setup

1. Unpacking and Placement

1. Carefully remove the dehumidifier from its packaging.
2. Place the unit upright on a firm, level surface. Ensure there is at least 8 inches (20 cm) of space around the unit for proper airflow.
3. Allow the dehumidifier to stand upright for a minimum of 24 hours before plugging it into a power outlet. This allows the refrigerant to settle.
4. The dehumidifier is suitable for various large spaces including basements, homes, offices, cellars, crawlspaces, bathrooms, bedrooms, laundry rooms, and garages.

2. Drainage Options

The Folanzy dehumidifier offers two drainage methods:

- **Manual Drainage (Water Tank):** The unit comes with a 1.14-gallon water tank. When the tank is full, the unit will automatically stop operation and an indicator light will illuminate. Carefully remove the tank, empty the collected water, and reinsert it securely to resume operation.
- **Continuous Drainage (Drain Hose):** For continuous operation without manual emptying, connect the included 3.3ft drain hose to the drainage port on the back of the unit. Route the hose to a suitable drain (e.g., floor drain, sink). Ensure the hose is sloped downwards to allow gravity drainage. A standard garden hose (not included) can also be used if a longer hose is required.

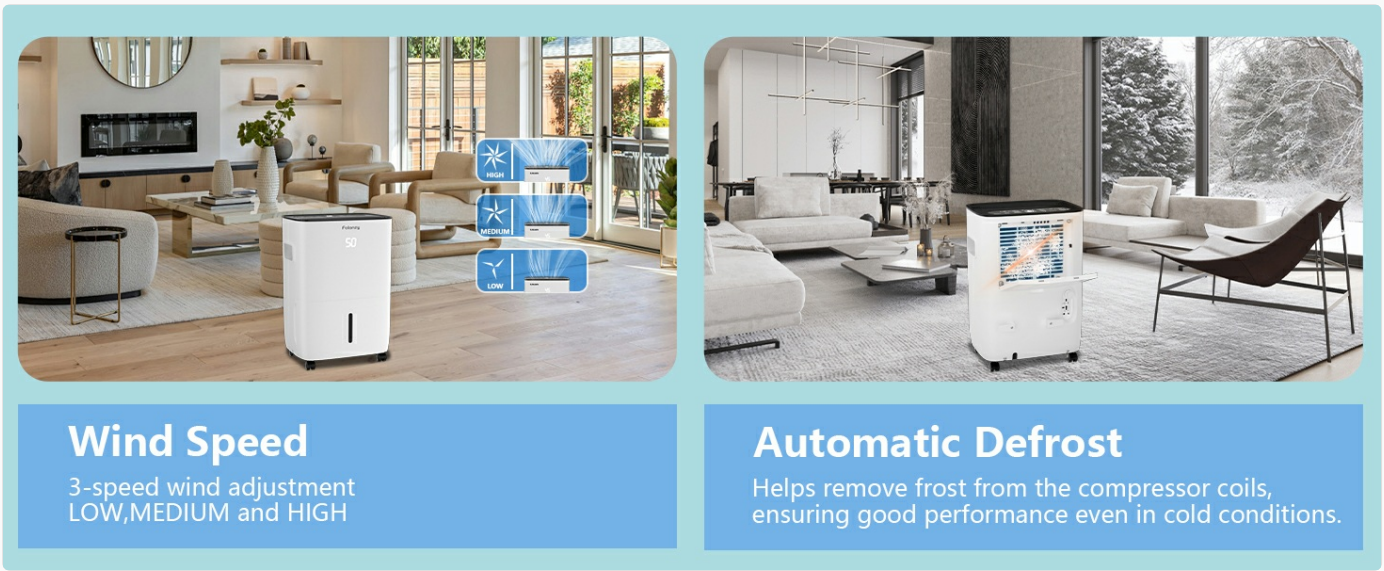


Image: Illustration of manual drainage using the water tank and continuous drainage using a drain hose or garden hose.

Operating Instructions

1. Control Panel Overview

The control panel is located on the top of the unit and features touch-sensitive buttons and a digital display.



Image: Diagram of the control panel showing Power, Mirage, Filter, Fan Speed, Humidity, Mode, Timer, and Lock buttons.

- **POWER:** Turns the unit on or off.
- **MIRAGE:** Controls the front panel display.
- **FILTER:** Indicates when the filter needs cleaning. Press to reset after cleaning.
- **FAN SPEED:** Adjusts fan speed (Low, Medium, High).
- **HUMIDITY % (Up/Down Arrows):** Sets the desired humidity level between 30% and 80%.
- **MODE:** Selects operating modes (Sleeping Area, Living Area, Basement, Continuous).
- **TIMER:** Sets the 24-hour on/off timer.
- **LOCK:** Activates/deactivates the child lock function (hold for 3 seconds).
- **WIFI:** Press 'FAN SPEED/WIFI' buttons for 3 seconds to activate Wi-Fi pairing.

2. Smart App Control

The Folanzy Smart Dehumidifier can be controlled remotely via a smartphone app. Download the Smart App from the App Store or Google Play.



Image: Dehumidifier connecting to a smartphone app via Wi-Fi.

With the Smart App, you can:

- Turn the dehumidifier on or off.
- Set and customize the ideal humidity level.
- Adjust fan speeds.
- Select from the four operating modes.
- Set 24-hour timers and schedules.
- Activate the child lock.

3. Operating Modes

Select the appropriate mode for your environment:

- **Sleeping Area Mode:** Optimized for quiet operation.
- **Living Area Mode:** Standard operation for general living spaces.
- **Basement Mode:** Designed for higher humidity conditions often found in basements.
- **Continuous Mode:** Operates continuously regardless of the set humidity level, ideal for very damp conditions or drying clothes.

4. Child Lock

To prevent accidental changes to settings, activate the child lock by pressing and holding the 'LOCK' button for 3 seconds. The lock indicator will illuminate. Repeat the action to deactivate.

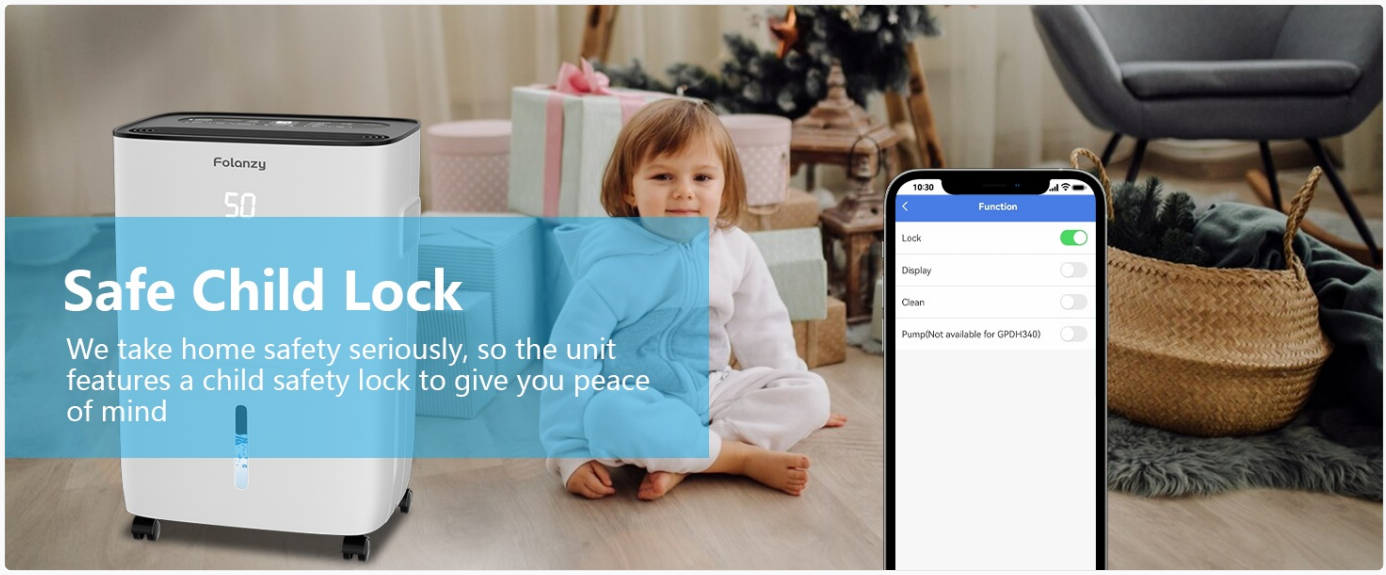


Image: Dehumidifier with child lock and timing function indicators.

Maintenance

1. Cleaning the Air Filter

The dehumidifier is equipped with a removable and washable filter. Regular cleaning ensures optimal performance and air quality.

1. Unplug the dehumidifier from the power outlet.
2. Locate the filter cover on the back of the unit and gently pull it out.
3. Wash the filter with warm, soapy water. Rinse thoroughly and allow it to air dry completely before reinserting.
4. Once the filter is dry, slide it back into its slot.
5. Plug in the unit and press the 'FILTER' button on the control panel to reset the filter cleaning indicator.

2. Emptying the Water Tank

If using manual drainage, the water tank will need to be emptied when full. The unit will automatically shut off and indicate 'BUCKET FULL'.

1. Gently pull out the water tank from the front of the unit.
2. Carefully pour out the collected water.
3. Slide the empty water tank back into the unit until it clicks into place. The unit will resume operation.

3. General Cleaning

Wipe the exterior of the dehumidifier with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is unplugged before cleaning.

Troubleshooting

If you encounter issues with your Folanzy dehumidifier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dehumidifier does not turn on.	No power, power cord loose, water tank full or not properly inserted.	Check power connection, ensure tank is empty and correctly seated.
Unit is running but not collecting water.	Humidity level too low, room temperature too low, air filter clogged.	Increase desired humidity setting, ensure room temp is above 5°C (41°F), clean air filter.
Unit is making unusual noise.	Unit not on a level surface, internal component issue.	Ensure unit is on a flat surface. If noise persists, contact customer support.
Wi-Fi connection issues.	Incorrect Wi-Fi password, router too far, 2.4GHz network required.	Verify Wi-Fi password, move unit closer to router, ensure connecting to a 2.4GHz network.
Unit freezes up.	Low ambient temperature, continuous operation in cold conditions.	The unit has auto-defrost. If freezing persists, ensure room temperature is within operating range.

For issues not covered here, please contact Folanzy customer support.

Specifications

Feature	Specification
Brand	Folanzy
Model Name	WTE120P-035T
Dehumidification Capacity	120 Pints (57 Liters per Day)
Coverage Area	Up to 6200 Square Feet

Feature	Specification
Water Tank Volume	1.14 Gallons
Color	White
Material Type	Metal, Plastic
Item Dimensions (D x W x H)	24.8D x 34.2W x 49.5H Centimetres
Item Weight	14.5 Kilograms
Wattage	355 watts
Number Of Speeds	3 (Fan Speeds)
Operation Mode	Automatic
Air Flow Capacity	10000 Cubic Feet Per Hour
Upper Temperature Range	90 Degrees Fahrenheit
Included Components	1 x 1.14 Gallon Water Tank, 1 x Detachable & Washable Filter, 1 x Folanzy 120 Pints Dehumidifier, Drain Hose, Power Cord
Special Features	Smart APP, Moisture Removal, Child Lock, Timer, Fan Speed Control, Adjustable Humidity, Automatic Restart after Power Outages, Continuous Drainage, Auto Stop and Alarming Functions if The Tank is Full, Auto defrost, Overload protection, 24 Hour Timer, Reusable Washable Filter

Warranty and Support

Folanzy offers a 2-year warranty for this product. To register your product and for warranty claims, please refer to the contact information provided with your purchase or visit the official Folanzy website.

For technical assistance, troubleshooting, or general inquiries, please contact Folanzy customer support.

© 2025 Folanzy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DM4CB5PX

More documents and user manuals: **https://manuals.plus/**