Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

T4TREAM TFHC7DSC

T4TREAM Farmhouse 7-Drawer Dresser User Manual

Model: TFHC7DSC | Brand: T4TREAM

1. Introduction

Thank you for choosing the T4TREAM Farmhouse 7-Drawer Dresser. This dresser is designed to bring a refined farmhouse style to your space, offering ample storage with its seven spacious drawers. Crafted from high-density engineered wood with a natural wood grain finish and hand-burnished metal accents, it combines durability with elegant design. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your furniture.

2. Safety Information

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Tipping Hazard:** Furniture can tip over, causing serious or fatal injuries. Always use the provided wall anchors and anti-tip metal plates to secure the dresser to the wall. This is especially crucial in homes with children or pets.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are present and undamaged before beginning assembly. Do not use power tools for assembly unless specifically instructed, as this may overtighten screws and damage the wood.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the tabletop (up to 100 lbs) and drawers. Distribute weight evenly.
- **Stability:** Ensure the dresser is placed on a level surface. The 4.13" sturdy base provides strong stability, but proper placement is key.
- **Children Safety:** Do not allow children to climb on or play with the dresser. Keep small parts and hardware away from children during assembly.
- **Care:** Wipe with a damp cloth for cleaning. Avoid harsh chemicals that may damage the finish.



Figure 2.1: Anti-tipper Mechanism. This image illustrates the anti-tipper mechanism, showing how wall anchors and optional anti-tip metal plates are used to secure the dresser to the wall, preventing accidental tipping.

3. Package Contents

Before starting assembly, verify that all components listed below are present and undamaged. Detailed installation instructions and labeled parts are included in your package.

- Dresser Panels (Top, Side, Back, Base)
- Drawer Components (Fronts, Sides, Backs, Bottoms)
- Drawer Slides (Rails)
- Metal Handles
- Assembly Hardware (Screws, Dowels, Cam Locks, etc.)
- Anti-Tipping Hardware (Wall Anchors, Straps, Metal Plates)
- Instruction Manual

- Spare Hardware Pack

4. Assembly Instructions

Assembly is required for this product. Please follow the detailed step-by-step instructions provided in the separate assembly guide included in your package. It is recommended to have two people for assembly.

1. **Prepare Workspace:** Clear a spacious area and lay out all components on a soft, clean surface to prevent damage.
2. **Identify Parts:** Match each part to its corresponding label in the assembly guide.
3. **Assemble Frame:** Begin by assembling the main frame of the dresser according to the diagrams.
4. **Install Drawer Slides:** Attach the drawer slides to the dresser frame and to the drawer sides. Ensure they are level and aligned for smooth operation.
5. **Assemble Drawers:** Construct each drawer, ensuring the bottoms are securely in place.
6. **Attach Handles:** Secure the metal handles to the drawer fronts.
7. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots.
8. **Install Anti-Tipping Device:** This is a critical safety step. Secure the dresser to a wall stud using the provided anti-tipping hardware. Refer to the specific instructions for this step.

For visual assistance, please refer to the assembly diagrams in your separate instruction booklet.

5. Setup

Once assembled, proper setup ensures stability and safety.

- **Placement:** Choose a level surface in your bedroom, living room, or hallway. Avoid placing the dresser in direct sunlight or near heat sources to prevent warping or discoloration.
- **Wall Mounting:** As highlighted in the safety section, it is imperative to secure the dresser to the wall using the anti-tipping hardware. This prevents accidental tipping, especially important for households with children or pets.
- **Leveling:** Check if the dresser is level. If not, adjust by placing shims under the base if necessary to prevent wobbling.



Figure 5.1: Dresser in a Bedroom Setting. This image shows the T4TREAM Farmhouse 7-Drawer Dresser in an antique brush white finish, positioned in a bedroom. A television is mounted above the dresser, and decorative items are placed on its surface.

6. Operating the Dresser

The T4TREAM dresser features seven spacious drawers designed for smooth operation.

- **Opening Drawers:** Gently pull the metal handles to open the drawers. The high-quality slides ensure smooth and effortless operation.
- **Closing Drawers:** Push the drawers firmly until they are fully closed and flush with the dresser frame.
- **Storage Capacity:** The dresser includes 5 large drawers (23.7"W x 12"D x 6.53"H) and 2 small drawers (11.14"W x 12"D x 6.53"H). These are ideal for organizing clothes, bedding, accessories, or other household items.
- **Weight Distribution:** Distribute items evenly within the drawers to prevent strain on the slides and maintain balance. Avoid overloading drawers.



Figure 6.1: Spacious Drawers. This image provides a top-down view of the dresser, highlighting the spaciousness of its drawers. Two drawers are open, one showing folded towels and blankets, and the other displaying various boxed items, demonstrating their storage capacity. Dimensions for both large and small drawers are indicated.



Figure 6.2: Dresser Dimensions. This image displays the front view of the T4TREAM 7-drawer dresser, with its overall dimensions (L54" x W15.5" x H31.25") clearly labeled. It also highlights the solid wood support feet and the unique wood texture finish.

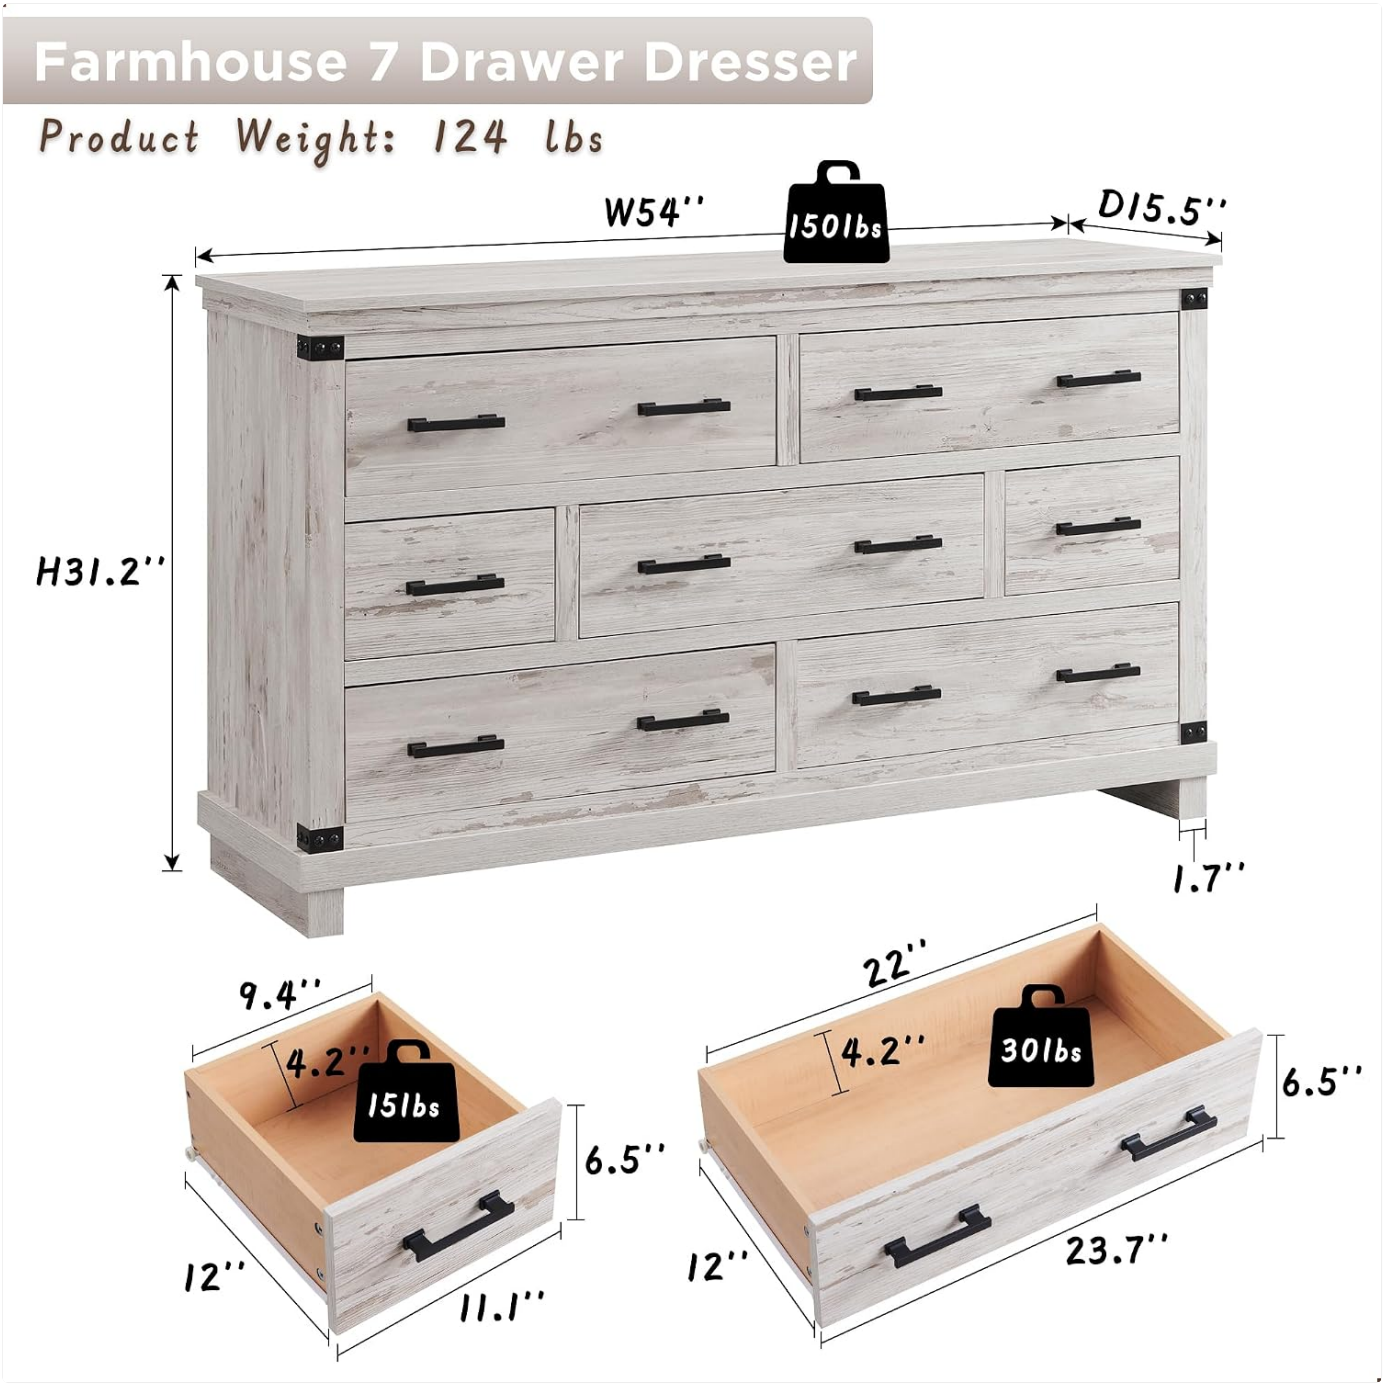


Figure 6.3: Detailed Dimensions and Weight. This diagram provides comprehensive measurements for the T4TREAM 7-drawer dresser, including its overall height (H31.2"), width (W54"), and depth (D15.5"). It also specifies the product weight (124 lbs) and the weight capacity of the tabletop (150 lbs). Detailed dimensions and weight capacities for both small and large drawers are also shown.

Your browser does not support the video tag.

Video 6.1: Farmhouse 7 Drawers Dresser Overview. This video provides a visual overview of the T4TREAM Farmhouse 7-Drawer Dresser, showcasing its design, dimensions, unique wood texture finish, black metal decor pieces, stable wooden base, and the smooth operation of its seven spacious drawers. It also briefly highlights the different color options available.

7. Maintenance

Proper care and maintenance will help preserve the beauty and functionality of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the finish.
- **Spills:** Blot spills immediately with a clean, dry cloth.

- **Dusting:** Regularly dust with a soft, lint-free cloth.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone spray can be applied, but avoid oil-based lubricants.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary, but do not overtighten.

8. Troubleshooting

If you encounter any issues with your T4TREAM dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser wobbles or is unstable.	Uneven floor; loose connections; anti-tipping device not installed.	Ensure dresser is on a level surface. Check and tighten all assembly screws. Install the anti-tipping hardware securely to a wall stud.
Drawers stick or do not slide smoothly.	Drawer slides are misaligned or dirty; drawer is overloaded.	Remove the drawer and inspect the slides for debris or damage. Clean the slides. Ensure the drawer is not overloaded and weight is distributed evenly. Check that drawer slides are properly installed and aligned.
Gaps between drawers or panels.	Loose assembly screws; panels not fully seated.	Carefully check and tighten all assembly screws. Ensure all panels are fully inserted into their respective slots and cam locks are tightened.
Missing or damaged parts upon arrival.	Shipping damage or packing error.	Contact T4TREAM customer support immediately with your purchase details and a description of the issue. Do not attempt to assemble with damaged parts.

9. Specifications

Feature	Detail
Brand	T4TREAM
Model Name	7 Drawers Dresser
Item Model Number	TFHC7DSC
Product Dimensions	15.5"D x 54"W x 31.3"H
Color	Antique Brush White
Mounting Type	Wall Mount (Anti-tipping hardware included)
Room Type	Bedroom, Living Room, Hallway
Special Feature	Storage, Natural Wood Texture, Metal Handles

Feature	Detail
Product Care Instructions	Wipe with Damp Cloth
Assembly Required	Yes
Material	FSC-Certified Wood, High-Density Engineered Wood
Tabletop Weight Capacity	Up to 100 lbs
Drawer Dimensions (Large)	23.7"W x 12"D x 6.53"H (5 drawers)
Drawer Dimensions (Small)	11.14"W x 12"D x 6.53"H (2 drawers)

10. Warranty and Support

T4TREAM is committed to providing high-quality products. Your dresser is securely packaged to prevent shipping damage, and a pack of spare hardware is included for your peace of mind.
For any questions, missing parts, or concerns regarding your T4TREAM Farmhouse 7-Drawer Dresser, please contact T4TREAM customer support. Please have your purchase information and model number (TFHC7DSC) ready when contacting support.
For more information and support, visit the official T4TREAM store on Amazon:T4TREAM Store

© 2025 T4TREAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DM626KX1

More documents and user manuals: **https://manuals.plus/**