Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P16

Proscenic P16 Cordless Vacuum Cleaner User Manual

Model: P16

1. Introduction

Thank you for choosing the Proscenic P16 Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before use and retain it for future reference.



Image 1.1: Overview of the Proscenic P16 Cordless Vacuum Cleaner and its components.

2. Safety Instructions

To ensure safe operation, please observe the following precautions:

- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Do not pick up flammable or combustible materials, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off all controls before unplugging.

- Exercise extra care when cleaning on stairs.

3. Package Contents

Verify that all items are present in the package:

- Main Body
- Battery
- Bendable Tube
- Floor Brush
- Power Adapter
- Wall Mount
- Crevice Tool
- Extra Air Inlet HEPA Filter
- User Manual (this document)
- Cleaning Brush



Image 3.1: Visual representation of all included accessories and main components.

4. Assembly

1. **Attach the Bendable Tube:** Insert the bendable tube into the main body until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the bendable tube, ensuring it locks firmly.
3. **Install the Battery:** Slide the battery pack into the designated slot on the main body until it clicks.
4. **Wall Mount Installation (Optional):** Choose a suitable location near a power outlet. Secure the wall mount to the wall using the provided screws. The vacuum can be stored and charged on this mount.



Image 4.1: Illustration of attaching the main body to the extension tube and floor brush.

5. Operating Instructions

5.1 Powering On and Suction Modes

Press the power button to turn on the vacuum cleaner. The LED display will show the current battery level and suction mode. Use the mode selector button on the display to switch between ECO, NORMAL, and TURBO suction modes.

- **ECO Mode:** For light cleaning and extended runtime.
- **NORMAL Mode:** Standard cleaning for everyday dirt.
- **TURBO Mode:** Maximum suction for stubborn dirt and deep cleaning.



Image 5.1.1: The LED display provides real-time information on battery status and selected cleaning mode.



Image 5.1.2: The 550W brushless motor provides up to 45,000 Pa of suction for effective cleaning.

5.2 Bendable Wand Function

The 180° bendable wand allows for easy cleaning under furniture without needing to bend down. Simply press the release button on the wand to articulate it, then guide the floor brush under low-clearance areas.



Image 5.2.1: The bendable wand simplifies cleaning in hard-to-reach areas.



Image 5.2.2: The flexible floor brush offers enhanced maneuverability for comprehensive cleaning.

5.3 Green LED Light

The floor brush is equipped with green LED lights that illuminate dust and debris on the floor, making it easier to spot and clean particles that are otherwise invisible to the naked eye.

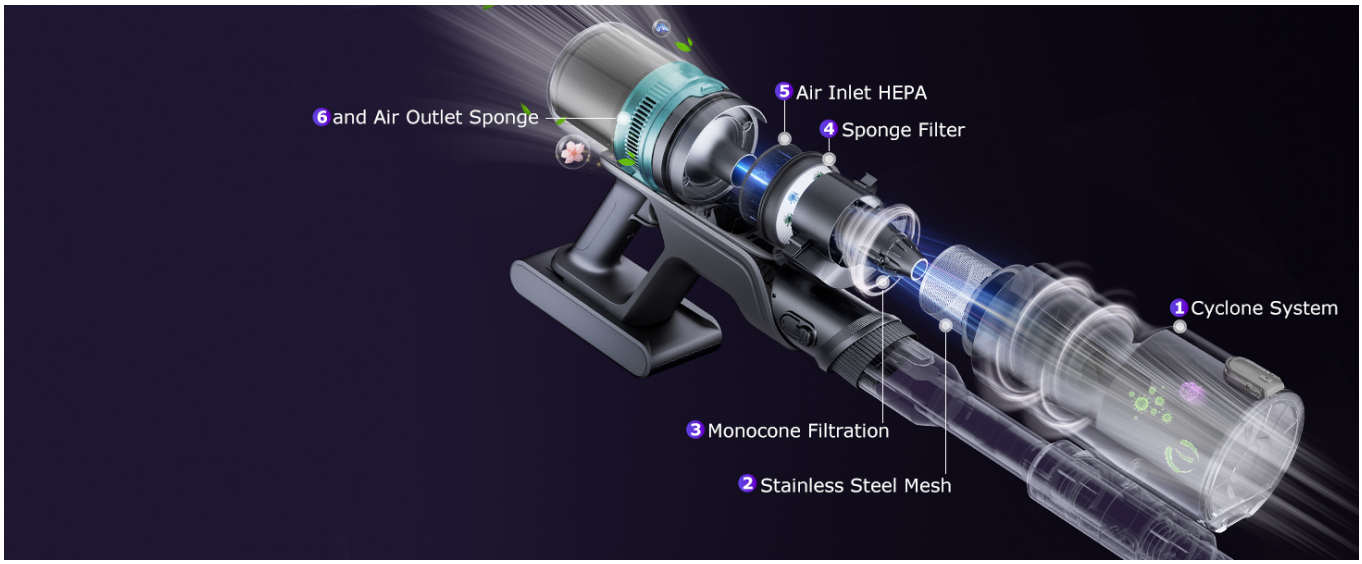


Image 5.3.1: The green LED light enhances visibility of fine dust and debris.

5.4 Handheld Conversion

The main body can be detached from the extension tube and floor brush to be used as a handheld vacuum. Attach the crevice tool or other accessories directly to the main body for cleaning upholstery, car interiors, or tight spaces.



Image 5.4.1: The vacuum easily converts to a handheld unit for versatile cleaning tasks.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX fill line is reached. Press the dustbin release button and empty contents into a waste bin.

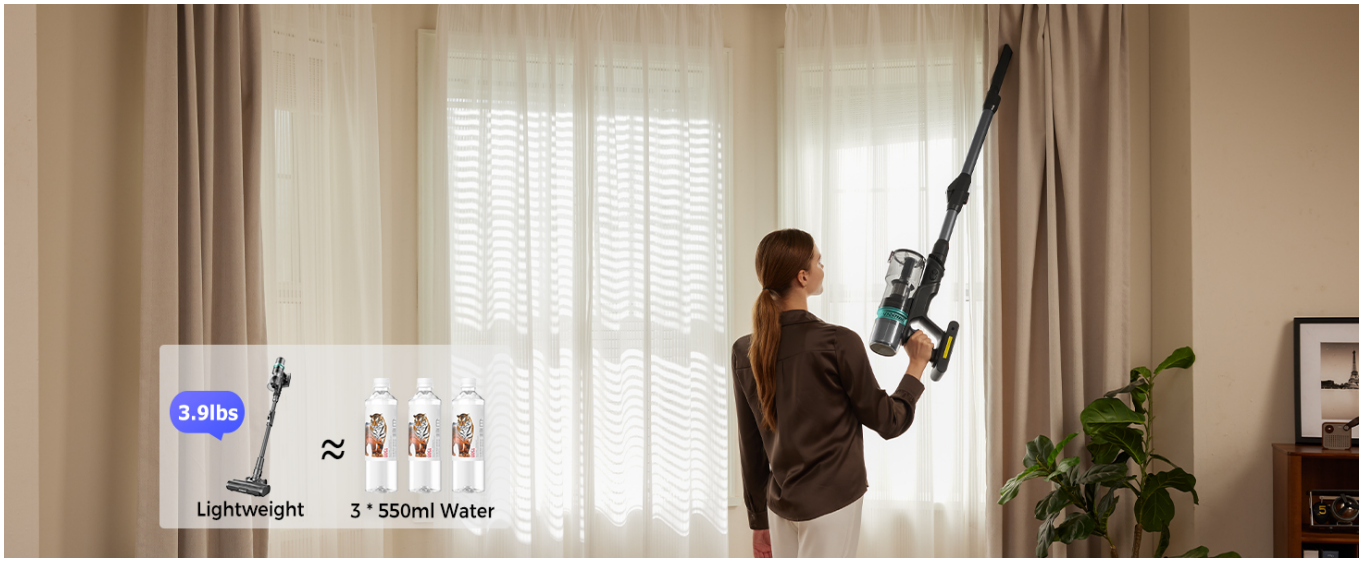


Image 6.1.1: The dustbin is designed for easy and hygienic emptying.

6.2 Cleaning Filters

The vacuum cleaner features a 6-layer filtration system, including a HEPA filter. For optimal performance, clean the filters regularly. Remove the filters from the dustbin and tap off loose dirt. Rinse washable filters under cold water and allow them to air dry completely before reinstallation.



Image 6.2.1: Regular cleaning of the filters is crucial for maintaining suction power and air quality.



Image 6.2.2: The multi-layer filtration system captures fine dust and allergens.

6.3 Cleaning the Brush Roll

The anti-tangle brush roll is designed to minimize hair entanglement. However, if debris or hair accumulates, remove the brush roll from the floor head and use the provided cleaning brush or scissors to remove any tangled material.



Image 6.3.1: The anti-tangle brush roll is effective against pet hair and long strands.

7. Charging and Battery

The Proscenic P16 is powered by a detachable 2,200mAh*8 Lithium-Ion battery, offering up to 55 minutes of runtime. The LED display provides a real-time battery countdown.

- **Charging:** Connect the power adapter to the charging port on the main body or the wall mount. Plug the adapter into a power outlet. The battery indicator on the LED display will show charging progress.
- **Battery Removal:** To remove the battery, press the battery release button and slide the battery pack out.



Image 7.1.1: The detachable battery provides extended cleaning time.



Image 7.1.2: The battery can be easily removed for charging or replacement.

8. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Charge the battery. Ensure the battery is securely clicked into place.
Low suction power.	Dustbin is full, filters are clogged, or brush roll is obstructed.	Empty the dustbin. Clean or replace filters. Remove any obstructions from the brush roll.

Problem	Possible Cause	Solution
Brush roll not spinning.	Obstruction in the brush roll or floor head.	Turn off the vacuum and remove any tangled hair or debris from the brush roll.
Short battery runtime.	Battery not fully charged or operating in TURBO mode frequently.	Ensure battery is fully charged. Use ECO or NORMAL mode for longer runtime. Battery life naturally degrades over time.

9. Specifications

Feature	Detail
Brand	Proscenic
Model Name	P16
Wattage	550W
Suction Power	Up to 45KPa
Battery Type	Lithium-Ion (2,200mAh*8)
Battery Life	Up to 55 minutes
Dustbin Capacity	1000 Milliliters
Filtration System	6-Layer with HEPA Filter
Special Features	180° Bendable Wand, Green LED Light, Anti-Tangle Brush, Real-Time LED Display
Product Dimensions	9.91"L x 3.94"W x 45.66"H
Item Weight	6.69 pounds

10. Warranty and Support

Proscenic provides a standard warranty for this product. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or warranty claims, please contact Proscenic customer service through their official website or the contact information provided in your warranty documentation.
Online Support: Visit the official Proscenic website for FAQs and support resources.
Contact Information: Refer to the contact details provided in your product packaging or warranty card.

© 2025 Proscenic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DM8RFRGB

More documents and user manuals: **https://manuals.plus/**