Saved from manuals.plus.
Open the live page for links to other documents and user manuals.


TOPZEE AFT08003F-UL-001

TOPZEE 8L Dual Basket Air Fryer

INSTRUCTION MANUAL - MODEL: AFT08003F-UL-001

Introduction

Thank you for choosing the TOPZEE 8L Dual Basket Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals with less oil, utilizing rapid air circulation technology. Its dual-basket design allows for cooking two different dishes simultaneously, making meal preparation efficient and convenient. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

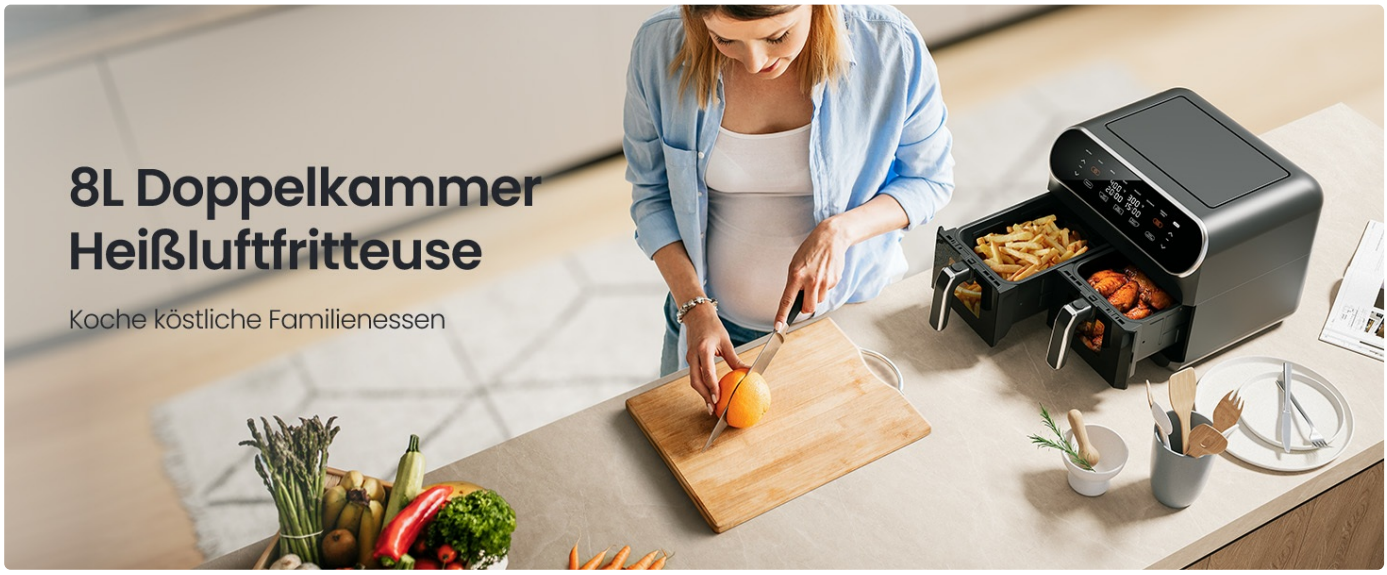

The TOPZEE Dual Basket Air Fryer in a kitchen environment, demonstrating its practical application for preparing family meals.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.

- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Supervise children closely when the appliance is in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Hot surfaces: The appliance surfaces may become hot during use. Use oven mitts when handling hot components.
- Do not block any air vents.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not use accessories not recommended by the manufacturer.

Product Overview

The TOPZEE 8L Dual Basket Air Fryer consists of the main unit, two independent cooking baskets, and two crisper plates. The intuitive digital control panel allows for easy selection of cooking modes, temperature, and time for each basket.



Front view of the TOPZEE Dual Basket Air Fryer, highlighting its sleek design and digital interface.



The air fryer with both baskets extended, demonstrating the dual cooking capacity.

Components:

- Main Unit with Digital Control Panel
- Left Cooking Basket (4L capacity)
- Right Cooking Basket (4L capacity)
- 2 Crisper Plates (removable)

Control Panel Features:

- **Temperature Controls:** Up/Down arrows for adjusting temperature.
- **Time Controls:** Up/Down arrows for adjusting cooking time.
- **Preset Functions:** Dedicated buttons for Air Fry, Roast, Broil, Bake, Reheat, Dehydrate, French Fries, and Preheat.

- **Left/Right Basket Select:** Buttons to select which basket to control.
- **Sync Cook:** Synchronizes settings for both baskets to finish at the same time.
- **Dual Basket:** Allows both baskets to cook with the same settings.
- **Light Button:** Activates the internal light for viewing food through the window.



The transparent viewing window allows monitoring of cooking progress without opening the baskets.

Setup

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of clear space around the back and sides of the unit for proper ventilation.
4. **First Use Odor:** It is normal for a slight odor to be present during the first few uses as manufacturing residues burn off. This is harmless and will dissipate. To minimize this, run the air fryer empty for about 10-15 minutes at 200°C (390°F) before cooking food.

Operating Instructions

General Operation:

1. Plug the air fryer into a grounded electrical outlet. The control panel will illuminate.
2. Place the crisper plates inside the cooking baskets.
3. Add ingredients to the cooking baskets. Do not overfill; ensure air can circulate.
4. Insert the baskets firmly into the main unit.

Using Preset Functions:

The air fryer comes with 8 versatile preset cooking functions:

- Air Fry

- Roast
- Broil
- Bake
- Reheat
- Dehydrate
- French Fries
- Preheat

To use a preset:

1. Select the desired basket (Left or Right) if cooking independently.
2. Press the button for the desired preset function. The default time and temperature for that preset will display.
3. You can adjust the time and temperature using the respective Up/Down arrows if needed.
4. Press the Start/Pause button to begin cooking.



The control panel displays various preset cooking options for convenience.



Additional preset functions expand the cooking versatility of the appliance.

Manual Cooking:

To set time and temperature manually:

1. Select the desired basket (Left or Right).
2. Use the Temperature Up/Down arrows to set the desired temperature.
3. Use the Time Up/Down arrows to set the desired cooking time.
4. Press the Start/Pause button to begin cooking.

Dual-Basket Functions:

The TOPZEE Air Fryer offers advanced dual-basket features:

- **Sync Cook:** Allows two different foods to finish cooking at the same time, even if they require different temperatures and times. Set the cooking parameters for each basket, then press 'Sync Cook'. The air fryer will automatically adjust the start times to ensure simultaneous completion.
- **Dual Basket:** Use this function when cooking the same food in both baskets with identical settings. Set the parameters for one basket, then press 'Dual Basket' to apply them to the other.



Independent controls for each basket allow for versatile cooking of different items simultaneously.

Using the Easy-View Window and Light:

The transparent window on each basket allows you to monitor your food without interrupting the cooking process. Press the 'Light' button on the control panel to illuminate the interior of the baskets for better visibility.

Cleaning and Maintenance

Proper cleaning ensures the longevity and hygiene of your air fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Baskets and Crisper Plates:** The non-stick cooking baskets and crisper plates are dishwasher safe. For manual cleaning, wash with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in warm soapy water for 10-15 minutes before cleaning.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- **Interior:** Clean the interior of the air fryer with a damp cloth and mild detergent if necessary. Ensure it is completely dry before next use.



The non-stick baskets and crisper plates are dishwasher safe for effortless cleaning.

Troubleshooting

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push baskets firmly into the unit until they click into place.
Food is not cooked evenly.	Baskets overloaded; food not shaken/flipped.	Do not overload baskets. For best results, shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the baskets and crisper plates thoroughly after each use. For high-fat foods, consider draining excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (if desired); incorrect temperature/time.	Pat food dry before air frying. A light spray of oil can enhance crispiness. Adjust temperature and time as needed.

Specifications

- **Brand:** TOPZEE
- **Model Number:** AFT08003F-UL-001
- **Color:** Pink
- **Product Dimensions:** 39.88 x 39.12 x 30.48 cm
- **Capacity:** 8 Quarts (2 x 4L Baskets)
- **Power:** 1700 Watts
- **Material:** Metal

- **Item Weight:** 7.98 Kilograms
- **Special Feature:** Dual-Zone Functions

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official TOPZEE website. Keep your proof of purchase for any warranty claims.

© 2025 TOPZEE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DMD1HJ6P

More documents and user manuals: **https://manuals.plus/**