GOBOULT Y1 Pro

GOBOULT Y1 Pro Wireless Earbuds User Manual

Model: Y1 Pro

1. INTRODUCTION

Thank you for choosing the GOBOULT Y1 Pro Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual carefully before use.

2. WHAT'S IN THE BOX

- Y1 Pro Earphones
- Y1 Pro Charging Case
- USB Type-C Charging Cable
- Eartips (various sizes)
- User Manual

3. PRODUCT OVERVIEW

The GOBOULT Y1 Pro earbuds feature a compact design with advanced audio technology. Familiarize yourself with the components for proper use.
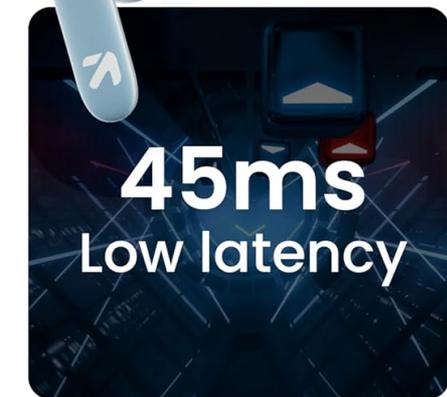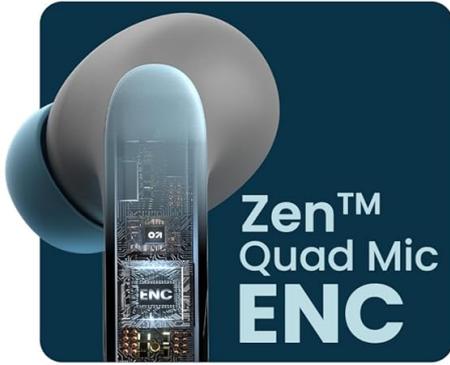
Zen™ Quad Mic ENC

Bluetooth 5.3
Blink & Pair™

60H Battery Life

Knurled Design

Lightning Fast
10 = 120
mins charge mins playtime

Type C Fast charging

45ms Low latency

13mm BoomX™ Drivers

Made in India

Image: GOBOULT Y1 Pro Earbuds in their Powder Blue charging case.

60 Hrs 🔋
Playtime

8 Get **Hrs** Playtime on just one charge

Immerse Deeper,
Indulge Longer

Image: GOBOULT Y1 Pro Earbuds removed from the charging case, showing individual earbud design.
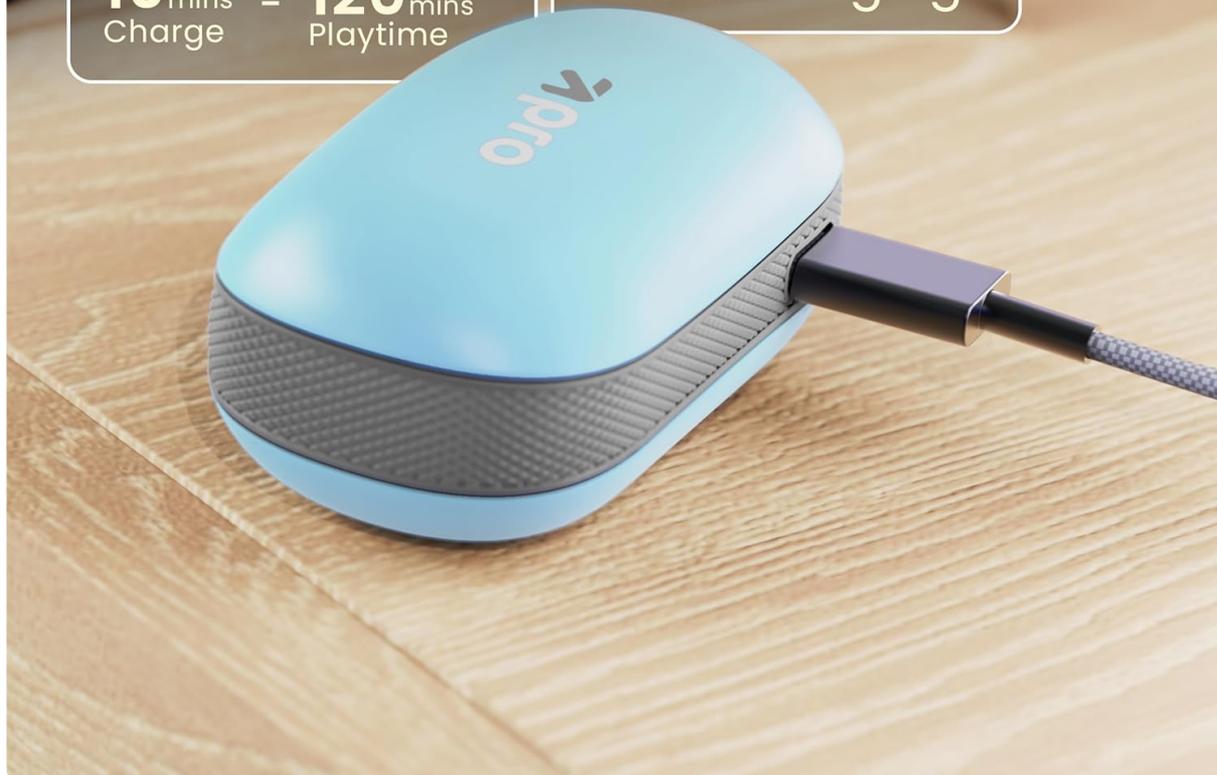
Image: GOBOULT Y1 Pro Earbud comfortably placed in an ear, demonstrating fit.

The earbuds are equipped with 13mm bass drivers for enhanced audio and Zen Quad Mic Environmental Noise Cancellation (ENC) for clear calls.

4. SETUP

4.1 Initial Charging

Before first use, ensure the earbuds and charging case are fully charged. Remove any protective film from the charging contacts on the earbuds.

- Place the earbuds into the charging case.
- Connect the USB Type-C charging cable to the charging port on the case and to a power source.
- The charging indicator on the case will show charging status. A full charge takes approximately 90 minutes.

ENC explained

Your Voice

Filtered Voice Signal only

Environmental Noise

Pro+ Calling and HD MIC

The Zen™ Mode shuts the outside world and unwanted noise, so your calls are crisp and clear as they should be.

ENC

Image: GOBOULT Y1 Pro charging case connected via Type-C cable, illustrating fast charging capability. A 10-minute charge provides 120 minutes of playtime.

4.2 Pairing with a Device

The GOBOULT Y1 Pro uses Bluetooth 5.3 for stable and efficient connectivity.

1. Open the charging case lid. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "GOBOULT Y1 Pro" from the list of detected devices.
4. Once connected, a voice prompt will confirm successful pairing.

The earbuds feature "Blink & Pair" for fast pairing after the initial setup.

#1 Rated Audio Brand in India

Fastest Growing Brand

Crafted in India for India

3 cr+
Units sold till now

00:03
seconds to sell one product

30L+
Product reviews and ratings

Image: GOBOULT Y1 Pro earbuds and case demonstrating Bluetooth 5.3 connectivity for fast, stable, and power-efficient pairing.

5. OPERATING INSTRUCTIONS

5.1 Touch Controls

The GOBOULT Y1 Pro earbuds feature intuitive touch controls on each earbud. The functions are generally mirrored for convenience, but some are specific to left or right.

Image: Diagram illustrating the touch control functions on the GOBOULT Y1 Pro earbuds.

GOBOULT Y1 Pro Touch Controls

Action	Left Earbud	Right Earbud
Long Tap	Google/Siri Assistant	Google/Siri Assistant
1 Tap	Music Play / Pause, Call Receive	Music Play / Pause, Call Receive
2 Taps	Previous Song, Reject/End Call	Next Song, Reject/End Call
3 Taps	Volume Down	Volume Up
4 Taps	Activate Combat Mode (Gaming)	Activate Combat Mode (Gaming)

5.2 Voice Assistant

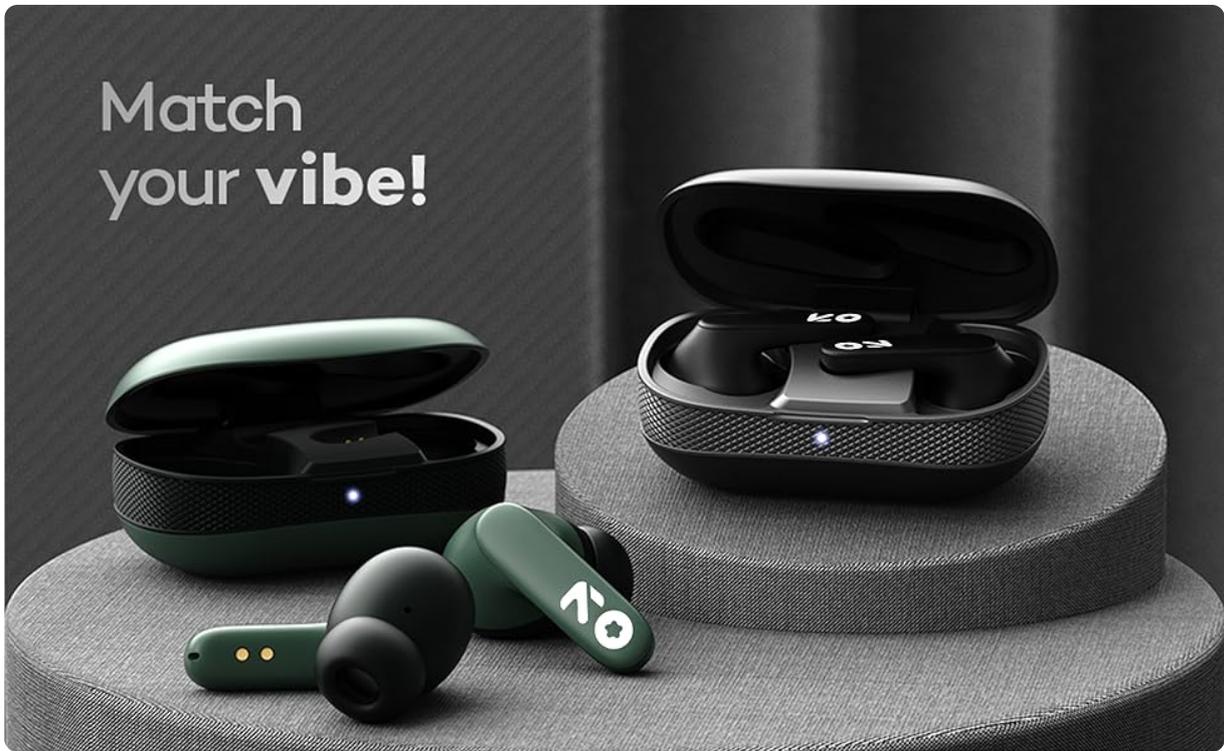Activate your device's voice assistant (Google Assistant or Siri) by performing a long tap on either earbud.

Image: GOBOULT Y1 Pro earbuds showing how to access voice assistants like Siri and Google Assistant with a long tap.

5.3 Gaming Mode (Combat Mode)

For an optimized gaming experience, activate Combat Mode to reduce audio latency to 45ms.

- Tap either earbud 4 times to activate Combat Mode.
- Repeat the 4-tap action to deactivate Combat Mode and return to normal audio mode.

Image: GOBOULT Y1 Pro earbuds demonstrating 45ms low latency gaming mode, activated by tapping 4 times on an earbud.

5.4 Making Calls

The GOBOULT Y1 Pro features Zen Quad Mic Environmental Noise Cancellation (ENC) for clear call quality.

Image: GOBOULT Y1 Pro earbud highlighting the Zen Quad Mic ENC feature for clear calls.

Image: Diagram explaining how Environmental Noise Cancellation (ENC) filters out background noise, ensuring only your voice is transmitted clearly during calls.

- **Answer/End Call:** Tap either earbud once.
- **Reject Call:** Tap either earbud twice.

6. CHARGING

The GOBOULT Y1 Pro offers extended playtime and rapid charging capabilities.

- **Earbud Playtime:** Up to 8 hours on a single charge.
- **Total Playtime (with case):** Up to 60 hours.

- **Fast Charging:** 10 minutes of charging provides approximately 120 minutes of playtime.
- **Full Charge Time:** Approximately 90 minutes for the case and earbuds.

Image: GOBOULT Y1 Pro earbuds and charging case highlighting 60 hours of total playtime and 8 hours of playtime on a single earbud charge.

7. MAINTENANCE

7.1 Water Resistance

The GOBOULT Y1 Pro earbuds are IPX5 water-resistant, making them suitable for workouts and outdoor activities. They are protected against splashes and sweat.

- Do not submerge the earbuds in water.
- Ensure the charging port is dry before charging.
- Wipe the earbuds dry after exposure to sweat or splashes.

Image: GOBOULT Y1 Pro earbud with water droplets, illustrating its IPX5 water resistance for sweatproof and splashproof use.

7.2 Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Gently remove any earwax or debris from the eartips and speaker mesh using a small brush or cotton swab.
- Avoid using abrasive materials or harsh chemicals.

8. TROUBLESHOOTING

If you encounter issues with your GOBOULT Y1 Pro earbuds, refer to the following common solutions:

- **No Sound/Low Volume:**
  - Ensure earbuds are charged.
  - Check device volume and earbud volume.
  - Reconnect Bluetooth.

- **Pairing Issues:**
  - Ensure earbuds are in pairing mode (open case lid).
  - Turn off and on Bluetooth on your device.
  - Forget "GOBOULT Y1 Pro" from your device's Bluetooth list and re-pair.
  - Ensure no other devices are connected to the earbuds.

- **Earbuds Not Charging:**
  - Check if the charging cable is securely connected.
  - Ensure the charging contacts on the earbuds and in the case are clean and free of debris.
  - Try a different charging cable or power adapter.

- **Microphone Not Working:**
  - Ensure the earbuds are properly connected to your device.
  - Check your device's privacy settings to ensure microphone access is granted to the earbuds.

9. SPECIFICATIONS

Feature	Detail
Model Name	Y1 Pro (Airbass)
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	10 Metres
Audio Driver Size	13mm (as per product title/features)
Noise Control	Environmental Noise Cancellation (ENC)
Audio Latency	45ms (Gaming Mode)
Battery Life (Earbuds)	Up to 8 Hours
Battery Life (Total with Case)	Up to 60 Hours
Charging Time	Approx. 90 Minutes
Charging Interface	Type-C Fast Charging
Water Resistance Level	IPX5 (Water Resistant)
Control Method	Touch, Voice
Compatible Devices	Android, Cellphones, Desktops, Laptops, Tablets
Item Weight	50 Grams
Product Dimensions	6 x 2.7 x 4.8 cm
Material	Plastic
Country of Origin	India

10. WARRANTY AND SUPPORT

The GOBOULT Y1 Pro Wireless Earbuds come with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable customer support.
For warranty claims, technical assistance, or any product-related inquiries, please visit the official GOBOULT website or contact their customer support through the details provided on the product packaging or purchase invoice.