TECKNET AF-2004

TECKNET AF-2004 Rechargeable Personal Safety Alarm User Manual

Model: AF-2004

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your TECKNET AF-2004 Rechargeable Personal Safety Alarm. Please read this manual thoroughly before using the device and retain it for future reference.

The TECKNET AF-2004 is a compact and portable personal safety device designed to emit a loud siren and a bright strobe light to attract attention and deter potential threats. It features a rechargeable battery and multiple activation methods for user convenience and safety.

PRODUCT OVERVIEW

Components

- Personal Safety Alarm Unit
- Keychain Attachment
- USB-C Charging Cable

Key Features

- **130dB Siren:** Emits a loud, attention-grabbing sound.
- **SOS Strobe Light:** High-intensity flashing light for visibility and disorientation.
- **Rechargeable Battery:** Long standby time with USB-C charging.
- **Low Battery Indicator:** Notifies user when charging is needed.
- **Two Activation Modes:** Pull-pin and double-press button.
- **Compact and Portable:** Lightweight design with keychain for easy carrying.

Image: Two TECKNET personal safety alarms, one black and one blue, showcasing the product design and keychain attachment.

Image: Overview of TECKNET personal safety alarm features, including 600ft range, LED strobe light, 130dB loudness, and rechargeable battery.

SETUP

Initial Charge

Before first use, fully charge your personal safety alarm. Connect the provided USB-C cable to the charging port on the device and plug the other end into a standard USB power adapter (not included) or a computer USB port. The charging indicator light will show the charging status (e.g., red for charging, green for fully charged).

A full charge typically takes approximately 1.5 hours.

Image: The TECKNET alarm connected to a USB-C charging cable, highlighting its rechargeable nature compared to traditional battery-operated alarms.

Attaching to Keychain

Use the integrated keychain attachment to secure the alarm to your keys, bag, belt loop, or other easily accessible items. Ensure it is securely fastened to prevent accidental loss.

Multi Purpose Alarm

Image: A detailed diagram illustrating the various parts of the TECKNET personal safety alarm and examples of how it can be carried on a keychain, belt, or bag.

OPERATING INSTRUCTIONS

Alarm Activation Modes

The TECKNET AF-2004 offers two methods for activating the alarm:

1. **Pull-Pin Activation:**
   To activate the alarm, firmly pull the ring-shaped pin away from the main unit. The 130dB siren and strobe light will activate instantly.
   To deactivate, reinsert the pin fully into the alarm unit.

Image: Illustration of pulling the pin to activate the alarm and reinserting it to deactivate.

2. **Button Activation:**
   For a more discreet activation, double-press the button located on the side of the alarm. This will also trigger the 130dB siren and strobe light.
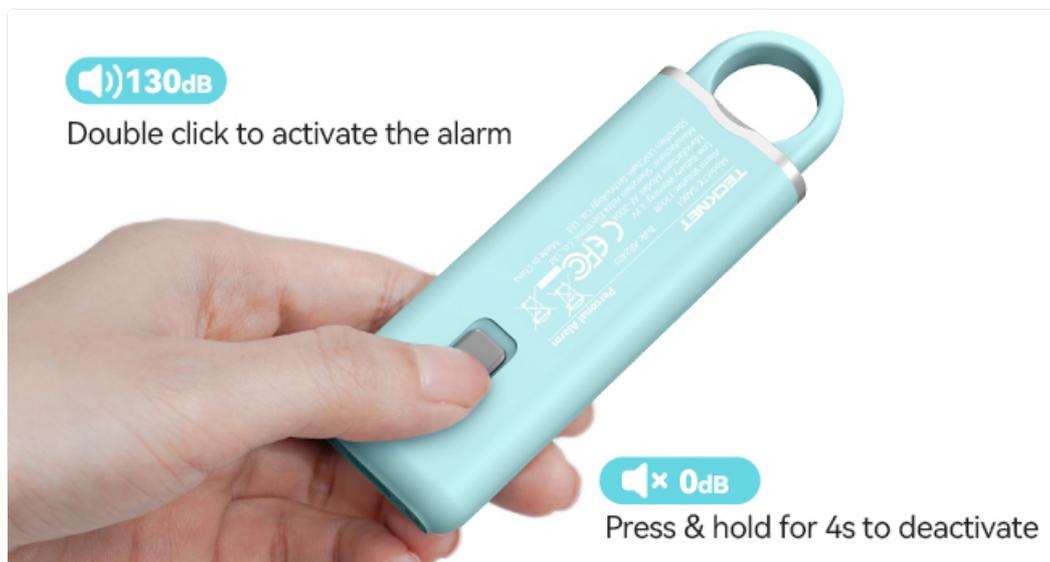   To deactivate, press and hold the button for approximately 4 seconds.

Image: Illustration of double-pressing the side button to activate the alarm and pressing and holding to deactivate.

Light Modes

The integrated LED light can be used independently of the alarm function:

- **1st Click:** Activates the flashlight mode (steady light).
- **2nd Click:** Activates the flashing mode (strobe light).
- **3rd Click:** Turns off the light.

SMALL DEVICE, BIG PEACE OF MIND

Image: Visual guide to operating the two lighting modes (flashlight and flashing) and turning off the light using the control button.

MAINTENANCE

Charging

The alarm features a low battery indicator to alert you when charging is required. Connect the USB-C cable to a power source. A full charge provides:

- Up to 500 days of standby time.
- Up to 90 minutes of continuous alarm sound.
- Up to 5 hours of continuous flashing light.
- Up to 3 hours of continuous steady light.

2 LIGHTING MODES

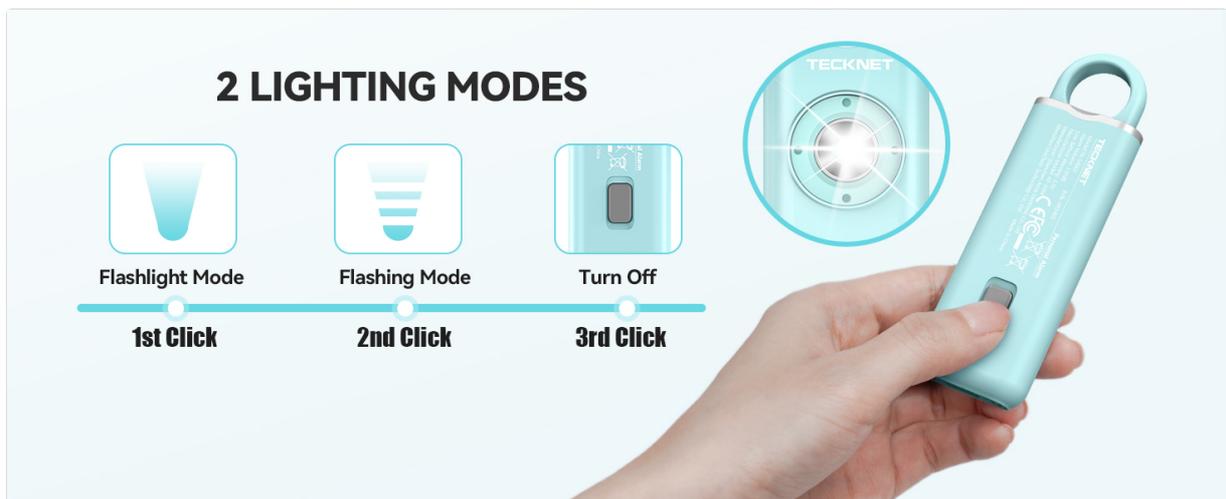| Flashlight Mode | Flashing Mode | Turn Off |
| 1st Click | 2nd Click | 3rd Click |

Image: Details on the impressive battery life of the TECKNET alarm, including standby time and usage duration for alarm and light functions.

Cleaning and Storage

- Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the alarm in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the device is fully charged before storing for extended periods to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Alarm does not activate.	Low battery; Pin not fully pulled; Button not double-pressed or held correctly.	Charge the device; Ensure pin is fully removed; Double-press the button quickly or press and hold for deactivation.
Light does not turn on.	Low battery; Button not pressed correctly.	Charge the device; Press the button once for steady light, twice for flashing light.
Alarm sounds weak.	Low battery.	Charge the device fully.

If you experience issues not covered here, please contact TECKNET customer support.

SPECIFICATIONS

Model Number	AF-2004
Siren Loudness	130 dB
Power Source	Rechargeable Lithium-Ion Battery
Charging Port	USB-C
Charging Time	Approx. 1.5 hours
Standby Time	Up to 500 days
Alarm Duration	Up to 90 minutes (continuous)
Light Duration (Steady)	Up to 3 hours (continuous)
Light Duration (Flashing)	Up to 5 hours (continuous)
Dimensions (L x W x H)	3.94 x 1.26 x 0.49 inches (100 x 32 x 12.5 mm)
Weight	0.99 ounces (28 grams)
Included Components	Personal alarm unit, keychain, USB-C cable

WARRANTY AND SUPPORT

Warranty Information

The TECKNET AF-2004 Personal Safety Alarm comes with a **36-month warranty**. To activate your warranty, please register your product on the official TECKNET website. This warranty covers manufacturing defects and ensures product reliability.
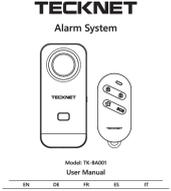
Customer Support

For any questions, technical assistance, or warranty claims, please contact the professional TECKNET customer service team. Contact details can typically be found on the official TECKNET website or on the

product packaging.

Please have your model number (AF-2004) and purchase information ready when contacting support.

Related Documents - AF-2004

	TECKNET TK-BA001 Alarm System User Manual User manual for the TECKNET TK-BA001 Alarm System, providing comprehensive instructions on installation, operation, and features. Learn how to set up and use your bike alarm.
	TECKNET Wireless Doorbell HWD01806/HWD01816 User Manual & Installation Guide Comprehensive user manual and installation guide for the TECKNET wireless doorbell system, models HWD01806 and HWD01816. Learn how to install, pair, operate, and troubleshoot your doorbell.
	TeckNet TK-MS009 Wireless Rechargeable Mouse User Manual User manual for the TeckNet TK-MS009 Wireless Rechargeable Mouse, including setup, features, and safety instructions.
	TECKNET TK-KB002 Wired Gaming Keyboard User Manual User manual for the TECKNET TK-KB002 Wired Gaming Keyboard, providing details on package contents, specifications, system requirements, usage, keyboard shortcuts, RGB lighting controls, brightness adjustments, important safety instructions, product disposal, warranty information, and compliance statements.
	TeckNet TK-MS001 Wireless Rechargeable Silent Mouse User Manual User manual for the TeckNet TK-MS001 Wireless Rechargeable Silent Mouse, detailing setup, 2.4GHz and Bluetooth connectivity, DPI settings, charging, safety precautions, warranty, and disposal instructions.
	TECKNET TK-MS317 Wireless Rechargeable Mouse User Manual User manual for the TECKNET TK-MS317 Wireless Rechargeable Mouse, covering setup, usage, charging, specifications, safety instructions, and warranty information.