BOBLOV A23

BOBLOV A23 Body Camera Instruction Manual

Model: A23 | Brand: BOBLOV

Introduction

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your BOBLOV A23 Compact Body Camera. Please read this manual carefully before using the device to ensure proper functionality and to maximize its lifespan.

Product Overview and Package Contents

The BOBLOV A23 is a compact and versatile body camera designed for various recording needs, including outdoor activities, security, and personal documentation. It features a 180° rotatable lens, 360° rotating clip, night vision capabilities, and a long battery life.



Image: BOBLOV A23 Body Camera with its accessories, including a lanyard, bike mount, and USB-C cable.

What's in the Box:

- A23 Body Camera
- Bike Mount
- Short Clip
- Lanyard
- 1/4in Mount
- User Manual
- USB-C Cable
- Adapter



Image: Detailed view of the BOBLOV A23 Body Camera and its complete packaging list, showing each included accessory.

Key Features

- **Compact and Portable Design:** Easily fits in a pocket, similar in size to a disposable lighter.
- **180° Rotatable Lens:** Offers flexible shooting angles for various scenarios.
- **360° Rotating Clip:** Allows for versatile attachment to clothing or gear.
- **Long Battery Life:** Up to 9 hours of continuous recording with a 2200mAh battery.
- **Night Vision:** Equipped with 4 IR lights for clear recording in low-light conditions (up to 5 hours of night vision recording).
- **External Memory Support:** Comes with a 64GB TF (Micro SD) card for ample storage.
- **USB-C Interface:** For fast charging and data transfer.
- **Intuitive Buttons:** Simple interface for easy operation.
- **Time Data Stamp:** Records date and time on footage for evidentiary purposes.



Image: The BOBLOV A23 Body Camera demonstrating its 180-degree rotating lens, allowing for flexible shooting angles.



Image: The BOBLOV A23 Body Camera displaying its night vision capability with 4 IR lights, showing a clear black and white image in a dark room.



Image: The BOBLOV A23 Body Camera shown next to a disposable lighter, highlighting its compact and pocket-friendly design.

Setup Guide

1. Charging the Device

Before first use, fully charge the BOBLOV A23 body camera. Connect the included USB-C cable to the camera's USB-C port and the other end to a power adapter (not included) or a computer's USB port. The battery indicator on the screen will

show charging progress. A full charge takes approximately 4 hours.

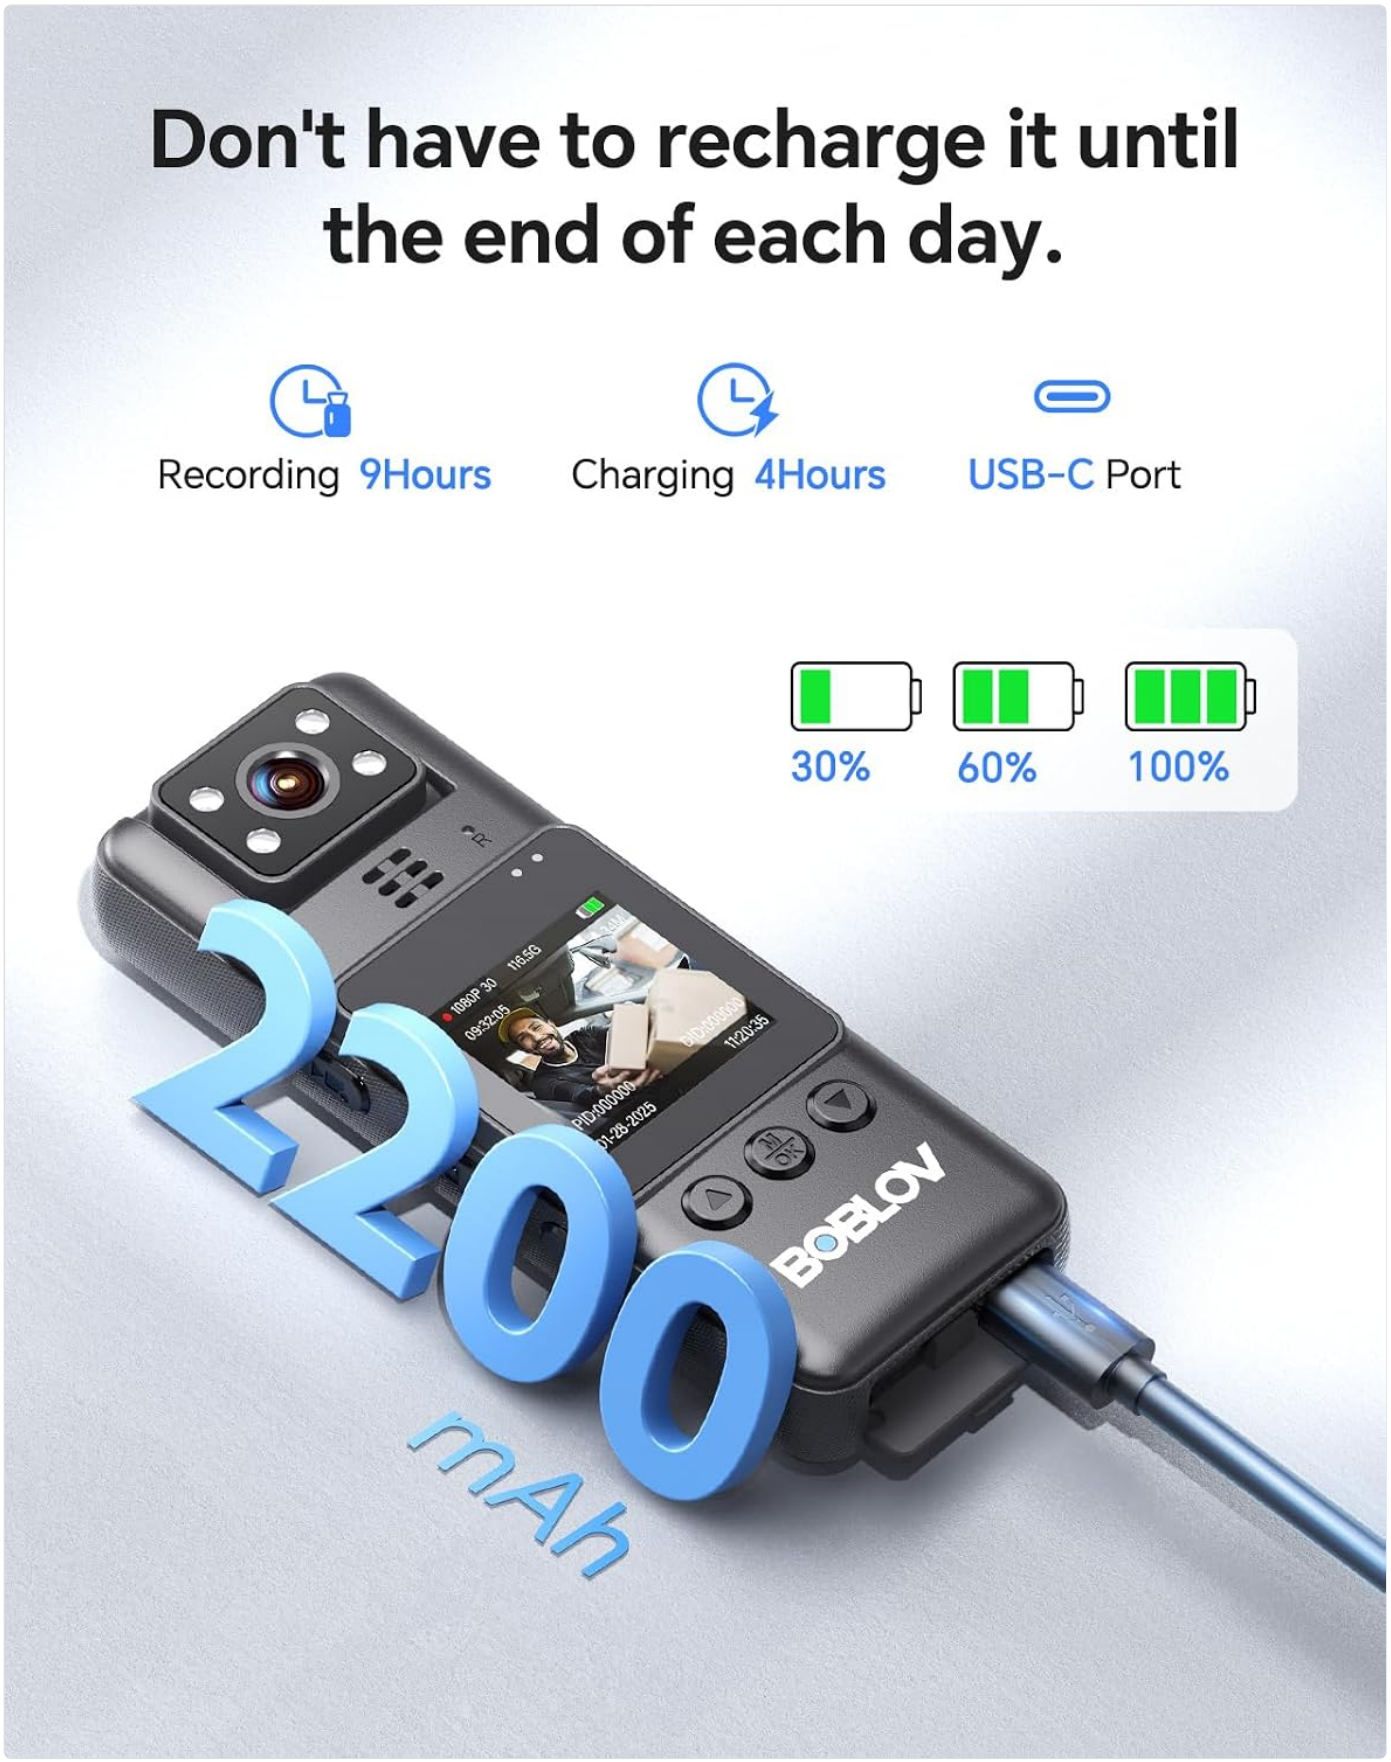


Image: The BOBLOV A23 Body Camera connected via USB-C cable, illustrating its 2200mAh battery and charging time.

2. Inserting the Memory Card

The camera comes with a 64GB TF (Micro SD) card pre-installed or included separately. Ensure the memory card is properly inserted into the designated slot before recording. The camera supports external memory for extended recording

times.



Image: A visual representation of the BOBLOV A23 Body Camera's external memory design, showing the TF card slot and a table indicating recording times for 64GB and 128GB cards.

3. Attaching Accessories

The BOBLOV A23 offers multiple wearable options:

- **360° Rotating Clip:** Attach the short clip to the back of the camera and then clip it onto clothing, pockets, or straps for hands-free recording.
- **Lanyard:** Connect the lanyard to the camera for neck-wearing, providing a secure and accessible way to carry the device.
- **Bike Mount:** Use the bike mount and 1/4in mount to securely attach the camera to bicycle handlebars for recording during rides.



Image: The BOBLOV A23 Body Camera illustrating its three wearable options: with the 360° clip, with the lanyard, and mounted on a

bicycle handlebar.

Operating Instructions

Device Controls:



Image: Diagram showing the intuitive button layout of the BOBLOV A23 Body Camera, indicating functions like Power, Video Mode, Photo Mode, Audio Mode, Playback, Menu/OK, and navigation buttons.

- **Power Button:** Located on the side, press and hold to power on/off the device.
- **Video Mode Button:** Press to switch to video recording mode.
- **Photo Mode Button:** Press to switch to photo capture mode.
- **Audio Mode Button:** Press to switch to audio-only recording mode.
- **Menu/OK Button:** Used to access settings and confirm selections.
- **Up/Down Buttons:** Used for navigation within menus and for fast forward/rewind during playback.
- **Return Button:** Used to go back in menus.
- **Playback Button:** Used to review recorded files.

Recording Video:

1. Power on the camera.
2. Press the Video Mode button to enter video recording mode.
3. Press the OK button to start recording. A recording indicator will appear on the screen.
4. Press the OK button again to stop recording.

Capturing Photos:

1. Power on the camera.
2. Press the Photo Mode button to enter photo capture mode.
3. Press the OK button to take a photo.

Audio Recording:

1. Power on the camera.
2. Press the Audio Mode button to enter audio recording mode.
3. Press the OK button to start recording audio.
4. Press the OK button again to stop recording.

Night Vision:

The A23 camera features 4 IR lights for night vision. Night vision can be manually enabled or set to automatic in the camera settings. When active, the camera records in black and white for enhanced clarity in low-light environments.

Lens Rotation:

The camera's lens can be manually rotated 180 degrees to adjust the field of view without repositioning the entire device. This is useful for capturing footage from different angles while the camera remains clipped or mounted.

Playback and Data Transfer:

To review recorded files directly on the camera, press the Playback button. Use the Up/Down buttons to navigate and the OK button to select. To transfer files to a computer, connect the camera using the provided USB-C cable. The camera is compatible with both Mac and Windows operating systems. A card reader is included for Windows users, and an adapter for Mac users, facilitating direct memory card access.



Image: The BOBLOV A23 Body Camera demonstrating compatibility with both Mac and Windows computers for data transfer, showing a card reader for Windows and a USB-C adapter for Mac.

The camera automatically embeds a time and date stamp on all recorded footage, which can be useful for documentation and evidence.

Versatile Applications:

The BOBLOV A23 is suitable for a wide range of uses, including documenting outdoor adventures, recording work duties, ensuring safety during patrols, and capturing moments during delivery, pet walking, motorcycle rides, bike riding, security patrols, lectures, or interviews.



Image: Collage showing the BOBLOV A23 Body Camera being used in various scenarios, including riding a bike, by security personnel, during travel/hiking, and for delivery.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **Firmware Updates:** Check the official BOBLOV website periodically for any available firmware updates to ensure optimal performance.

Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or faulty.	Charge the camera fully. If the issue persists, contact customer support.
Recording stops unexpectedly.	Memory card is full or corrupted; low battery.	Check memory card storage and format if necessary (this will erase data). Ensure battery is sufficiently charged.
Poor video/audio quality.	Lens is dirty; recording in low light without night vision; microphone obstructed.	Clean the lens. Activate night vision in low light. Ensure microphone is clear.
Camera not recognized by computer.	Faulty USB cable; incorrect connection mode.	Try a different USB-C cable. Ensure the camera is in data transfer mode (if applicable) when connected.

Specifications

Feature	Detail
Brand	BOBLOV
Model Number	A23
Item Weight	7.8 ounces
Package Dimensions	4.96 x 4.41 x 2.13 inches
Batteries	1 Lithium Polymer battery (included)
Color	Black
Special Features	Lightweight, Night Vision
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p
Maximum Focal Length	20 Millimeters
Maximum Aperture	f/2
Flash Memory Type	Micro SD
Video Capture Format	MOV
Supported Audio Format	AAC

Feature	Detail
Screen Size	1.3 Inches (Visible screen diagonal: 2" / 4 cm)
Connectivity Technology	USB
Battery Life (Recording)	Up to 9 hours (daytime), 5 hours (night vision)

Warranty and Support

BOBLOV provides product coverage for 24 months. For any technical assistance or inquiries, quick response is available within 24 hours, along with lifetime technical support.
For support, please visit the official BOBLOV store or contact their customer service through the details provided on their website or product packaging.

Visit the BOBLOV Store on Amazon for more information and support resources.

© 2025 BOBLOV. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question