Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MAGEASY MAPAP2255MR24

MAGEASY Odyssey Rugged Case for AirPods Pro 1st & 2nd Generation

Instruction Manual

Introduction

The MAGEASY Odyssey Rugged Case is designed to provide robust protection for your Apple AirPods Pro (1st and 2nd Generation). This case features a durable construction with an aluminum frame and shock-absorbing TPU, a secure locking mechanism, and includes a carabiner and wrist strap for enhanced portability. It supports various charging methods, ensuring your AirPods Pro are always ready for use.

Product Compatibility

This case is specifically designed for:

- Apple AirPods Pro (1st Generation)
- Apple AirPods Pro (2nd Generation)

Note: This case is not compatible with standard AirPods (2nd, 3rd, or 4th Generation).



Image Description: A visual guide illustrating that the MAGEASY Odyssey case is compatible only with AirPods Pro 1st and 2nd Generation, indicated by a checkmark, and explicitly states it does not fit AirPods 2nd, 3rd, or 4th Generation, marked with an 'X'.

Setup and Installation

1. **Insert AirPods Pro Case:** Gently place your AirPods Pro charging case into the MAGEASY Odyssey rugged case. Ensure it is seated correctly and fully aligned within the protective shell.
2. **Secure the Lid:** Close the lid of the MAGEASY case. The integrated locking mechanism will engage to secure your AirPods Pro inside.
3. **Attach Carabiner or Wrist Strap:** Use the provided metal carabiner or wrist strap by attaching it to the designated loop on the side of the case. This allows for secure attachment to bags, belt loops, or wrists.



Image Description: The MAGEASY Odyssey Rugged Case in Metal Blue Gray, shown open with AirPods Pro inside, positioned above a MagSafe charger. A black carabiner and a black wrist strap are attached to the case, demonstrating its portability features.

Operating Instructions

Opening the Case

1. **Unlock:** Press the release button on the front of the case.
2. **Open Lid:** The lid will automatically open, providing easy access to your AirPods Pro.

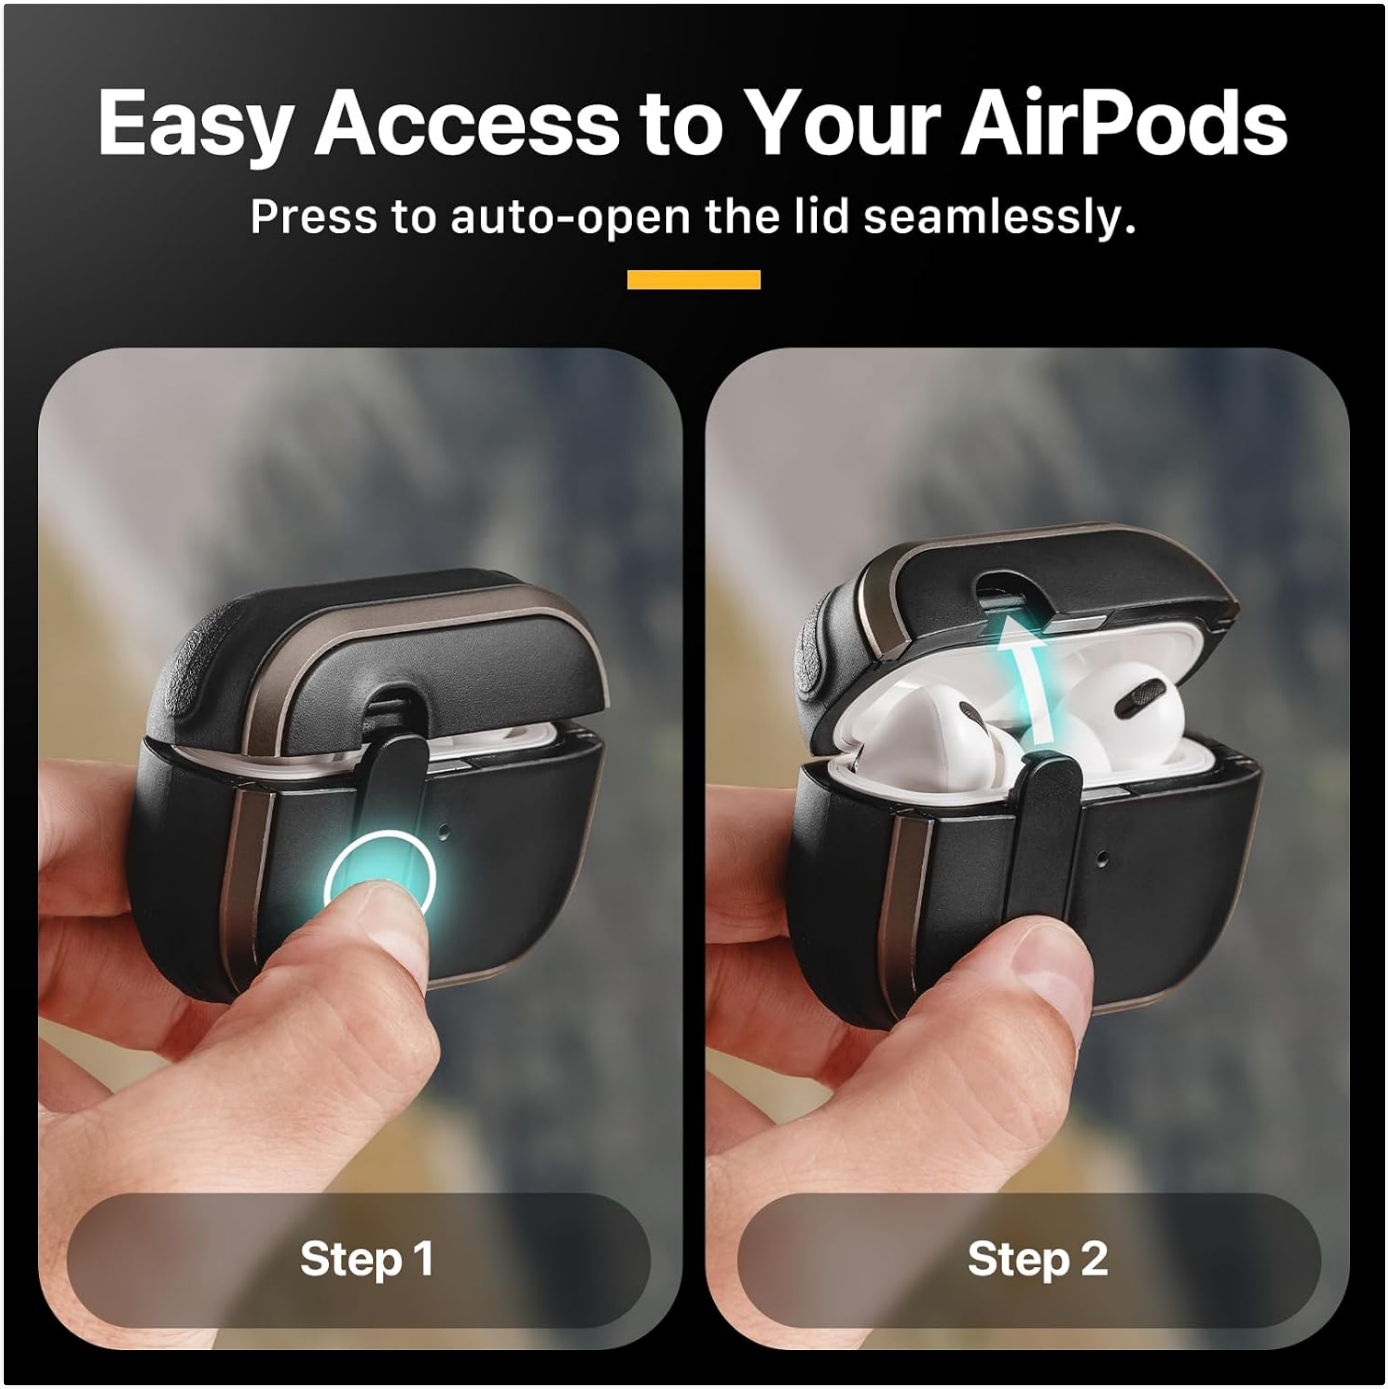


Image Description: A two-step visual guide illustrating the case's easy access feature. Step 1 shows a hand pressing the illuminated lock button on the case. Step 2 shows the case lid automatically springing open, revealing the AirPods Pro inside.

Charging Your AirPods Pro

The MAGEASY Odyssey case supports multiple charging methods:

- **Wireless Charging:** Place the case on a compatible Qi-certified wireless charging pad. The LED indicator on the AirPods Pro case will show charging status.
- **MagSafe Charging:** For AirPods Pro 2nd Generation, the case is compatible with MagSafe chargers. Align the case with the MagSafe charger for optimal connection.
- **Cable Charging:** Connect a Lightning cable (for AirPods Pro 1st Gen) or a USB-C cable (for AirPods Pro 2nd Gen) to the charging port at the bottom of the case.
- **Apple Watch Wireless Charging:** The case supports official Apple Watch wireless charging for AirPods Pro 2nd Generation.



Image Description: A comprehensive diagram illustrating the various charging options available for the MAGEASY Odyssey case. It depicts MagSafe charging, USB-C cable charging, Lightning cable charging, compatibility with an official Apple Watch wireless charger, and a standard wireless charger.

Maintenance

To ensure the longevity and optimal performance of your MAGEASY Odyssey case, follow these maintenance guidelines:

- **Cleaning:** Wipe the case regularly with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.
- **Material Care:** The case is constructed from robust TPU and an aluminum frame. While durable, avoid exposing it to extreme temperatures or direct sunlight for prolonged periods.
- **Inspection:** Periodically check the locking mechanism, carabiner, and wrist strap for any signs of wear or damage. Replace accessories if they show significant wear to maintain security.

Troubleshooting

- **Case Not Closing Securely:**
  Ensure your AirPods Pro charging case is correctly seated within the MAGEASY case. Check for any debris obstructing the closing mechanism or the lid.
- **Charging Issues:**
  Verify that the charging cable is fully inserted or that the wireless charger is properly aligned with the case. If using MagSafe, note that due to the case's rugged design and thickness, the magnetic grip might be slightly reduced, and maximum MagSafe charging speeds may not be achieved. Ensure the AirPods Pro are correctly placed inside the case for charging to initiate.
- **Lid Not Opening Automatically:**
  Ensure the release button is pressed firmly. If the issue persists, check for any obstructions around the hinge or button mechanism.
- **Carabiner or Strap Damage:**
  If the carabiner or wrist strap shows signs of damage or breakage, discontinue use and replace it to prevent accidental loss of your AirPods Pro.

Specifications

Feature	Detail
Brand	MAGEASY
Model Number	MAPAP2255MR24
Compatible Devices	AirPods Pro 2nd Gen & AirPods Pro 1st Gen
Shell Type	Robust TPU with Aluminum Frame
Form Factor	Case
Special Features	Case with lock, Heavy Duty Protection, Supports official Apple Watch wireless charging (AirPods Pro 2nd Gen), Wireless Charging Compatible
Item Weight	3.84 ounces
Package Dimensions	6.18 x 3.78 x 1.34 inches
Color	Metal Blue Gray

Warranty and Support

For information regarding product warranty, returns, or technical support, please contact MAGEASY directly through their official website or the retailer from whom the product was purchased. Please retain your proof of purchase for any warranty claims.

© 2025 MAGEASY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DMT65L2F

More documents and user manuals: **https://manuals.plus/**