Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

X-ALL MA-Q1PS4BRUSHES

X-ALL Electric Spin Power Scrubber Instruction Manual

Model: MA-Q1PS4BRUSHES

Brand: X-ALL

Product Overview

The X-ALL Electric Spin Power Scrubber is a versatile, rechargeable, and cordless cleaning tool designed to simplify your cleaning routine. Its lightweight and waterproof design, coupled with a 2-speed control, makes it effective for tackling various cleaning tasks around your home. This device is equipped with multiple interchangeable brush heads to suit different surfaces and cleaning needs.



Image: The X-ALL Electric Spin Power Scrubber shown with its main unit and several interchangeable brush heads, highlighting its versatility for different cleaning tasks.

Product Components

Your X-ALL Electric Spin Power Scrubber package includes the following items:

- **Electric Spin Scrubber Main Unit:** The handheld, rechargeable, and cordless device with 2-speed control.
- **Brush Head:** A standard brush head for general scrubbing.
- **Sponge Head:** A soft sponge head for delicate surfaces or polishing.
- **Charging Cable:** For recharging the device's internal Lithium Ion battery.
- **Extension Wand:** For reaching high or low areas without bending or stretching.



Image: A close-up view of the different brush and sponge heads, including a standard brush, a pointed brush, and a sponge, designed for various cleaning applications.

Setup

1. **Charge the Device:** Before first use, fully charge the Electric Spin Power Scrubber using the provided charging cable. The charging port is typically located under a protective cover on the handle. A full charge usually takes 3-4 hours.
2. **Attach a Brush Head:** Select the appropriate brush or sponge head for your cleaning task. Align the head with the rotating mechanism on the main unit and press firmly until it clicks into place.
3. **(Optional) Attach Extension Wand:** For extended reach, screw the extension wand onto the main unit. Ensure it is securely fastened.

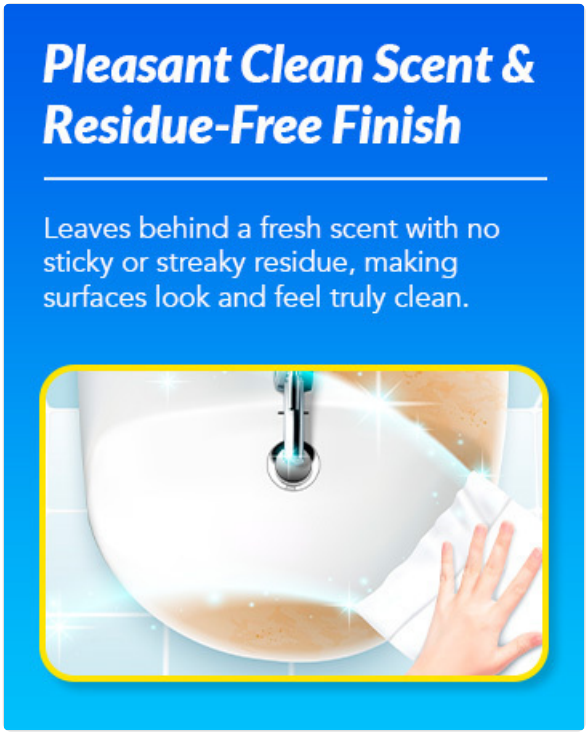


Image: A hand demonstrating the easy attachment of a brush head to the main unit of the X-ALL Electric Spin Power Scrubber.

Operating Instructions

1. **Power On/Off:** Press the power button located on the handle to turn the device on. Press it again to turn it off.
2. **Adjust Speed:** The scrubber features a 2-gear speed control. Press the speed button to toggle between low and high speeds. Use higher speeds for tougher stains and lower speeds for general cleaning or delicate surfaces.
3. **Apply Cleaning Solution:** Apply your preferred cleaning solution directly to the surface to be cleaned or to the brush head.
4. **Begin Scrubbing:** Gently press the rotating brush head against the surface and move the scrubber in a controlled manner. Allow the spinning action to do the work, avoiding excessive pressure.
5. **Waterproof Feature:** The device is waterproof, allowing for use in wet environments like showers and sinks. However, avoid fully submerging the main unit in water.

Your browser does not support the video tag.

Video: A user demonstrating the X-ALL Electric Spin Power Scrubber in action, effectively cleaning a surface with its powerful rotating brush head.

Maintenance

- **Cleaning Brush Heads:** After each use, detach the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. Allow it to air dry completely before storing.
- **Cleaning the Main Unit:** Wipe the main unit with a damp cloth to clean any external grime. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the Electric Spin Power Scrubber and its attachments in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Device Not Turning On:** Ensure the device is fully charged. If the battery is low, connect it to the charger and allow it to charge for the recommended time.
- **Brush Head Not Spinning:** Check if the brush head is securely attached. Detach and reattach it, ensuring it clicks into place. If the issue persists, ensure no debris is obstructing the rotation mechanism.
- **Reduced Power/Speed:** A low battery can cause reduced power. Recharge the device. For stubborn stains, switch to the high-speed setting.

Specifications

Brand	X-ALL
Model Number	MA-Q1PS4BRUSHES
Color	White
Handle Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	4.6"L x 2.5"W x 7.6"H
Item Weight	0.44 Kilograms (15.5 ounces)
Special Features	Cordless, Rechargeable, Waterproof, Lightweight, 2-Speed Control
Included Components	Main Unit, Brush Head, Sponge Head, Charging Cable, Extension Wand

Battery	1 Lithium Ion battery (included)
UPC	850064546026

Warranty and Support

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official X-ALL website. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DMTTP9JH

More documents and user manuals: **https://manuals.plus/**