Mattel JGB94

Mattel Jurassic World Rebirth Gigantic Thrashers Purussaurus Dinosaur Figure Instruction Manual

Product Overview

The Mattel Jurassic World Rebirth Gigantic Thrashers Purussaurus action figure brings the prehistoric Purussaurus to life with dynamic play features. This figure is designed for active battle play and dramatic display, featuring authentic sculpting, color, and texture. It also offers digital play integration through the Jurassic World Play App.

- **Rampage Attack:** Experience two distinct tail-activated attack motions.
- **Total Attack:** Move the tail up and down for a vertical chomp, and twist it left and right for a thrash and chomp action.
- **Gigantic Size:** At 14.7 inches long, this figure features detailed design and posable joints.
- **Digital Integration:** Scan the code on the dinosaur's foot with the free Jurassic World Play App for augmented reality (AR) activities and to build a digital dinosaur collection.
- **App Game:** Engage in the updated app game, 'Ride 'N Rampage: Colossal Chase!', to race vehicles and extract dinosaur DNA.

What's Included

- 1 Jurassic World Gigantic Thrashers Purussaurus dinosaur figure.

Colors and decorations may vary.

Setup

1. **Unboxing:** Carefully remove the Purussaurus figure from its packaging. Ensure all ties and restraints are detached before attempting to remove the figure.
2. **Initial Inspection:** Check the figure for any visible damage or loose parts. The figure is designed with

durable materials for active play.

3. **Familiarize with Joints:** The figure has posable joints. Gently move the limbs and tail to understand their range of motion.



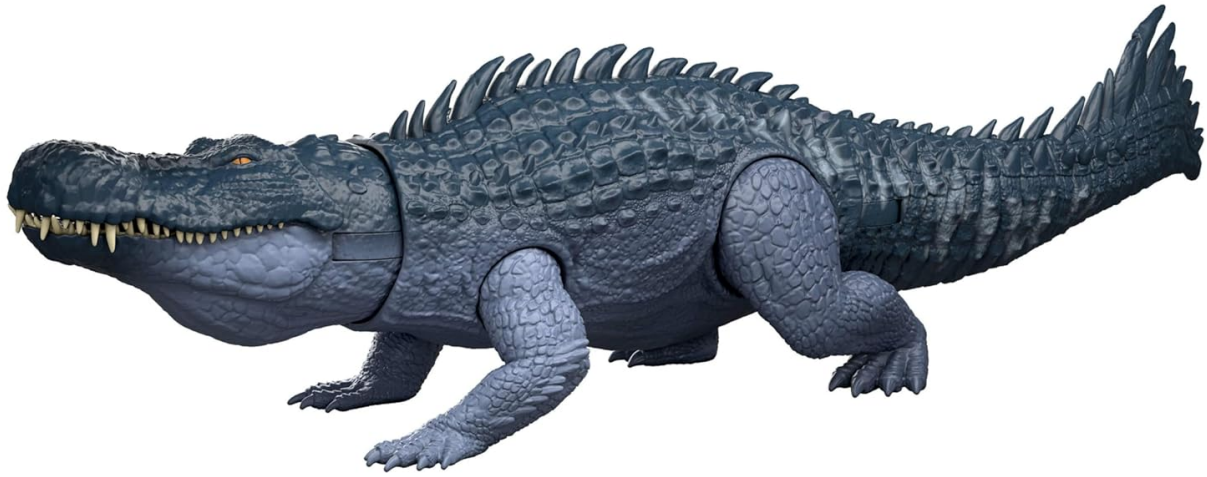


Figure shown in its packaging and removed, ready for play.

Operating the Purussaurus Figure

Tail-Activated Rampage Attacks


The Purussaurus figure features two distinct tail-activated attack motions:

1. **Vertical Chomp Attack:** To activate a ferocious vertical chomp, move the figure's tail up and down. This action will cause the Purussaurus's jaws to open and close rapidly.



Move the tail up and down for a vertical chomp attack.

2. **Thrash and Chomp Attack:** For a thrash and chomp action, twist the figure's tail left and right. This motion will cause the head to turn and the jaws to chomp.

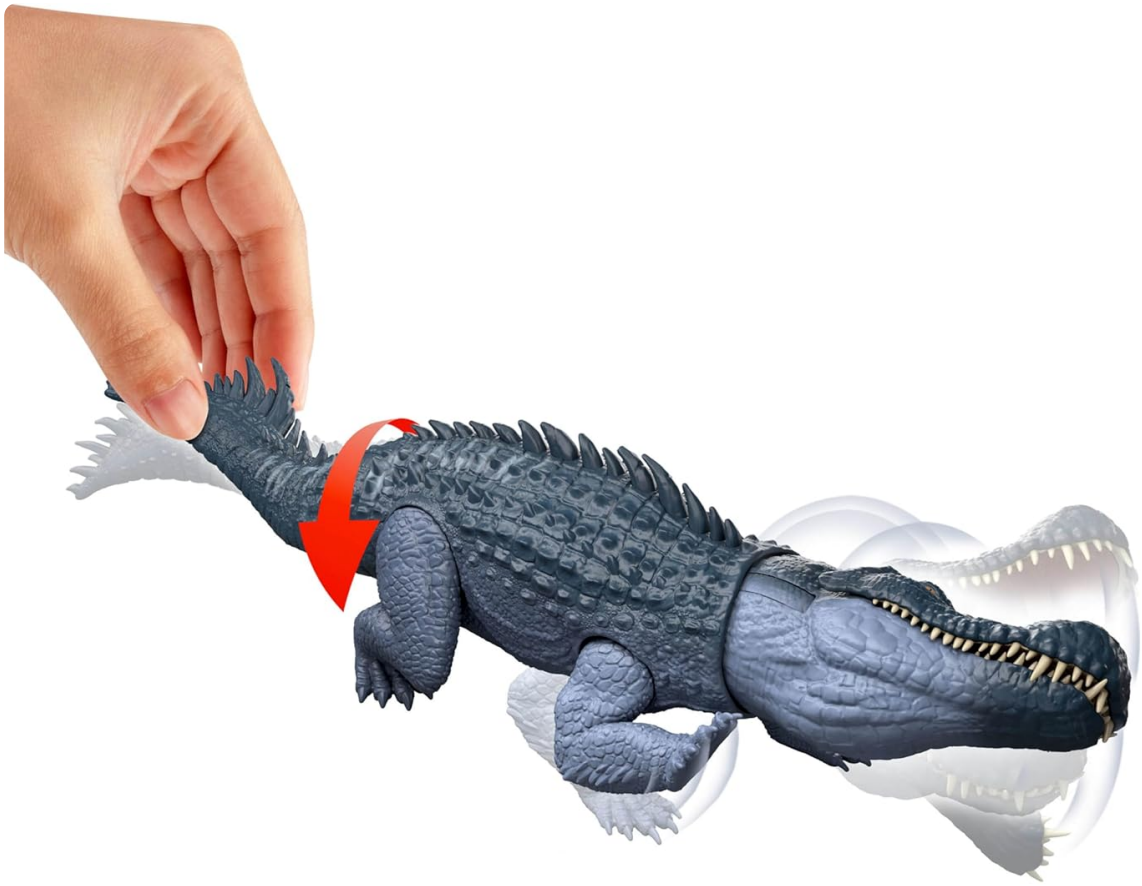

Twist the tail to change the direction of the attack.

Twist the tail left and right to activate the thrash and chomp attack.

Official Product Video: Action Features Demonstration

Your browser does not support the video tag.

This video demonstrates the various action features of the Jurassic World Gigantic Action Assortment, including the Purussaurus figure's tail-activated attacks.

Digital Play Integration

Enhance your play experience by connecting with the Jurassic World Play App:

1. **Download the App:** Download the free Jurassic World Play App on a compatible smart device (Android or iOS, not included).
2. **Scan the Tracking Code:** Locate the tracking code on the bottom of the Purussaurus figure's foot. Open the app and use its scanning feature to scan the code.



Locate and scan the tracking code on the figure's foot to unlock digital content.

3. **Unlock Content:** Scanning the code unlocks a digital version of the Purussaurus within the app, allowing access to AR activities and adding it to your digital collection.
4. **Play Games:** Participate in the 'Ride 'N Rampage: Colossal Chase!' game within the app, featuring vehicle races and DNA extraction challenges.

Maintenance

- **Cleaning:** To clean the figure, wipe it with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the paint or plastic.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight to prevent material degradation and color fading.

- **Water Exposure:** While durable, prolonged exposure to water is not recommended, especially for figures with internal mechanisms.

Troubleshooting

- **Action Feature Not Working:** If the tail-activated attacks are not functioning smoothly, gently inspect the tail and body joints for any obstructions or debris. Ensure the tail is being moved with sufficient force to engage the mechanism.
- **App Scanning Issues:** If the tracking code is not scanning, ensure good lighting and that the code is clean and undamaged. Try scanning from different angles or distances. Verify your smart device is compatible with the Jurassic World Play App.

Specifications

Feature	Detail
Product Dimensions	3.63 x 14.5 x 7.5 inches
Item Weight	1.03 pounds
Item Model Number	JGB94
Manufacturer Recommended Age	4 years and up
Release Date	July 15, 2025
Manufacturer	Mattel



The Purussaurus figure, approximately 14.7 inches long, with detailed sculpting.

Warranty and Support

For information regarding product warranty, returns, or customer support, please refer to the official Mattel website or contact their customer service department. Details are typically provided with the product packaging or can be found online.
You can visit the Mattel Store for more information:Mattel Store on Amazon

© 2025 Mattel. All rights reserved. Jurassic World is a trademark and copyright of Universal Studios and Amblin Entertainment, Inc.
Licensed by Universal Studios. All Rights Reserved.