Bellemave GZZ000143BO

Bellemave Queen Size Lift Up Storage Bed

INSTRUCTION MANUAL

Model: GZZ000143BO

Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bellemave Queen Size Lift Up Storage Bed. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Important Safety Information

Always use caution when operating the hydraulic lift system. Do not exceed the weight capacity of 1000 pounds. Follow assembly instructions carefully to prevent instability or collapse. Keep small parts away from children during assembly. Ensure all connections are secure before use.

Setup and Assembly

Assembly typically requires two people and takes approximately 1 hour. Ensure you have all parts and tools before starting. All parts are conveniently packaged in a single box.

Assembly Video Guide

Your browser does not support the video tag.

Official assembly video for the Bellemave Lift Up Storage Bed. This video demonstrates the step-by-step process for constructing the bed frame and hydraulic lift system.

Step-by-Step Assembly Instructions

1. **Unpack and Identify Parts:** Carefully unpack all components and compare them with the parts list provided in your package. Separate hardware by type.
2. **Assemble Headboard Panels:** Attach the headboard panels using the specified connectors and screws. Ensure they are aligned correctly.
3. **Attach Headboard Support Rails:** Secure the metal support rails to the assembled headboard using bolts and an Allen wrench.
4. **Assemble Side Panels:** Connect the side panels of the bed frame.
5. **Install Corner Brackets:** Attach the corner brackets to reinforce the bed frame structure.
6. **Connect Bed Frame Sections:** Join the headboard and side panels to form the main bed frame.
7. **Install Hydraulic Lift Mechanism:** Carefully attach the hydraulic lift system to the bed frame. Ensure all bolts are tightened securely. *(Refer to the assembly video for detailed visual guidance on this critical step.)*
8. **Assemble Slat Base:** Insert the wooden slats into their designated holders on the metal frame. Ensure all slats are evenly spaced and securely fitted.
9. **Attach Mattress Retainer:** Install the mattress retainer bar at the foot of the bed to prevent the mattress from sliding when the lift system is engaged.
10. **Final Checks:** Verify that all screws and bolts are tightened. Ensure the hydraulic system operates smoothly and the bed frame is stable.

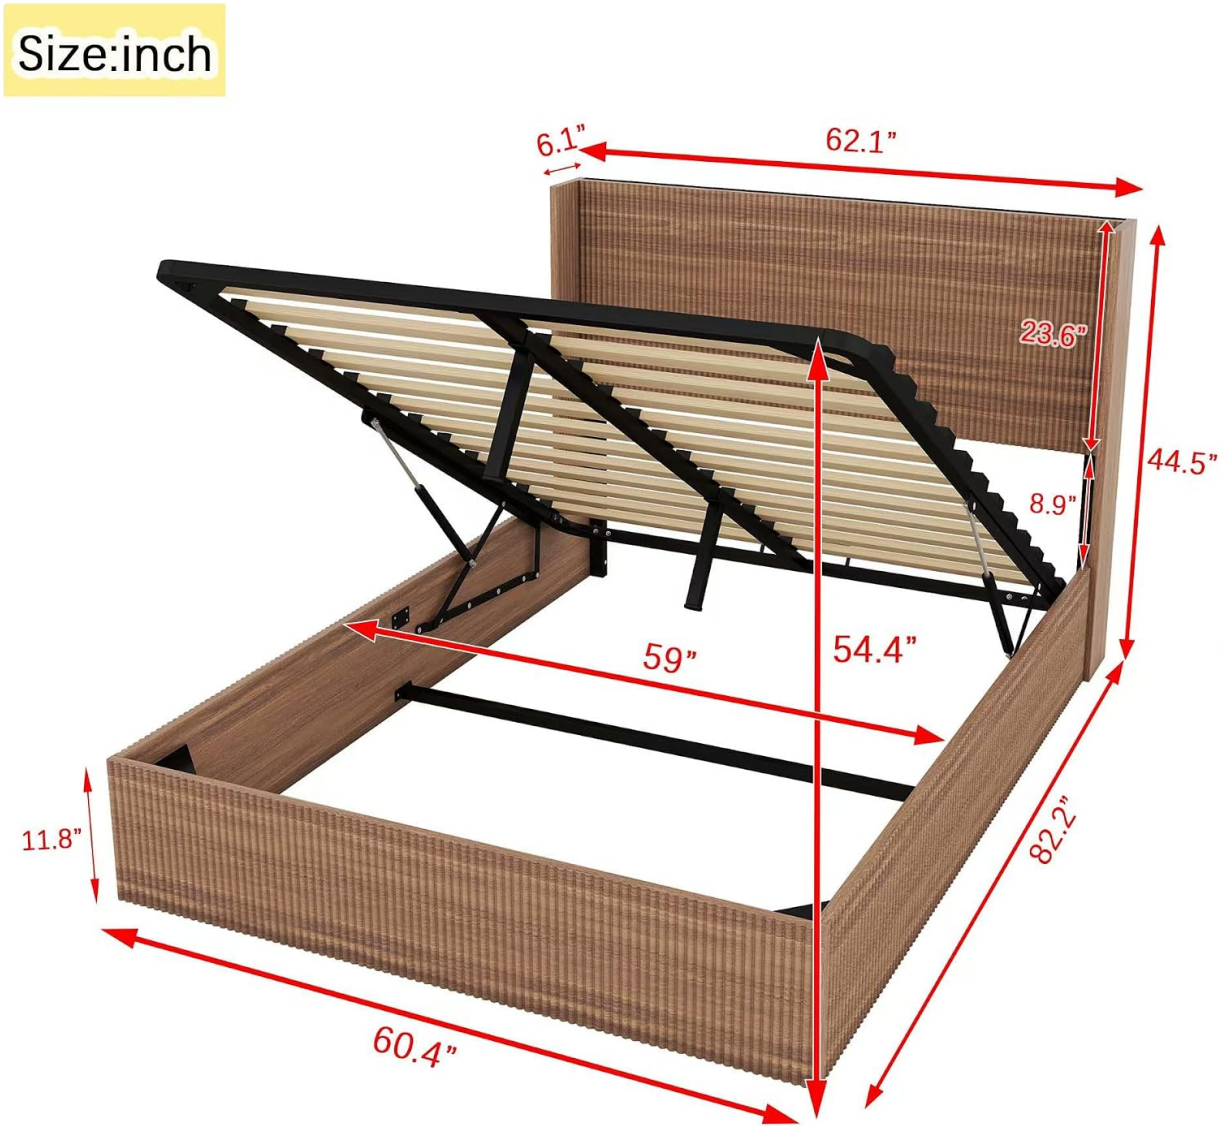


Image: The Bellemave Queen Size Lift Up Storage Bed with the mattress platform raised, revealing the spacious storage compartment and the

hydraulic lift system.

Operating Instructions

Using the Lift-Up Storage System

1. **Clear the Bed:** Remove any heavy items or bedding from the mattress before lifting.
2. **Locate Lifting Strap/Handle:** Find the designated strap or handle, usually located at the foot end of the bed.
3. **Lift the Mattress Platform:** Firmly grasp the strap/handle and lift the mattress platform upwards. The hydraulic system will assist in raising the platform smoothly and holding it in the open position.
4. **Access Storage:** Once the platform is fully raised, you can access the storage compartment underneath.
5. **Close the Platform:** To close, gently pull the mattress platform downwards. The hydraulic system will control the descent, ensuring a slow and safe closing. Ensure no objects are obstructing the closing mechanism.



Image: The Bellemave Queen Size Lift Up Storage Bed in a fully assembled state, ready for use.

Maintenance

- **Regular Inspection:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent noise.
- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Hydraulic System:** The hydraulic lift system is designed for long-term use and generally requires no special maintenance. If you notice any stiffness or unusual operation, contact customer support. Do not attempt to lubricate or disassemble the hydraulic cylinders yourself.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 1000 pounds for the bed frame.

Troubleshooting

Bed Frame is Noisy/Creaking:
Ensure all assembly bolts and screws are securely tightened. Loose connections are a common cause of noise. The bed frame includes noise-reducing plastic stoppers for slats; verify these are correctly installed.

Hydraulic Lift System is Stiff or Difficult to Operate:
Check that the mattress is properly centered and not excessively heavy. The hydraulic system is designed to assist with lifting a standard mattress. If the issue persists, ensure no objects are obstructing the mechanism. Do not force the system. Contact customer support if the problem continues.

Mattress Slides Off When Lifting:
Ensure the mattress retainer bar at the foot of the bed is correctly installed and secured. This bar is designed to hold the mattress in place during operation.

Specifications

Model Number:	GZZ000143BO
Size:	Queen
Product Dimensions (L x W x H):	81.9" x 62" x 44.49"
Material:	Wood
Weight Capacity:	Up to 1000 pounds
Assembly Required:	Yes

Special Feature:	No Box Spring Needed, Hydraulic Lift Storage System

Warranty and Customer Support

For warranty information or assistance with your Bellemave Queen Size Lift Up Storage Bed, please refer to the warranty card included with your purchase or contact Bellemave customer support directly. You can typically find contact details on the manufacturer's website or through your retailer.
Online Support: Visit the official Bellemave website for FAQs, additional resources, and contact options.