K&F CONCEPT KF31.122 (Compatible with Fujifilm XT30, XT30 II, XS10, XT20, XT10, XE3, XF10, XT100, XA1, XA2)

K&F CONCEPT Camera Screen Protector Instruction Manual

Model: KF31.122

1. Product Overview

The K&F CONCEPT Camera Screen Protector provides robust protection for your camera's LCD screen. Crafted from 0.3mm 9H hardness tempered glass, it is designed to resist scratches, impacts, and daily wear. This protector maintains 99.99% high light transmittance for clear visuals and responsive touch sensitivity. It also features anti-fingerprint, waterproof, and dustproof properties.

Compatibility: This screen protector is compatible with Fujifilm XT30, XT30 II, XS10, XT20, XT10, XE3, XF10, XT100, XA1, and XA2 camera models.

Package List

· Camera Screen Protector x3
· Vacuum Cleaning Cloth x1
· Application Tools x3



Image: The K&F CONCEPT screen protector shown on a Fujifilm camera, highlighting its perfect compatibility with models like the XT30, XT30 II, XS10, XT20, XT10, XE3, XF10, XT100, XA1, XA2.



Camera Screen Protector Compatible with Fujifilm XT30 XT30 II XS10 XT20 XT10 XE3 XF10 XT100 XA1 XA2

K&F CONCEPT



Invisible Shield

Image: Diagram illustrating the anti-fingerprint, waterproof, and dustproof features of the screen protector, acting as an invisible shield for the camera screen.

2. Package Contents

Please verify that all items are present in your package:

- Camera Screen Protector x3
- Vacuum Cleaning Cloth x1
- Application Tools x3 (includes wet wipes, dry wipes, dust removal stickers, guide stickers)
- Hot Shoe Cover x3



Image: A visual representation of the package contents, including three screen protectors, cleaning cloth, application tools, and hot shoe covers.

3. Installation Guide

Follow these steps for a bubble-free installation:

1. **Check Compatibility:** Before starting, ensure the protective film matches your camera screen size.
2. **Clean Screen (Wet Wipe):** Gently wipe the camera screen surface with the provided wet wipe to remove dirt and oils.
3. **Dry Screen (Dry Wipe):** Use the dry wipe to thoroughly dry the screen surface, ensuring no moisture remains.
4. **Remove Dust:** Use the dust removal sticker to lift any remaining dust particles.**Do not press firmly** to avoid leaving residue.
5. **Peel Backing Film:** Carefully peel off the backing film from the screen protector. Avoid touching the adhesive side.
6. **Align and Apply:** Align the screen protector with the edges of your camera screen. Once aligned, gently press the center of the protector and allow it to adhere automatically.



Image: A six-step visual guide demonstrating the installation process of the screen protector on a camera screen.

Hot Shoe Cover Installation

Simply slide the hot shoe cover into your camera's hot shoe mount until it sits securely. This protects the hot shoe from

dust, moisture, and accidental impacts.

4. Operating Instructions

Once installed, the screen protector functions seamlessly with your camera's display. Its high transparency ensures that the original screen's colors and brightness are maintained without distortion. Touch sensitivity remains fully responsive, allowing for normal operation of touch-enabled camera screens.

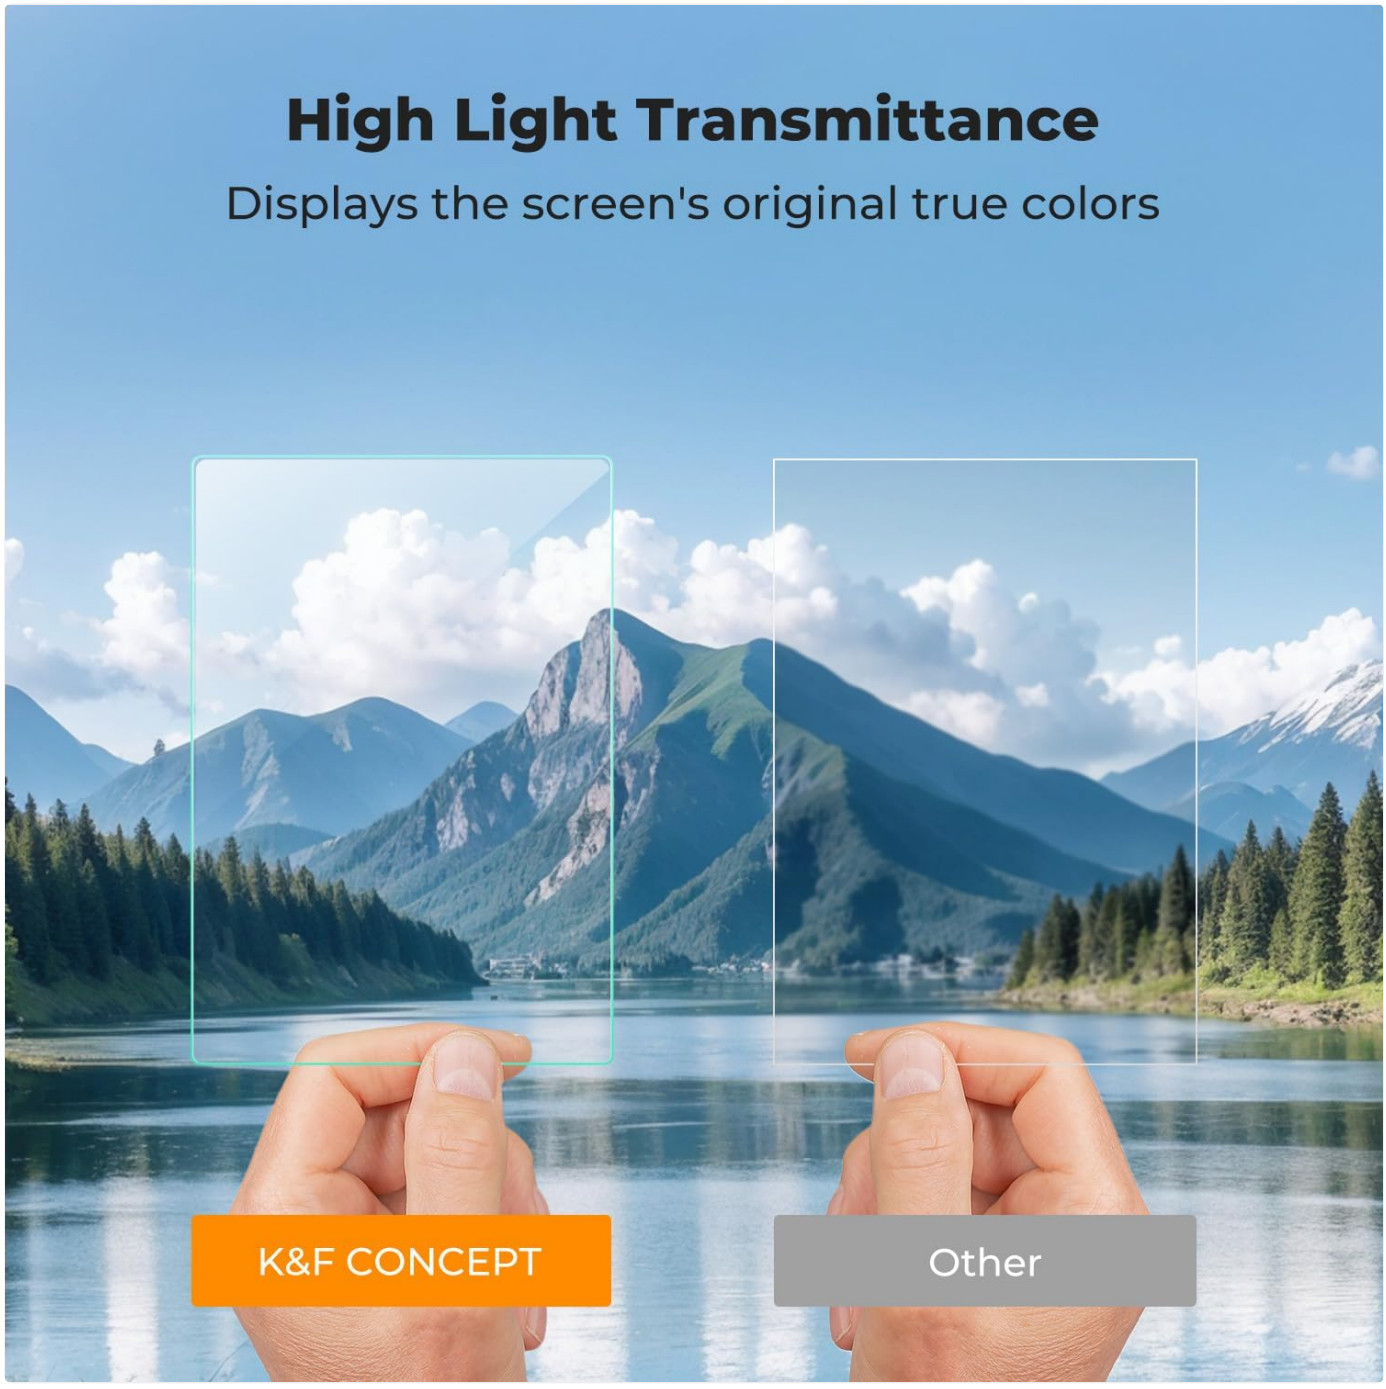


Image: A visual comparison demonstrating the high light transmittance of the K&F CONCEPT screen protector versus a standard protector, showing true color display.

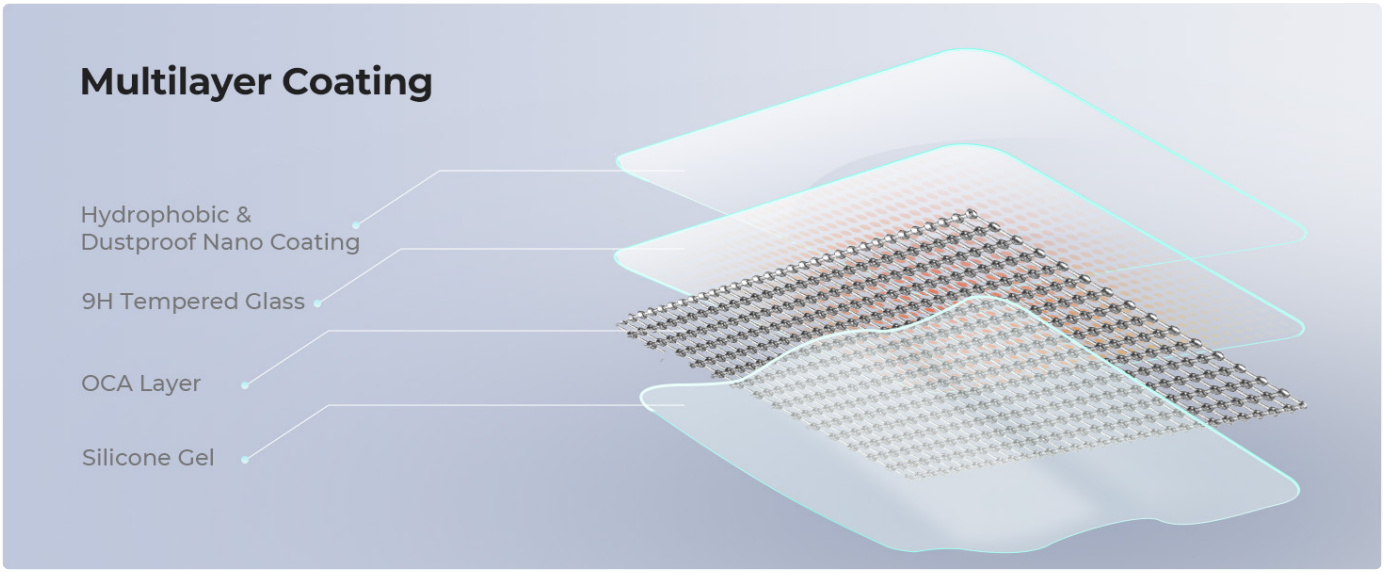


Image: A side-by-side comparison illustrating the superior HD Ultra High Clarity provided by the K&F CONCEPT screen protector, showing a clear butterfly image.

5. Maintenance

To maintain the clarity and effectiveness of your screen protector:

- Use a soft, lint-free cloth (such as the included vacuum cleaning cloth) to gently wipe the screen protector.
- For stubborn smudges, lightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals.
- The anti-fingerprint coating helps reduce smudges, but occasional cleaning is recommended for optimal viewing.

6. Troubleshooting

Common Issues and Solutions:

- **Bubbles After Installation:**
  - **Small Bubbles:** Often disappear within 24-48 hours. Gently push them towards the edge with a soft cloth.
  - **Large Bubbles/Dust Trapped:** If a bubble persists due to trapped dust, carefully lift the nearest corner of the protector with a dust removal sticker or a piece of tape, use another dust removal sticker to remove the dust from the screen and the adhesive side of the protector, then reapply.
- **Screen Protector Not Adhering Properly:**
  - Ensure the screen was thoroughly cleaned and dried before application. Any oil or dust can prevent proper adhesion.
  - If the edges are lifting, gently press them down. If the issue persists, the protector may need to be replaced.
- **Reduced Touch Sensitivity:**
  - Ensure the protector is correctly aligned and fully adhered.
  - Clean the screen protector surface.

7. Specifications

Brand	K&F CONCEPT

Model Number	KF31.122
Material	Tempered Glass
Item Hardness	9H
Clarity	99.99%
Thickness	0.3mm
Special Features	Touch Sensitive, Anti-Scratch, Bubble-Free, Anti-Fingerprint, Waterproof, Dustproof
Compatible Camera Models	Fujifilm X-A1, X-A2, X-E3, X-S10, X-T10, X-T20, X-T30, X-T30 II, XF10, XT100

8. Warranty and Support

For warranty information or technical support, please contact K&F CONCEPT directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question