oneisall PW04

oneisall Wireless Cat Water Fountain User Manual

Model: PW04

Introduction

Thank you for choosing the oneisall Wireless Cat Water Fountain. This innovative pet drinking fountain is designed to provide your feline friend with a continuous supply of fresh, clean water, promoting better hydration and overall health. Its cordless design offers unparalleled flexibility in placement, while advanced features like motion sensing and multi-stage filtration ensure convenience and purity. Please read this manual carefully before use to ensure proper operation and maintenance.

Product Overview

The oneisall PW04 Wireless Cat Water Fountain is a 3.5L (118oz) capacity pet drinking solution featuring a durable stainless steel construction and a long-lasting rechargeable battery. Key features include:

- **Cordless and Portable Design:** Freedom to place the fountain anywhere without being restricted by power outlets, enhancing safety by eliminating chewable wires.
- **Extended Battery Life:** Equipped with a 5000mAh rechargeable Li-battery, offering up to 60 days of standby time on a single charge.
- **Premium Stainless Steel:** Constructed from 304 stainless steel, which is hygienic, easy to clean, dishwasher-safe, and helps prevent feline acne.
- **Multiple Water Flow Modes:** Features Sensing Mode (motion-activated), Intermittent Mode (timed dispensing), and Constant Mode (continuous flow when plugged in).
- **Advanced Filtration System:** Includes activated carbon filters to remove impurities, hair, debris, and odors, ensuring fresh-tasting water.
- **Ultra-Quiet Operation:** The water pump operates at less than 30dB, providing a peaceful environment for both pets and owners.
- **Large Capacity with Water Level Window:** 3.5L capacity suitable for multiple cats, with a transparent window for easy water level monitoring.



Image: The oneisall Wireless Cat Water Fountain, showcasing its sleek stainless steel design and integrated water level window.

Package Contents

Please check the package contents upon unboxing to ensure all items are present:

- 1 x 3.5L Cordless Smart Water Fountain (Main Unit)
- 1 x Adapter (for charging)
- 3 x Filter Cartridges

Setup Instructions

Follow these steps to set up your oneisall Wireless Cat Water Fountain:

1. **Unpack Components:** Carefully remove all components from the packaging.

2. **Rinse Components:** Rinse the stainless steel bowl and other parts (excluding the pump and adapter) thoroughly with water.
3. **Install Filter:** Soak a new filter cartridge in clean water for 5 minutes before first use. Insert the filter into its designated slot in the pump assembly.
4. **Assemble Fountain:** Place the pump assembly into the main unit. Ensure it is securely seated.
5. **Fill with Water:** Fill the stainless steel bowl with clean water up to the MAX fill line. Do not overfill.
6. **Charge Battery:** For initial use, fully charge the fountain's internal battery using the provided adapter. Connect the adapter to the charging port on the base unit. A full charge can last up to 60 days in standby mode.
7. **Select Mode:** Choose your desired operating mode (Sensing, Intermittent, or Constant) using the controls on the fountain.

Your browser does not support the video tag.

Video: A demonstration of the oneisall 3.5L smart cordless cat water fountain installation process, showing how to assemble and prepare the fountain for use.



Image: The oneisall wireless cat water fountain placed in a living space, demonstrating its cordless convenience and freedom from power outlets.

Operating Modes

The oneisall Wireless Cat Water Fountain offers three distinct operating modes to suit your pet's preferences and your lifestyle:

- **Sensing Mode (Motion Sensor):**

In this mode, the fountain will dispense water for 30 seconds when a pet approaches within 39 inches (1 meter) of the sensor. This conserves battery life and encourages pets to drink when they are near.

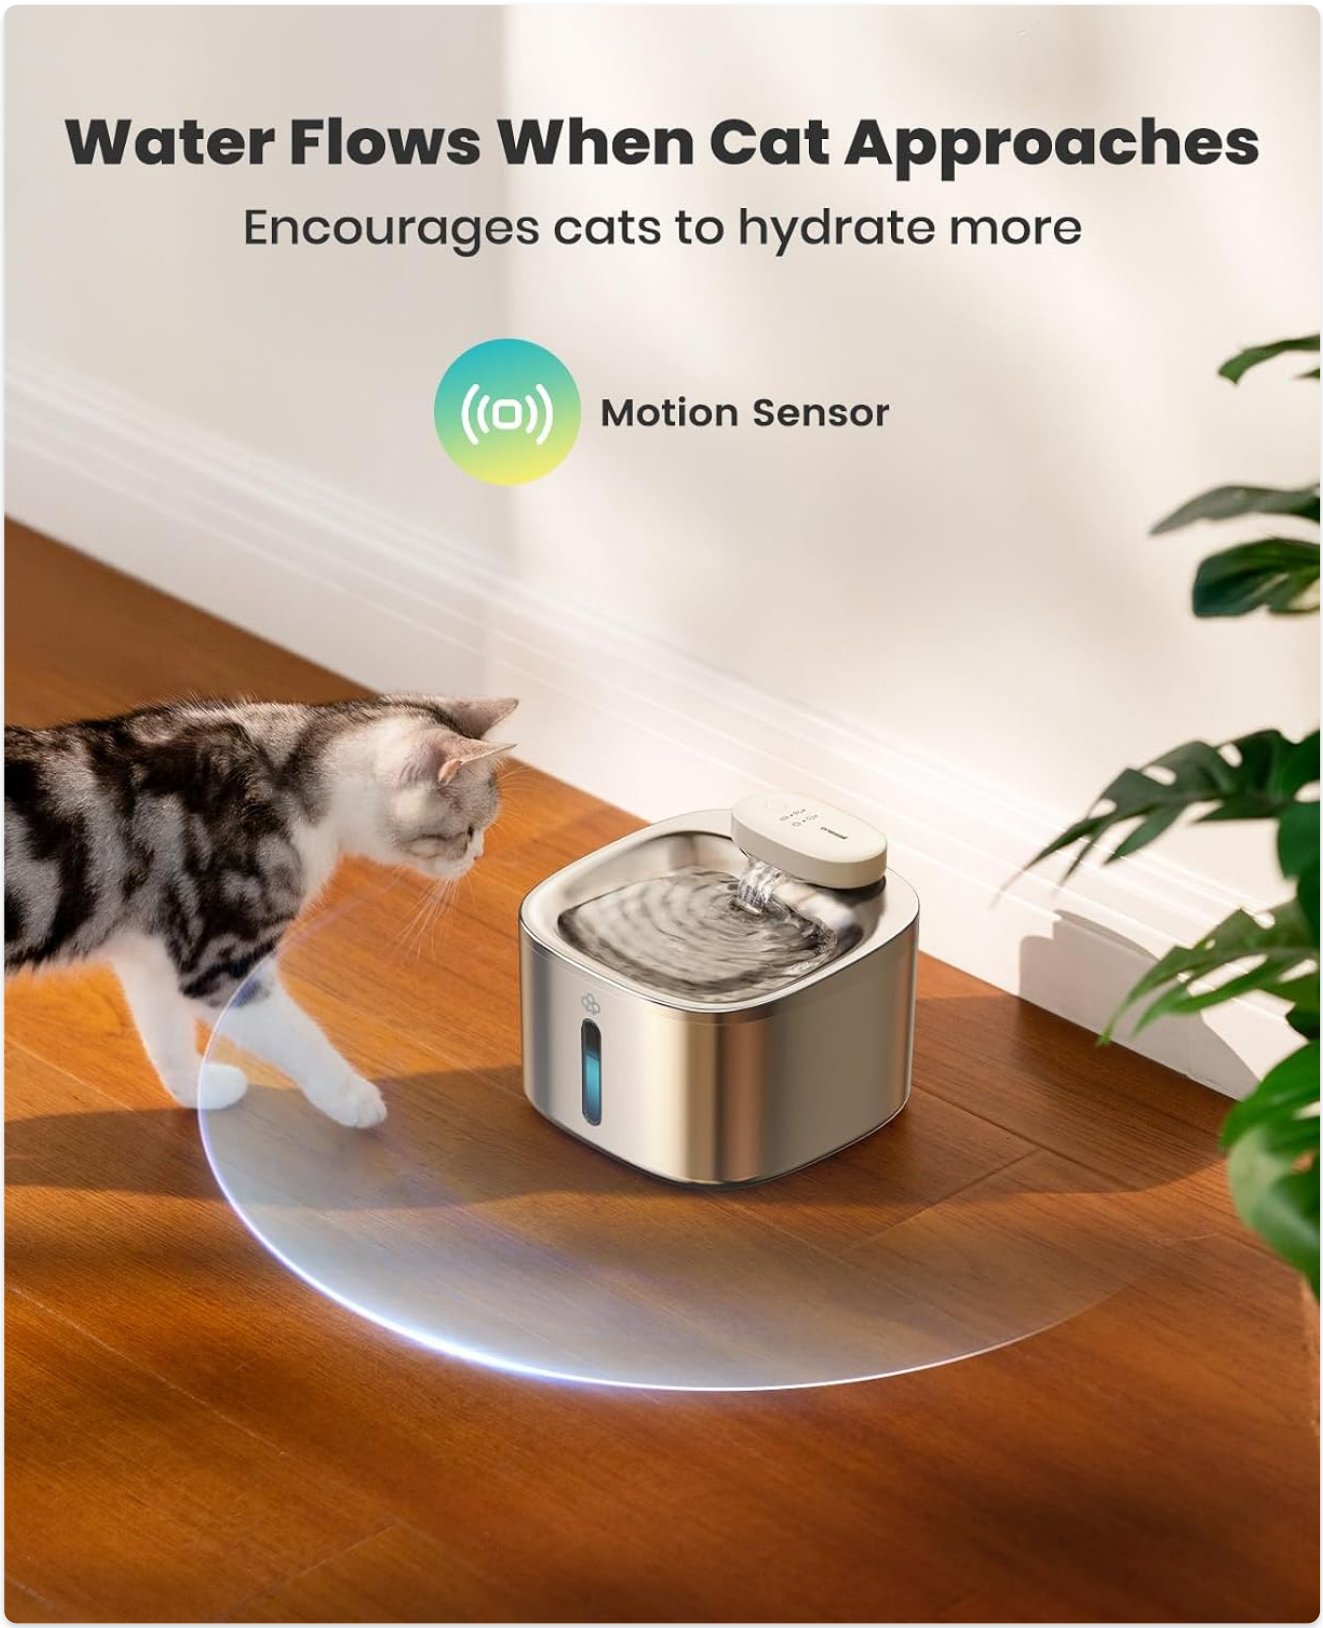


Image: A cat approaching the fountain, activating the motion sensor to dispense water.

- **Intermittent Mode:**
  The fountain will dispense water for 30 seconds at intervals of 30 minutes. This mode provides regular access to fresh water while still being energy efficient.
- **Constant Mode:**
  When the fountain is plugged into a power outlet, it will operate in continuous flow mode, providing a constant stream of water. This mode is ideal for pets who prefer continuous water flow or when battery conservation is not a concern.

Maintenance

Regular cleaning and maintenance are crucial for the longevity of your fountain and the health of your pet. The stainless steel construction makes cleaning easy.

Cleaning the Fountain:

- **Daily:** Check the water level and refill as needed.
- **Weekly:** Disassemble the fountain and clean all parts (except the pump and adapter) with mild soap and water. The stainless steel components are dishwasher-safe. Rinse thoroughly to remove any soap residue.
- **Pump Cleaning:** Clean the pump regularly to prevent mineral buildup and ensure optimal performance. Refer to the pump's specific instructions for detailed cleaning.



Image: The stainless steel components of the fountain shown in a dishwasher, highlighting ease of cleaning.

Filter Replacement:

The fountain includes a multi-filtration system with activated carbon filters. For optimal water quality, replace the filter cartridge every 2-4 weeks, or more frequently if you have multiple pets or notice reduced water flow.

- Remove the old filter cartridge.
- Rinse the new filter cartridge under running water for a few minutes to remove any loose carbon dust.

- Insert the new filter into the filter slot, ensuring it is properly seated.



Image: An illustration of the multi-layer filtration system, showing how it removes impurities from the water.

Troubleshooting

If you encounter issues with your oneisall Wireless Cat Water Fountain, please refer to the following common solutions:

Problem	Possible Cause	Solution
Fountain not dispensing water.	Low battery; water level too low; pump clogged; incorrect mode selected.	Charge the battery; refill water to appropriate level; clean the pump and filter; ensure correct operating mode is selected.
Water flow is weak.	Filter clogged; pump dirty; low water level.	Replace filter; clean pump; refill water.
Fountain is noisy.	Low water level; pump not properly seated; foreign object in pump.	Refill water; ensure pump is securely placed; clean pump thoroughly.
Motion sensor not working.	Sensor obstructed; battery low; not in Sensing Mode.	Clear any obstructions around the sensor; charge battery; switch to Sensing Mode.



Image: A graphic illustrating the low noise level of the fountain, comparing it to common household sounds.

Specifications

Feature	Detail
Model Name	PW04

Feature	Detail
Brand	oneisall
Capacity	3.5L (118 fl oz)
Material	304 Stainless Steel
Battery	5000mAh Rechargeable Li-battery
Noise Level	≤30dB
Dimensions (L x W x H)	7.8" x 7.8" x 6" (19.8 x 19.8 x 15.2 cm)
Item Weight	2 Pounds (952 g)
Power Input	DC 5V/1A
Included Components	Fountain unit, Adapter, 3 Filter Cartridges

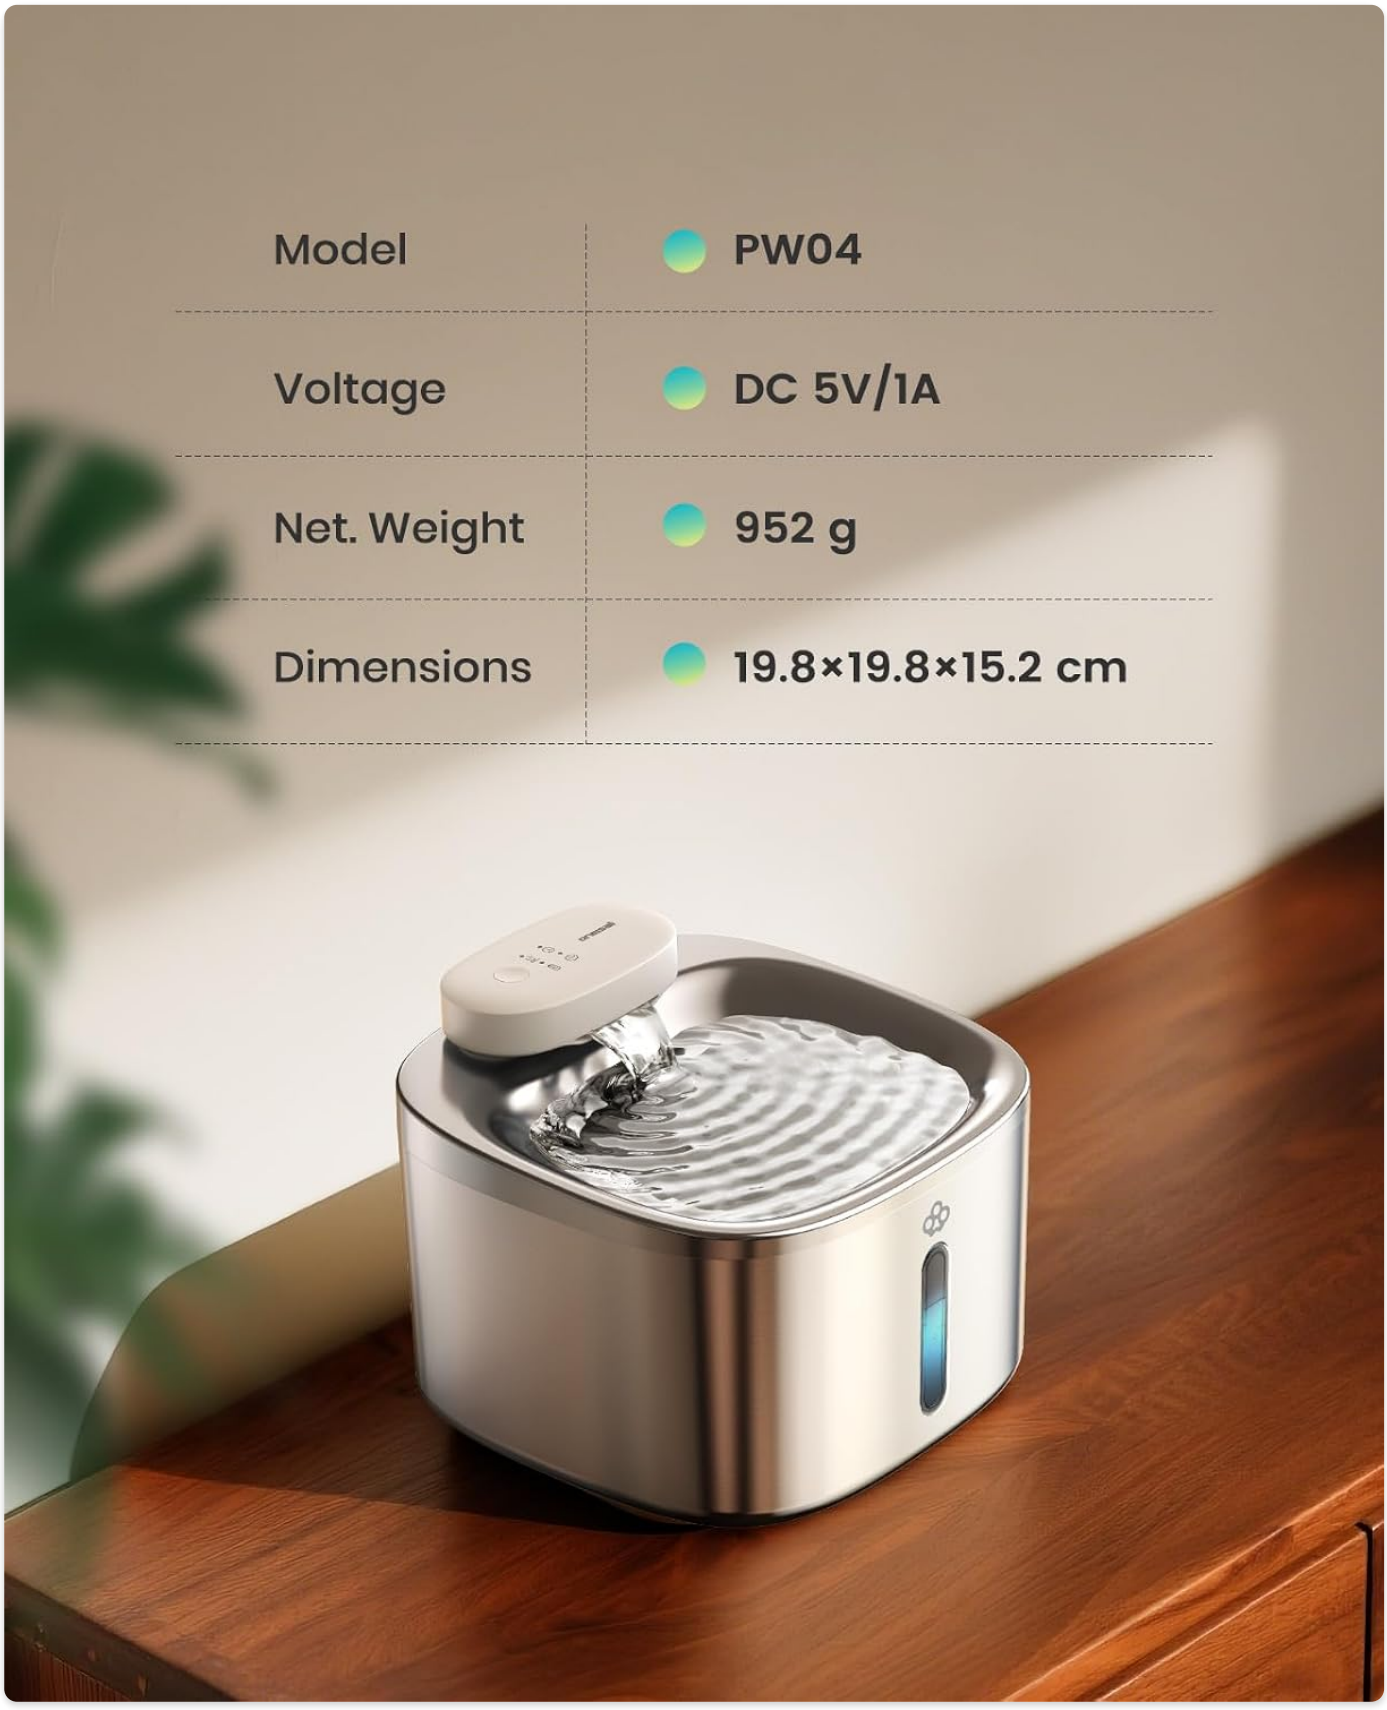


Image: A detailed graphic displaying the key specifications of the oneisall PW04 cat water fountain.

Warranty and Support

The oneisall Wireless Cat Water Fountain comes with a**2-Year Manufacturer Warranty**, ensuring peace of mind regarding product quality and performance.

For any questions, technical assistance, or warranty claims, please contact oneisall customer service. They offer**24-hour customer service** to assist you.

You can typically find contact information on the product packaging, the official oneisall website, or through your purchase platform (e.g., Amazon seller page for "ONEISALL Direct").
Note: Keep your purchase receipt or order number as proof of purchase for warranty purposes.

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question