Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P16

Proscenic P16 Cordless Vacuum Cleaner User Manual

Model: P16

INTRODUCTION

Thank you for choosing the Proscenic P16 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Proscenic P16 Cordless Vacuum Cleaner and its components.

The Proscenic P16 is a versatile cordless vacuum cleaner designed for efficient cleaning across multiple surfaces. It features a powerful motor, long runtime, bendable wand, anti-tangle brush, and green light technology to enhance visibility of dust.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

Package Contents

Verify that all items are present in the package:

- Main Body (Handheld Unit)
- Battery Pack
- Bendable Tube
- Floor Brush with Green Light
- Power Adapter
- Wall Mount
- Crevice Tool
- Extra Air Inlet HEPA Filter
- User Manual
- Cleaning Brush



Figure 2: All components included in the Proscenic P16 package.

Assembly

Follow these steps to assemble your Proscenic P16 Cordless Vacuum Cleaner:

1. **Attach the Bendable Tube:** Insert the bendable tube into the main body (handheld unit) until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the bendable tube, ensuring it locks firmly.

3. **Install the Battery:** Slide the battery pack into the designated slot on the main body until it clicks. Ensure it is fully seated.
4. **Charge the Battery:** Before first use, fully charge the battery using the provided power adapter. You can charge the battery while it's attached to the vacuum or separately.



Figure 3: Assembly of the main vacuum components.

OPERATION

Operating your Proscenic P16 is straightforward. Familiarize yourself with its features for optimal cleaning performance.

Powering On/Off and Suction Modes

Press the power button on the main body to turn the vacuum on or off. The digital LED screen will display the current suction mode and remaining battery life. Cycle through the three suction modes (Eco, Normal, Turbo) by pressing the mode selector button on the display.

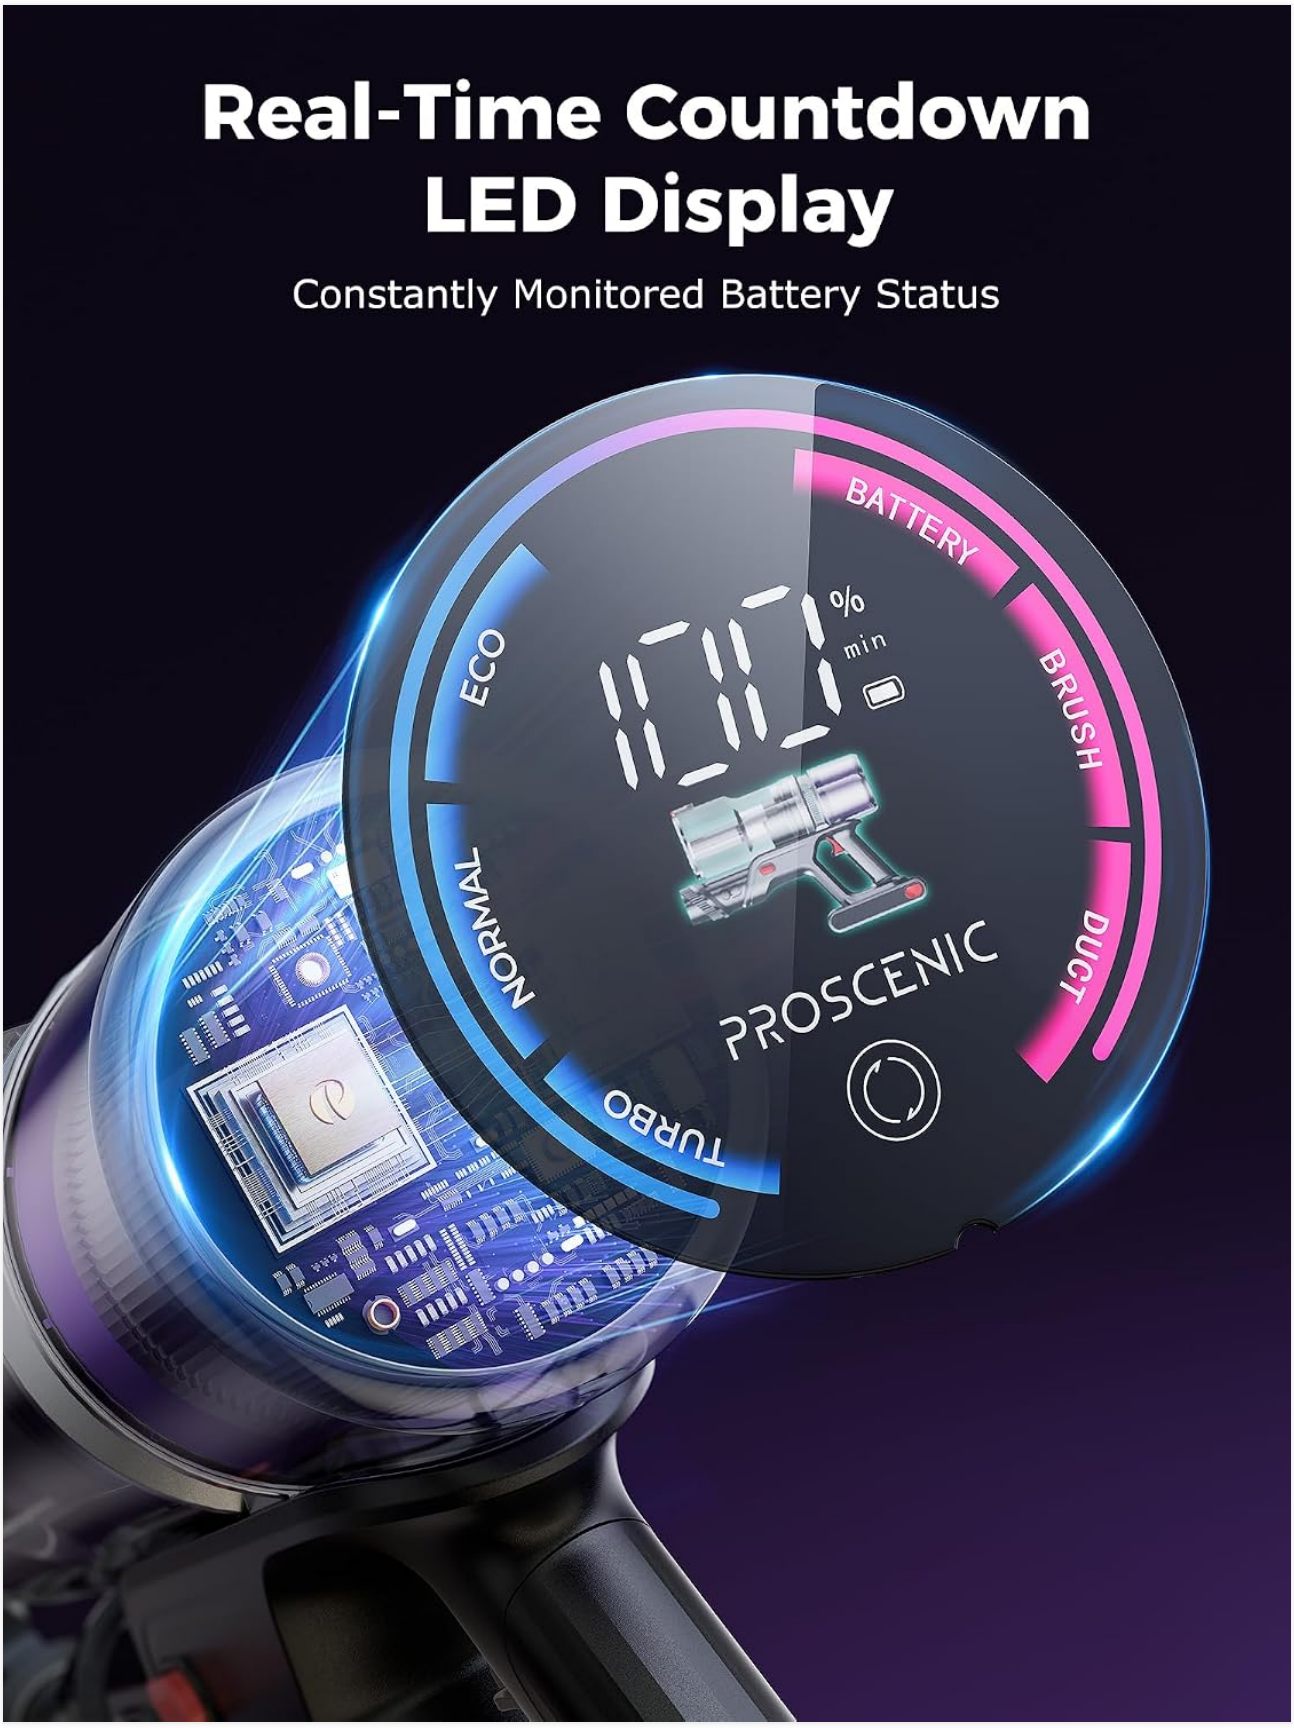


Figure 4: Digital LED display for real-time monitoring of battery and mode settings.

The P16 offers up to 45 Kpa/550W powerful suction, effectively tackling various debris on different surfaces.



Figure 5: Demonstrating 45Kpa suction for multi-surface cleaning.

Bendable Wand and Green Light Technology

The 180° bendable wand allows for easy cleaning under furniture without needing to bend down. Simply press the release button on the wand to articulate it. The integrated green LED lights on the floor brush illuminate dust and debris that might be invisible to the naked eye, ensuring thorough cleaning.



Figure 6: The 180° bendable vacuum tube for effortless cleaning under furniture.



Figure 7: The anti-tangle V-brush with green light technology revealing hidden dust.

Handheld Conversion

The main body of the vacuum can be detached from the tube and floor brush to function as a handheld vacuum. Use the included crevice tool or built-in round brush for cleaning tight corners, upholstery, or even your car interior.



Figure 8: Versatile handheld conversion for detailed cleaning.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

To empty the dustbin, detach it from the main body. Press the release button to open the bottom flap and dispose of the collected debris. It is recommended to empty the dustbin after each use or when it reaches the MAX fill line.



Figure 9: Easy one-click dustbin emptying.

Cleaning Filters

The Proscenic P16 features a 6-layer filtration system, including HEPA filters. For best performance, clean the filters regularly. Twist to remove the filter assembly from the dustbin. Tap off loose dirt and rinse the filters under running water. Ensure filters are completely dry before reassembling and reinserting into the vacuum.



Figure 10: The 6-layer advanced filtration system.

Cleaning the Brush Roll

The anti-tangle V-shaped guiding bristle brush is designed to minimize hair tangles. However, occasional cleaning may be necessary. To remove the brush roll, locate the release tab on the side of the floor brush and slide it out. Remove any tangled hair or debris using the provided cleaning brush or scissors. Reinsert the brush roll until it clicks into place.



Figure 11: The anti-tangle V-brush design for reduced hair entanglement.

Troubleshooting

If you encounter issues with your Proscenic P16, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power	Dustbin is full, filters are clogged, or brush roll is obstructed.	Empty dustbin, clean filters, and remove any obstructions from the brush roll.
Brush roll not spinning	Hair or debris tangled around the brush roll, or brush roll is not properly installed.	Clean the brush roll and ensure it is securely reinstalled.
Short runtime	Battery not fully charged, or operating in Turbo mode for extended periods.	Fully charge the battery. Use Eco or Normal mode for longer cleaning sessions.

Specifications

- **Brand:** Proscenic
- **Model Name:** P16
- **Special Feature:** Lightweight, 180° bendable wand, green light reveals dust, 550W 45KPa suction, Anti-Tangle Brush, HEPA Filtration
- **Filter Type:** HEPA Filter
- **Is Cordless?:** Yes
- **Capacity:** 1000 Milliliters (Dustbin)
- **Wattage:** 550 watts
- **Runtime:** Up to 55 minutes (depending on mode)
- **Maximum Suction:** 45 KPa
- **Recommended Uses:** Home, Pet Hair
- **Form Factor:** Stick
- **Color:** Blue
- **Product Dimensions:** 9.91"L x 3.93"W x 45.66"H
- **Item Weight:** 6.69 pounds
- **Batteries:** 1 AAA batteries required (included for display)

Warranty and Support

Proscenic products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to purchase replacement parts, please visit the official Proscenic website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Visit the Official Proscenic Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DNK4G98T

More documents and user manuals: **https://manuals.plus/**