ropelux RP1138-Black20

ropelux Ceiling Fan with Lights User Manual

Model: RP1138-Black20

1. Introduction

The ropelux Ceiling Fan with Lights is designed to provide both cooling and illumination in a single fixture. The crystal-like shiny lampshade is suitable for various decor styles, from modern to traditional. This fixture will elevate the look of any room, adding a touch of glamour and sophistication. It offers advanced control options including a remote and a smart application, allowing for versatile operation of its fan and lighting functions.



Figure 1: Overview of ropelux Ceiling Fan with Lights features.

2. Safety Information

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- Ensure the power supply is disconnected at the circuit breaker before installation or maintenance.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring, consult a qualified electrician.
- Do not use this fixture with a dimmer light switch or a fan control switch. It is designed to work with a standard 120V AC wall switch. The dimming and fan speed functions are controlled by the provided remote or the smart application.

- Ensure the mounting structure can support the weight of the ceiling fan.
- Keep hands, hair, and clothing clear of the fan blades when the fan is operating.
- Do not attempt to repair or modify the unit yourself. Contact customer support for assistance.

3. Package Contents

Verify that all components are present and undamaged. The ropelux ceiling fan is pre-assembled for easier installation.

- ropelux Ceiling Fan with Light Fixture (Pre-assembled)
- Remote Control (requires 2 AAA batteries, not included)
- Mounting Hardware (screws, wire nuts, metal bracket, safety rope)
- User Manual



Figure 2: Key components of the ropelux Ceiling Fan.

4. Installation

The ropelux flush mount ceiling light is designed for easy installation as it comes pre-assembled, eliminating the need to join multiple frame pieces. Follow these steps for a safe and secure setup:

1. **Prepare for Installation:**
    - Turn off power at the circuit breaker to the outlet box where you will be installing the fan.
    - Ensure the existing electrical box is securely mounted and capable of supporting the fan's weight.
2. **Mount the Bracket:**
    - Attach the metal mounting bracket to the electrical outlet box using the provided screws.
3. **Make Electrical Connections:**
    - Carefully connect the fan's wires to the household wiring using the provided wire nuts. Follow standard wiring color codes (e.g., black to black, white to white, ground to ground).
    - Utilize the safety rope to temporarily hang the ceiling fan to the metal bracket during wiring, ensuring stability and ease of connection.
4. **Secure the Fixture:**
    - Once wiring is complete, carefully lift the fan fixture and align it with the mounting bracket. Secure the fixture to the bracket using the designated screws.
5. **Restore Power:**
    - Turn the power back on at the circuit breaker.

Important Note on Wall Switches:

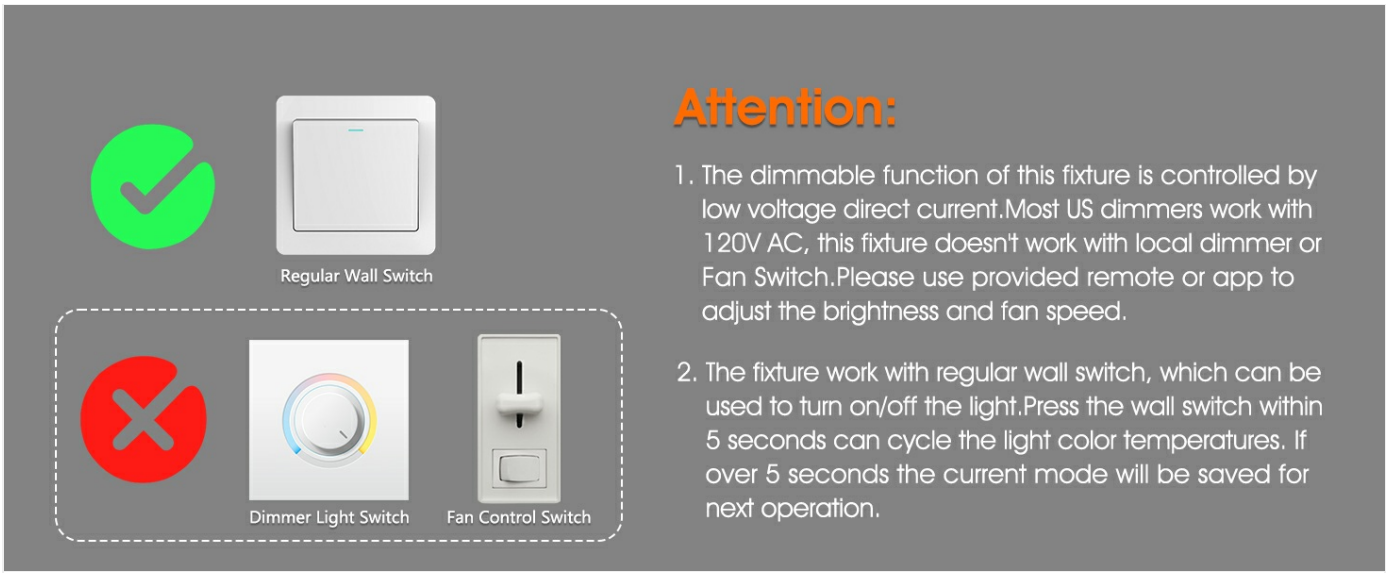


Figure 3: Wall switch compatibility.

- The dimmable function of this fixture is controlled by low voltage direct current. Most US dimmers work with 120V AC, therefore, this fixture does **NOT** work with local dimmer or fan switches.
- Please use the provided remote or the smart application to adjust brightness and fan speed.
- The fixture works with a regular wall switch to turn the light on/off. Pressing the wall switch within 5 seconds can cycle the light color temperatures. If more than 5 seconds pass, the current mode will be saved for the next operation.

5. Operating Instructions

5.1 Remote Control Operation

The included remote control provides full functionality for your ropelux ceiling fan and light. Ensure 2 AAA batteries are installed (not included).

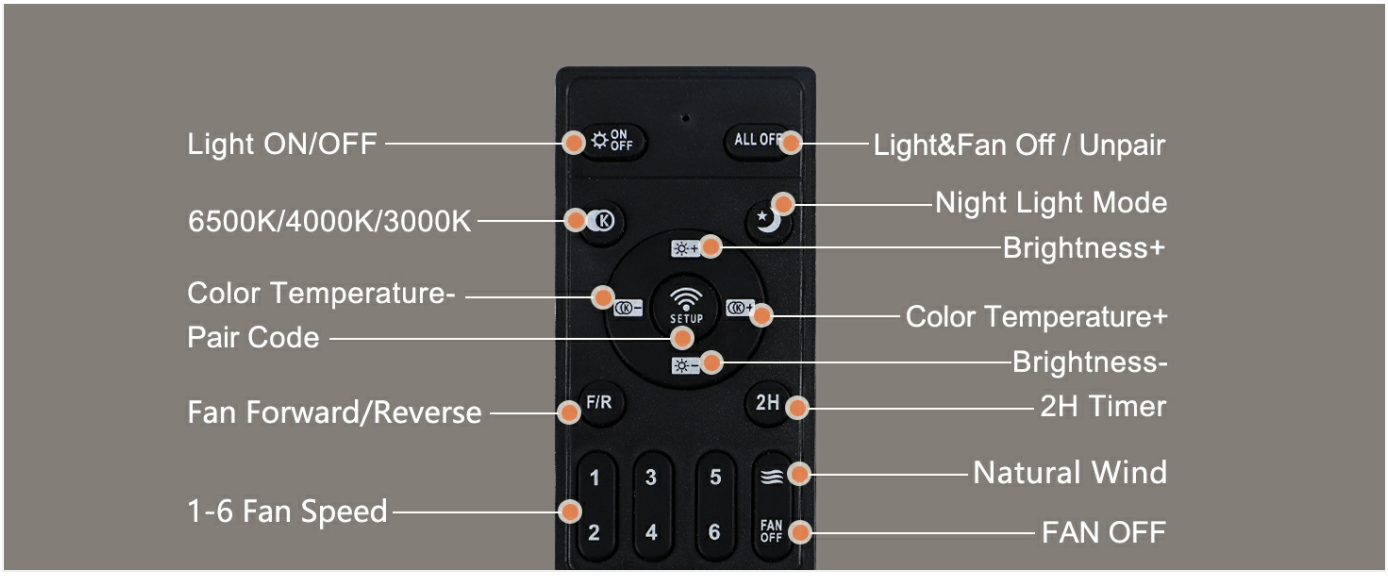


Figure 4: Remote Control Functions.

- **Light ON/OFF:** Turns the light on or off.
- **6500K/4000K/3000K:** Cycles through preset color temperatures (Cool White, Neutral White, Warm White).
- **Color Temperature +/-:** Adjusts the color temperature steplessly.
- **Brightness +/-:** Adjusts the light brightness steplessly from 10% to 100%.
- **Fan Forward/Reverse (F/R):** Changes the fan's rotation direction for summer (downward airflow) or winter (upward airflow).
- **1-6 Fan Speed:** Selects one of six fan speeds.
- **2H Timer:** Sets a 2-hour timer for the fan and light to turn off automatically.
- **Natural Wind:** Activates a mode that simulates natural breeze by varying fan speed.
- **Night Light Mode:** Activates a low brightness, warm light setting.
- **Light & Fan Off / Unpair:** Turns off both light and fan. Can also be used for unpairing.
- **FAN OFF:** Turns off the fan.



Figure 5: Remote control with optional holder.

5.2 Smart App Control Operation

For enhanced control and additional features, download the dedicated smart application to your smartphone or tablet.

- Search for the "ropelux" app (or specified app name in packaging) on your device's app store.
- Follow the in-app instructions to pair your ceiling fan with the application.
- The app allows for setting different modes, timer functions, and offers comprehensive control over light and fan settings.



Figure 6: Smart App control interface.

5.3 Fan Operation

The fan features a powerful motor and 7 specially-angled curved blades to provide excellent airflow for rooms ranging from 160-270 sq.ft.

- **Speed Control:** Choose from 6 fan speeds using the remote or app.
  - **Speeds 1-2:** Soft wind, ideal for sleep.
  - **Speeds 3-4:** Natural wind, suitable for daily use.
  - **Speeds 5-6:** Cool wind, effective for exercise or strong cooling.
- **Reversible Function:** The fan has two directions of rotation to optimize comfort throughout the year.
  - **Downward Airflow (Summer Mode):** Creates a cooling effect.
  - **Upward Airflow (Winter Mode):** Helps circulate warm air trapped near the ceiling, improving room warmth and reducing humidity.



Figure 7: Reversible fan for all seasons.



Figure 8: Six wind speed options for different scenarios.

5.4 Light Operation

The integrated LED light offers versatile illumination with adjustable color temperature and brightness.

- **Color Temperature (CCT) Changeable:** The light provides 3 CCT options: 3000K (warm white), 4000K (natural white), and 6500K (bright white). You can cycle through these presets or adjust steplessly using the remote or app.
- **Dimmable:** Stepless dimming allows you to adjust the brightness from 10% to 100% to create the perfect ambiance. The light output is up to 5000 lumens.
- **Anti-glare:** Designed to be eye-friendly, providing high brightness without dazzling.



Figure 9: Stepless dimming and color temperature adjustment.



Figure 10: Examples of 3000K-6500K adjustable lighting in various rooms.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:**
  - Before cleaning, ensure the power is turned off at the circuit breaker.
  - Wipe the fan blades and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish or electrical components.
  - Avoid getting water into the motor housing or electrical connections.
- **Blade Inspection:** Periodically check the fan blades for any dust buildup that might affect balance or airflow.
- **Tightness Check:** Occasionally check that all screws and connections are secure.

7. Troubleshooting

If you encounter any issues, refer to the following troubleshooting guide. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Fan does not operate / Light does not turn on.	No power supply; Loose wiring; Remote control batteries dead or not paired.	Check circuit breaker. Ensure all wire connections are secure. Replace remote batteries (2 AAA). Re-pair remote if necessary (refer to remote pairing instructions in app or specific product guide).
Fan or light functions are erratic.	Interference; Remote control issues; App connection issues.	Ensure no other devices are causing interference. Re-pair remote. Check app connection and update if needed.
Light does not dim or change color temperature.	Incorrect wall switch used; Remote/App not used.	Ensure you are using a standard ON/OFF wall switch, not a dimmer or fan control switch. Use only the provided remote or the smart app for dimming and CCT adjustments.
Fan makes unusual noise.	Loose screws; Blades unbalanced; Obstruction.	Check and tighten all mounting screws. Ensure blades are clean and free of obstructions.

8. Specifications



Figure 11: Product Dimensions.

Feature	Detail
Brand	ropelux
Model Number	RP1138-Black20 (Item Model Number: RP-IOL)
Product Dimensions	21 cm (L) x 50 cm (W) x 12 cm (H) / 20 inches (Diameter) x 5 inches (Height)
Weight	3.33 kg
Color	Minimal-black
Material	Metal base, Aluminum frame, Acrylic lampshade, PC fan blades
Power Source	Corded Electric (120V AC)
Light Output	5000 Lumens (Max)

Feature	Detail
Color Temperature	3000K-6500K (Steplessly adjustable)
Fan Speeds	6 Speeds
Recommended Room Size	160-270 sq.ft
Control Method	Remote Control, Smart App Control, Wall Switch (ON/OFF only)
Batteries (Remote)	2 AAA batteries (not included)
Indoor/Outdoor Usage	Indoor
Country of Origin	China

9. Warranty and Support

ropelux is committed to providing quality products and customer satisfaction.

- **Warranty:** This product comes with a 3-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
- **Customer Support:** If you encounter any problems or have questions regarding your ropelux ceiling fan, please contact our customer support team. We aim to resolve your issues within 24 hours.
- For support, please refer to the contact information provided on the product packaging or the official ropelux website.

© 2025 ropelux. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question