Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TESSAN TS-WRC03US00/BH18C

TESSAN Wireless Remote Control Outlet Instruction Manual

Model: TS-WRC03US00/BH18C

1. Introduction

Thank you for choosing the TESSAN Wireless Remote Control Outlet. This device provides a convenient way to control your indoor electrical appliances remotely. It is designed for ease of use, offering a reliable solution for managing lights, fans, and other small appliances with a simple press of a button. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and safety.



Image: The TESSAN wireless remote control outlet and its accompanying remote control unit.

2. Product Overview

Components:

- **Wireless Remote Control Outlet:** Plugs into a standard wall outlet and provides a controlled power socket.
- **Remote Control:** Used to wirelessly turn the connected appliance ON or OFF.

- **Magnetic Sheet:** For convenient mounting of the remote control.

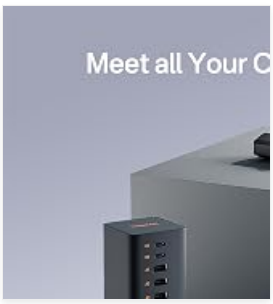


Image: Contents of the product package, including the outlet, remote, manual, strong magnet, and stickers.

3. Specifications

Feature	Specification
Model Number	TS-WRC03US00/BH18C
Operation Mode	ON-OFF
Current Rating	10 Amps
Operating Voltage	125 Volts (AC)
Wattage	1250 Watts (Max)
Control Method	Remote
Remote Range	Up to 100 feet (30 meters)
Dimensions (L x W x H)	2.24 x 1.5 x 2.36 inches
Item Weight	4.2 ounces
Battery Cell Type	Alkaline (Included)
Material	Copper (Contact Material)

4. Setup Instructions

The TESSAN Wireless Remote Control Outlet is designed for simple plug-and-play operation. The remote control is pre-programmed to work with the outlet.

1. **Insert Remote Battery:** Ensure the battery is correctly installed in the remote control. The battery is typically included.
2. **Plug in the Outlet:** Insert the wireless remote control outlet into a standard 125V AC wall socket. The outlet is compact and designed not to block adjacent sockets.
3. **Connect Appliance:** Plug the appliance you wish to control into the TESSAN remote control outlet. Ensure the appliance's power switch is in the ON position if it has one.
4. **Test Operation:** Use the remote control to turn the connected appliance ON and OFF.

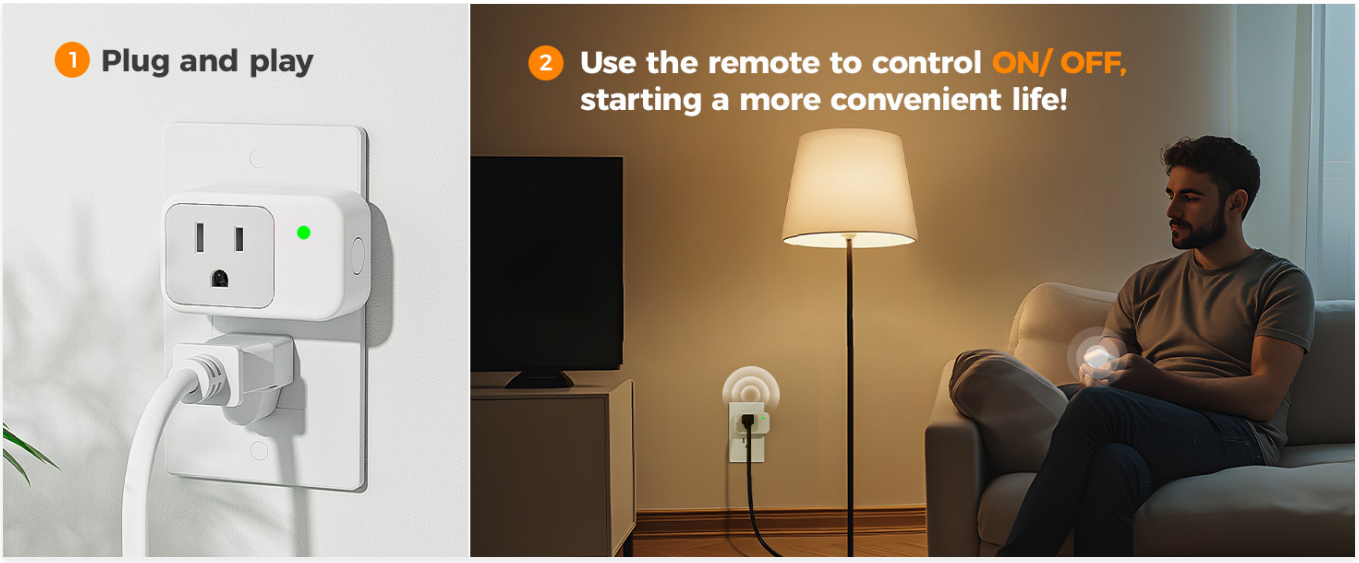


Image: Illustration of plugging the remote control outlet into a wall socket and using the remote to control a lamp, demonstrating the simple plug-and-play setup.

5. Operating Instructions

Operating the TESSAN Wireless Remote Control Outlet is straightforward:

- **Turning ON:** Press the 'ON' button on the remote control to supply power to the connected appliance.
- **Turning OFF:** Press the 'OFF' button on the remote control to cut power to the connected appliance.
- **Range:** The remote control operates effectively up to 100 feet (30 meters), even through walls and doors, allowing control from various locations within your home.



Image: A hand holding the remote control, demonstrating its 100-foot long-range RF signal capability, working through doors and walls to control devices in another room.



Image: A diagram showing the remote control outlet's versatility, suitable for controlling various small appliances such as lamps, fans, coffee makers, and string lights.

Magnetic Remote Feature:

The remote control includes a magnetic back and comes with iron sheets, allowing it to be conveniently affixed to metal surfaces like refrigerators or other suitable locations. This helps prevent misplacement of the remote.



Image: The back of the remote control showing its magnetic feature and how it can be attached to various surfaces using the included iron sheet, preventing it from getting lost.

6. Maintenance

- **Cleaning:** Wipe the outlet and remote control with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Battery Replacement:** Replace the remote control battery when its range or responsiveness decreases. Refer to the remote's battery compartment for the correct battery type.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

7. Troubleshooting

- **Appliance does not turn ON/OFF:**
  - Ensure the TESSAN outlet is securely plugged into the wall socket.
  - Verify that the appliance is properly plugged into the TESSAN outlet and its own power switch (if any) is in the ON position.

- Check the remote control battery and replace it if necessary.
- Ensure you are within the 100-foot operating range.

- **Remote control signal is weak or intermittent:**
  - Replace the remote control battery.
  - Reduce the distance between the remote and the outlet.
  - Minimize obstructions (e.g., thick walls, large metal objects) between the remote and the outlet.
- **Power outage behavior:** During a power outage, the wireless remote control outlet will remain in the OFF state once power is restored, preserving energy and safeguarding connected electronics.
- **Magnetic remote detachment:** If the magnet on the remote detaches, it can be reattached using a strong adhesive.

8. Safety Information

- For indoor use only. Do not expose to moisture or extreme temperatures.
- Do not exceed the maximum load of 1250W (10A). Overloading can cause overheating and fire hazards.
- Do not disassemble or modify the device. Refer all servicing to qualified personnel.
- Keep out of reach of children.
- Ensure the outlet is fully inserted into the wall socket.
- Unplug the device from the wall outlet before cleaning.

9. Warranty and Support

TESSAN products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official TESSAN website. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DNYJWH7D

More documents and user manuals: **https://manuals.plus/**