Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TIMEURE TU2401

TIMEURE Women's Step Counter Pedometer Watch TU-2401 Instruction Manual

Model: TU-2401

Introduction

Thank you for choosing the TIMEURE Women's Step Counter Pedometer Watch, model TU-2401. This stylish and functional timepiece is designed to help you track your daily activity without the need for smartphone applications or frequent charging. It features a step counter, calorie tracker, distance measurement, time and date display, alarm, countdown timer, stopwatch, and a 5-second EL bright backlight.
This manual provides detailed instructions for setting up, operating, and maintaining your new pedometer watch. Please read it thoroughly to ensure optimal performance and longevity of your device.

Product Overview

COLOR OPTIONAL




The stainless steel mesh band is full of elegance, a acircle of crystal stones embellishes it, showing fashion and luxury

Gift for lover/gift for friend/gift for lover/gift for yourself very suitable

The TIMEURE Pedometer Watch displaying current time and step count on a user's wrist.



Visual representation of the watch's tracking capabilities: distance, calories, steps, and countdown.

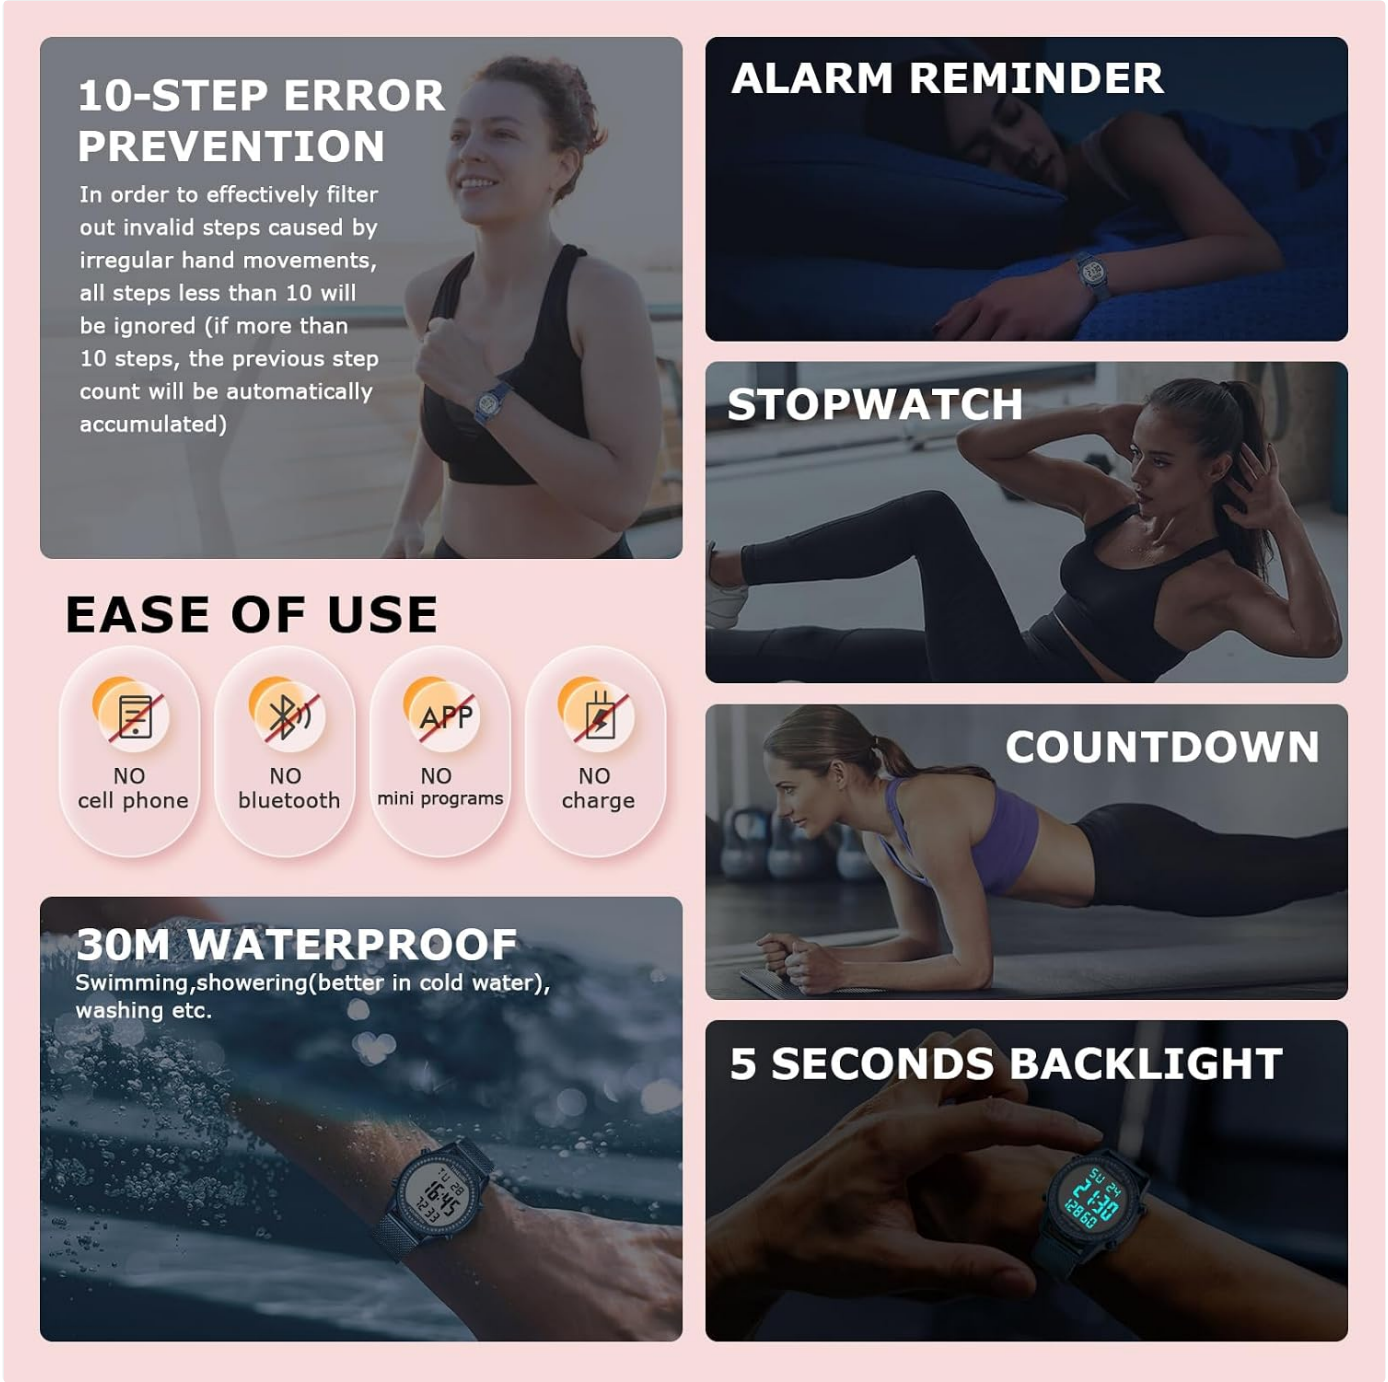

Key features of the TIMEURE Pedometer Watch, including step error prevention, alarm, stopwatch, countdown, water resistance, and backlight.



The TIMEURE Pedometer Watch available in various colors, showcasing its versatile design.

Setup

Initial Activation

Your TIMEURE Pedometer Watch is designed for immediate use without the need for an app connection or charging. It comes pre-installed with a long-lasting CR2032 battery.

Adjusting the Strap

The stainless steel mesh band features a snap buckle design for easy adjustment.

1. Locate the clasp on the strap.
2. Use a small tool (like a paperclip or a watch adjustment tool) to lift the locking mechanism on the clasp.
3. Slide the clasp along the mesh band to achieve your desired wrist size. The watch is suitable for wrist sizes between 4.33-7.67 inches (110-195mm).
4. Press the locking mechanism back down firmly to secure the clasp in place.



The adjustable snap buckle design allows for a customized fit.

Setting Time and Date

Refer to the included quick start guide or the full manual for specific button sequences to set the time, date, and other features. Generally, the watch features four buttons: LIGHT, MODE, CHECK, and SWITCH, used for navigation and setting adjustments.

- **MODE Button:** Used to cycle through different display modes (Time, Pedometer, Alarm, Stopwatch, Countdown).
- **LIGHT Button:** Activates the 5-second EL bright backlight.
- **CHECK/SET Button:** Used to enter setting mode and confirm selections.
- **SWITCH Button:** Used to adjust values or switch between options during setting.

Operating Instructions

Core Functions

- **Step Counter:** Tracks your daily steps. To ensure accuracy, the watch filters out invalid steps. Any single continuous movement lasting less than 10 seconds will be disregarded. If a movement exceeds 10 seconds, previous step counts will be accumulated.
- **Calorie Calculation:** Estimates calories burned based on your activity.
- **Mileage Tracking:** Measures distance covered. Kilometers and miles can be switched in settings.
- **Time, Date, and Week:** Displays current time, date, and day of the week. Supports 12/24 hour format.
- **Alarm:** Set a daily alarm.
- **Hourly Chime:** An optional chime can be set to sound every hour.
- **Countdown Timer:** A customizable timer for various activities.

- **Stopwatch:** For timing events.
- **EL Backlight:** Press the LIGHT button for 5 seconds of bright backlight in low-light conditions.

Water Resistance

The watch is 30M waterproof, suitable for swimming, showering (preferably in cold water), and washing hands. It is not recommended for diving or hot water activities.

Maintenance

Battery Replacement

The TIMEURE Pedometer Watch uses a Japanese-made CR2032 battery, which provides approximately 15 months of life. When the battery needs replacement, you can do it yourself.

1. Carefully remove the four screws on the back of the watch case.
2. Gently lift the back cover.
3. Remove the old CR2032 battery and insert a new one, ensuring correct polarity.
4. Replace the back cover and secure the screws.

Note: Ensure the watch is sealed properly after battery replacement to maintain its water resistance.

Cleaning

Wipe the watch case and band with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.

Troubleshooting

- **Inaccurate Step Count:** The watch is designed to filter out irregular hand movements. Steps are only accumulated for continuous movements lasting longer than 10 seconds. Short, sporadic movements may not be counted. Ensure the watch is worn securely on your wrist for best accuracy.
- **Buttons Unresponsive:** If buttons feel stiff or unresponsive, ensure they are not obstructed. If the issue persists, contact customer support.
- **Display Issues:** If the display is dim or blank, the battery may need replacement. Refer to the "Battery Replacement" section.

Specifications

Brand	TIMEURE
Model Number	TU2401B
Case Material	Alloy
Strap Material	Stainless Steel Mesh
Mirror Material	Glass
Movement	LCD Digital

Case Thickness	12mm / 0.47in
Case Width	36mm / 1.42in
Strap Width	18mm / 0.71in
Watch Weight	~76g / 2.68oz
Wrist Size Range	110-195mm / 4.33-7.67 inches
Waterproof Rating	30M
Battery Type	CR2032 (User-serviceable)
Battery Life	Up to 15 months
Sensor Type	Pedometer



Detailed specifications and dimensions of the TIMEURE Pedometer Watch.

Warranty and Support

TIMEURE is committed to providing quality products and customer satisfaction.

- **1-Year After-Sales Service:** Your watch is covered by a 1-year after-sales service period from the date of purchase.
- **30-Day Return Policy:** You may return the product within 30 days of purchase for any reason.
- **12-Hour Online Customer Service:** For any inquiries or support needs, our customer service team is available online

for 12 hours daily to assist you.

For support, please visit the TIMEURE Store on Amazon or contact us through the platform where you made your purchase.



TIMEURE's commitment to customer satisfaction and support services.

© 2023 TIMEURE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DNZ842W9

More documents and user manuals: **https://manuals.plus/**