Insta360 842126104268

Insta360 Mini Remote User Manual

Model: 842126104268

INTRODUCTION

The Insta360 Mini Remote provides convenient wireless control for your compatible Insta360 camera. This compact remote allows you to start and stop recording, switch perspectives, and enable camera movements from a distance, enhancing your shooting experience.

WHAT'S INCLUDED

- Insta360 Mini Remote
- Mini Remote Cradle
- Mounting Bands (2x)

Image: The Insta360 Mini Remote shown alongside its detachable mounting cradle.

SETUP

Pairing with Your Camera

1. Ensure your Insta360 camera is powered on and its firmware is up to date.
2. On your camera, navigate to the settings menu and select "Bluetooth Remote" or "Accessory Support".
3. Activate pairing mode on the camera.
4. Press and hold the main button on the Mini Remote until its indicator light blinks, indicating pairing mode.
5. Once the remote appears on your camera's screen, select it to complete the pairing process. The remote's indicator

light will turn solid when successfully connected.

Mounting the Mini Remote

The Mini Remote can be mounted to various accessories using the included cradle and bands.

- **Selfie Stick:** Insert the Mini Remote into its cradle. Use the provided bands to secure the cradle to your selfie stick. The Insta360 Foldable 2-in-1 Selfie Stick (1/4" Mount) has a designated slot for the Mini Remote.
- **Handlebars/Fishing Rod:** The universal design allows attachment to handlebars, fishing rods, or similar cylindrical objects using the bands.

Image: Examples of the Mini Remote mounted on a selfie stick, bicycle handlebars, and a fishing rod.

OPERATING INSTRUCTIONS

The Mini Remote allows control of your camera up to 33 feet (10 meters) away.

Button Functions

Action	Remote Button Press	Description
Start/Stop Recording	Single Click	Initiates or ends video recording.
Switch Perspective	Double Click	Changes the camera's lens perspective (e.g., between 360° and Single-Lens modes).
Change Mode (Not Recording)	Triple Click	Cycles through different shooting modes when the camera is not recording.
Enable Camera Movement (e.g., 360° Spin, Barrel Roll)	Triple Click (while recording in InstaFrame mode)	Activates specific camera movements for dynamic shots.

The remote features an indicator light that shows recording status. A red light indicates recording is active.

Image: A hand holding the compact Insta360 Mini Remote, ready for use with a camera in the background.

COMPATIBILITY

The Insta360 Mini Remote is compatible with the following camera models:

- Insta360 X5
- Insta360 X4
- Insta360 Ace Pro 2
- Insta360 GO 3S

For future compatibility updates and to ensure optimal performance, please check the official Insta360 website and keep your Mini Remote's firmware up to date.

MAINTENANCE

- **Water Resistance:** The Mini Remote is **NOT** waterproof. Avoid exposing it to water or moisture. Do not wipe with a wet cloth.
- **Cleaning:** Use a dry, soft cloth to clean the remote.
- **Storage:** Store the remote in a dry place away from extreme temperatures.
- **Battery:** The remote uses an internal A battery (included). Charge via its USB-C port. While battery life is generally good, it is recommended to charge it regularly, especially before extended use, as there is no direct battery level indicator on the remote itself.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not pairing/connecting.	Ensure camera firmware is up to date. Ensure Mini Remote firmware is up to date. Verify the camera model is listed under compatible devices. Ensure the remote is fully charged. Try resetting both the camera's Bluetooth and the remote (refer to camera manual for specific reset instructions).
Remote not responding.	Check battery level and charge if necessary. Ensure the remote is within the 33ft (10m) operating range of the camera. Re-pair the remote with the camera.
Remote got wet and stopped working.	The Mini Remote is not waterproof. Water damage is likely and may not be covered under warranty. Avoid contact with water.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5 x 3 x 1 inches
Item Weight	1.06 ounces

Feature	Detail
Model Number	842126104268
Connectivity Technology	Bluetooth
Max Operating Distance	33ft (10m)
Power Source	1 A battery (included)
Special Feature	Digital Display (on camera, controlled by remote)

WARRANTY AND SUPPORT

For detailed warranty information and technical support, please visit the official Insta360 website or contact their customer service directly. Keep your proof of purchase for any warranty claims.
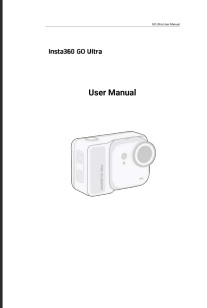Official Website: www.insta360.com

Related Documents - 842126104268

[Insta360 Mini Remote: User Manual and Specifications](#)
Comprehensive guide to the Insta360 Mini Remote, covering product appearance, charging, installation, usage, firmware updates, specifications, safety information, and warranty.

[Insta360 GO Ultra Uživatelská příručka](#)
Podrobný průvodce pro kameru Insta360 GO Ultra a akční modul. Zjistěte vše o funkcích, nastavení, ovládání, údržbě a tipech pro natáčení.

[Insta360 X4 User Manual: Setup, Features, and Operation Guide](#)
Explore the Insta360 X4 user manual for detailed setup, operation, maintenance, and advanced features of this 360-degree action camera. Learn about shooting modes, app connectivity, and best practices.

	[Cardo & Insta360 Universal Connectivity: Pairing Guide](#) Comprehensive guide to connect Cardo Packtalk PRO/EDGE intercoms with Insta360 cameras (ACE, ACE PRO, X4) for group call recording and universal connectivity. Includes step-by-step instructions and visual descriptions.
	[Insta360 GO Ultra User Manual](#) Comprehensive user manual for the Insta360 GO Ultra action camera, covering setup, basic use, app integration, maintenance, and troubleshooting.
	[Insta360 GPS Action Remote User Manual](#) Comprehensive user manual for the Insta360 GPS Action Remote, covering setup, operation, features, specifications, and warranty information. Learn how to pair, connect, and use the remote with your Insta360 camera for enhanced action photography and videography.