**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**Girafit GRF-W150SW-NL**

# Girafit GRF-W150SW-NL 5MP 3K Window Camera User Manual

Model: GRF-W150SW-NL

## 1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Girafit GRF-W150SW-NL 5MP 3K Window Camera. Please read this manual thoroughly before using the product to ensure proper setup and functionality. This camera is designed to provide comprehensive home security by monitoring outdoor areas from the comfort and safety of indoors.

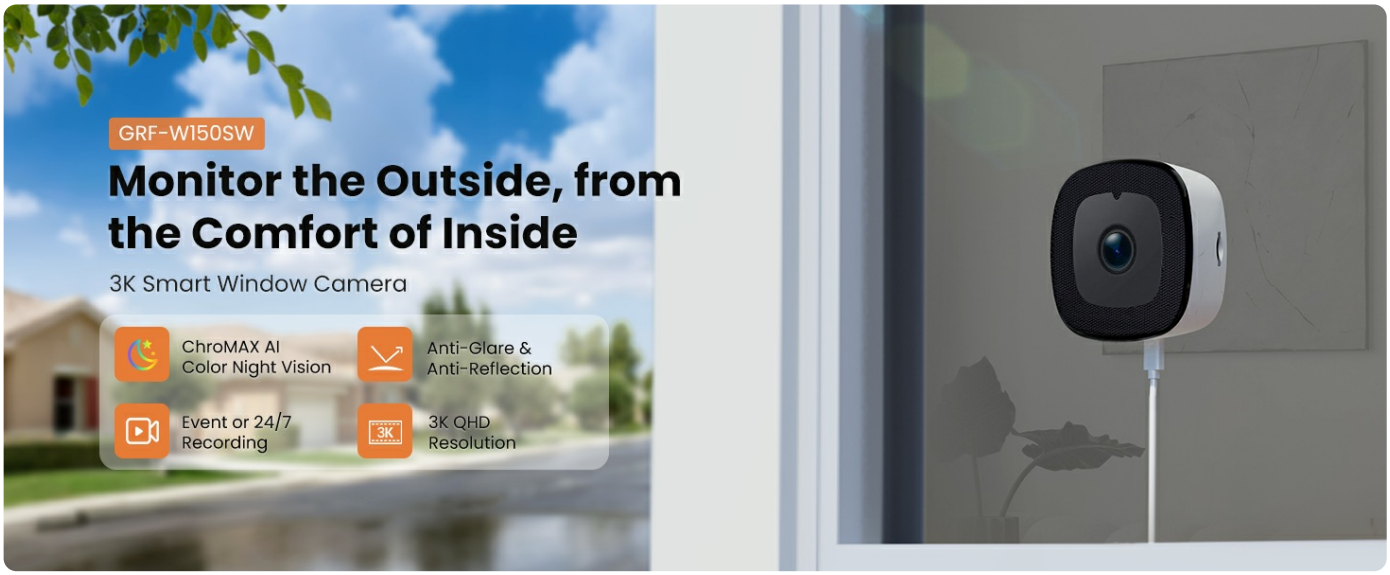



*Image: The Girafit GRF-W150SW-NL camera mounted on a window, providing a view of the outside.*

## 2. What's in the Box

Verify that all components are present in the package:

- Girafit W150 Camera Body
- Power Adapter

- USB Cable
- Mounting Sticker (Large)
- Mounting Sticker (Small)
- User Manual (this document)




*Image: A visual representation of the Girafit W150 camera and its included accessories.*

## 3. Product Overview

Familiarize yourself with the various parts of your Girafit W150 camera:

| Component | Description |
|---|---|
| Status LED | Indicates camera status (e.g., power, connection). |
| Speaker | For two-way audio and siren. |

| Component | Description |
| --- | --- |
| Microphone | For audio input. |
| Reset Button | Used to reset the camera to factory settings. |
| USB Power Port | Connects to the power adapter. |
| Lens | Captures video footage. |
| microSD Card Slot | For local video storage (supports 32GB to 256GB). |




*Image: Labeled diagram of the Girafit W150 camera's physical features and dimensions.*

## 4. Setup Instructions

The Girafit W150 camera is designed for quick and easy installation. Follow these steps for setup:

## 4.1 Physical Installation (Peel & Stick)

1. **Clean Window:** Ensure both the inside and outside surfaces of the window where the camera will be mounted are clean and dry.
2. **Peel off Mounting Sticker:** Carefully peel the backing from the chosen mounting sticker (large or small).
3. **Install the Sticker:** Firmly press the mounting sticker onto the clean window surface from the inside.
4. **Power on Camera:** Connect the camera to power using the included USB cable and power adapter.
5. **Mount Camera:** Attach the camera firmly onto the mounting sticker.

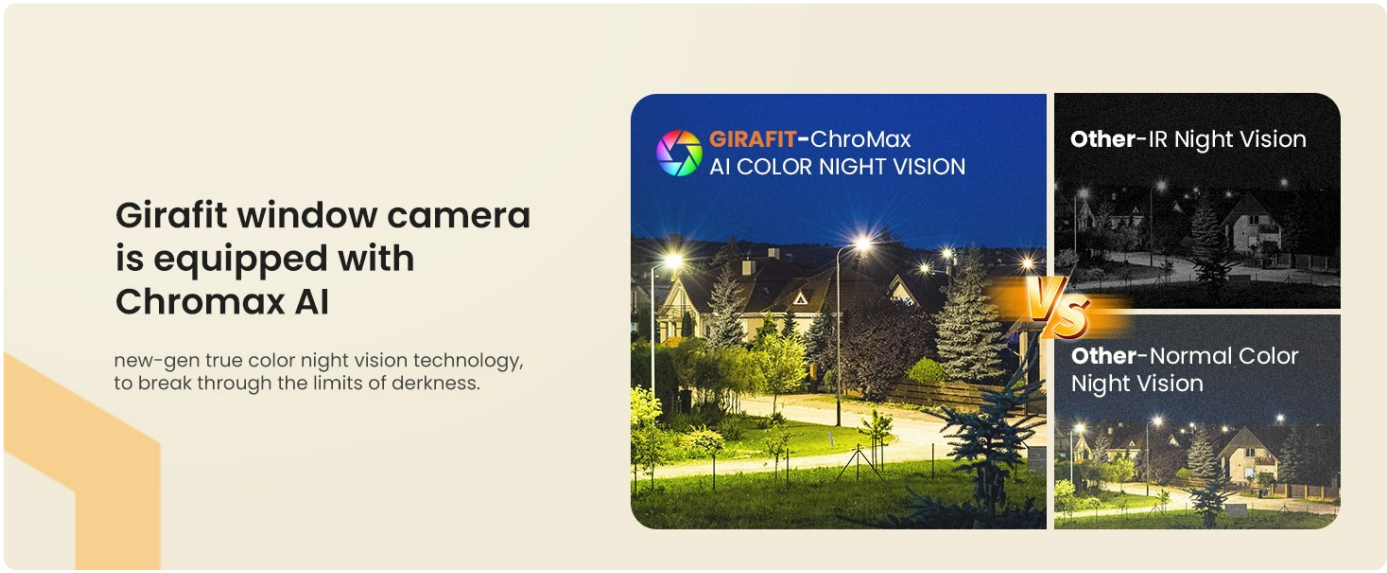



*Image: Visual steps for the physical installation of the camera on a window.*

## 4.2 App Setup and Connectivity

1. **Connect to Power:** Plug in your Girafit camera using the provided power adapter and cable.
2. **Download Girafit App:** Download and install the official Girafit app from the App Store (iOS) or Google Play Store (Android).
3. **Connect Camera to Wi-Fi:** Open the app, register an account, and follow the in-app instructions to connect your camera to your 2.4GHz or 5GHz Wi-Fi network using Bluetooth for hassle-free setup. No QR code scanning is required.
4. **Start Viewing:** Once connected, you can begin live viewing and playback through the app.




*Image: A visual guide to the app-based setup process for the Girafit camera.*

### 4.3 Cable Management

The W150 camera includes 4 cable clips to help manage the power cable and maintain a tidy installation.

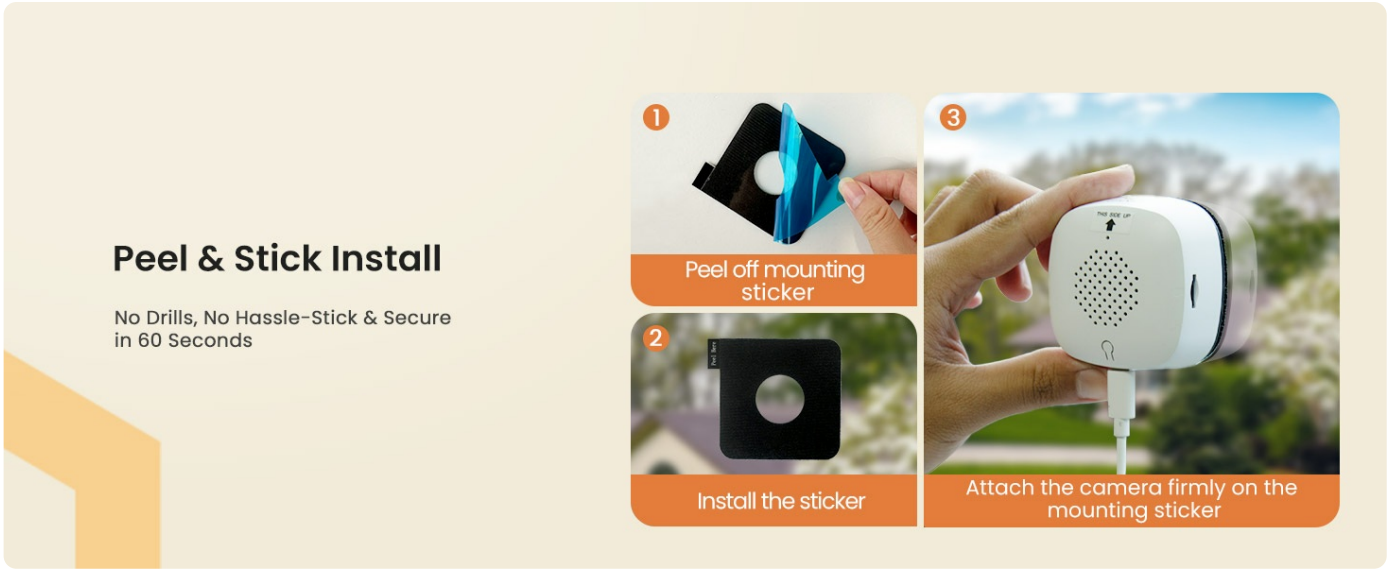



*Image: Example of using cable clips for organized power cable routing.*

## 5. Operating Instructions

The Girafit W150 camera offers a range of features for effective home security monitoring.

### 5.1 Continuous Recording and Event Detection

The camera supports 24/7 continuous recording, ensuring no moment is missed. It also features intelligent person and motion detection, sending instant notifications to your device when unusual activity is detected.




*Image: App interface displaying a person detection alert and camera coverage.*

## 5.2 ChroMax AI Color Night Vision

Experience clear, day-like visuals even in low-light conditions with ChroMax AI color night vision. This advanced technology provides enhanced clarity compared to traditional black and white or starlight night vision.

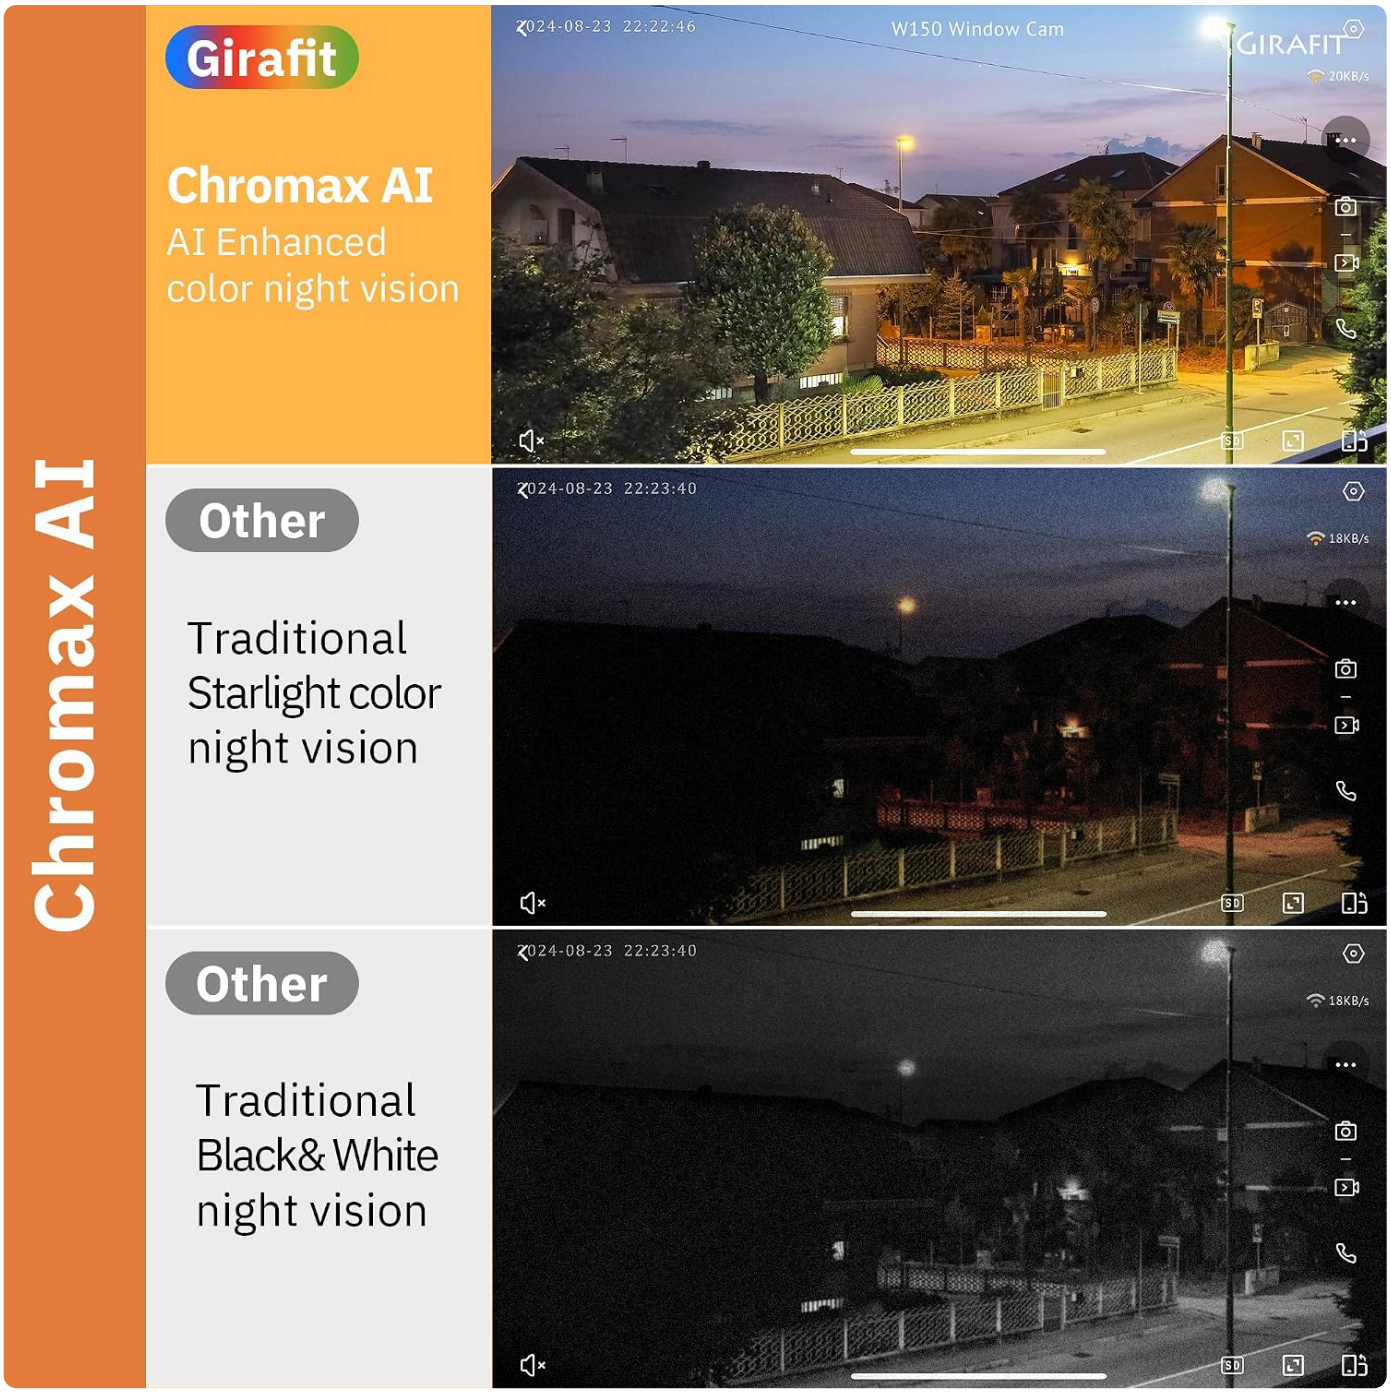



*Image: Visual comparison of ChroMax AI color night vision with other night vision types.*

## 5.3 Anti-Glare & Anti-Reflection

The W150 camera is equipped with anti-glare and anti-reflection features, providing clearer images when placed behind a window, minimizing distortions often seen with standard indoor cameras.

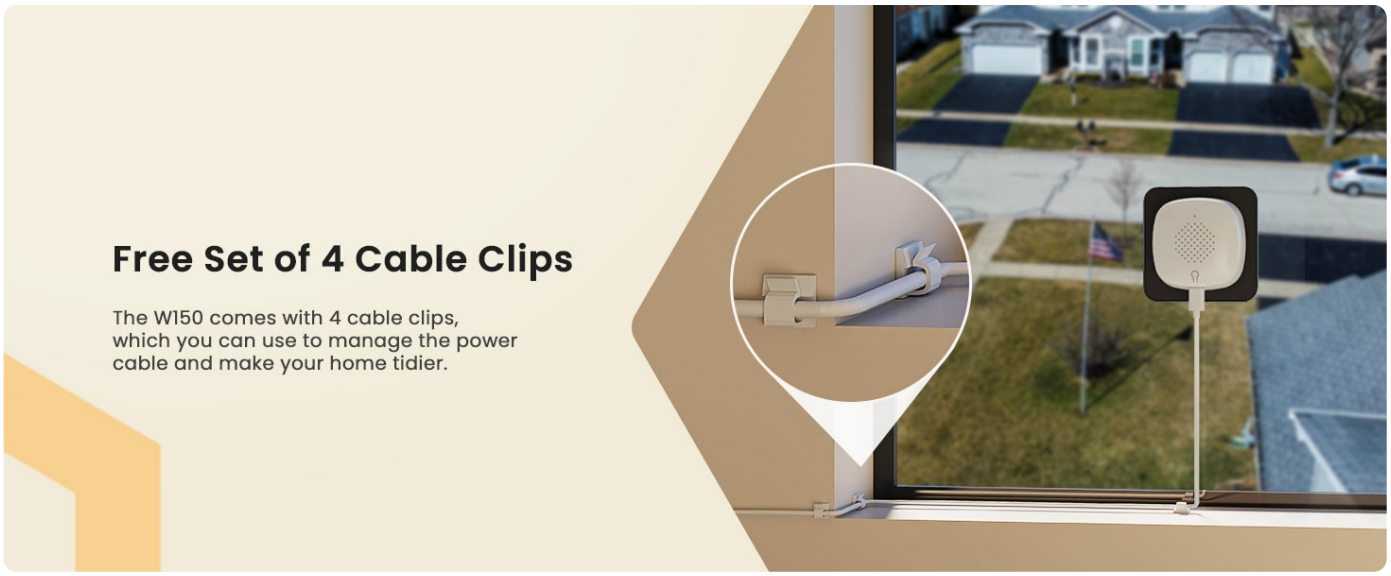



*Image: Side-by-side comparison demonstrating the anti-glare and anti-reflection capabilities.*

## 5.4 Hexagonal Detection Zone

Customize your security by setting up a flexible hexagonal detection zone within the app. This allows you to receive notifications and record videos specifically for activity within that defined area.




*Image: A visual representation of a customizable hexagonal detection zone.*

## 5.5 Siren and Two-Way Audio

The camera features a motion-triggered siren to deter intruders and two-way audio communication, allowing you to speak through the camera and hear responses.

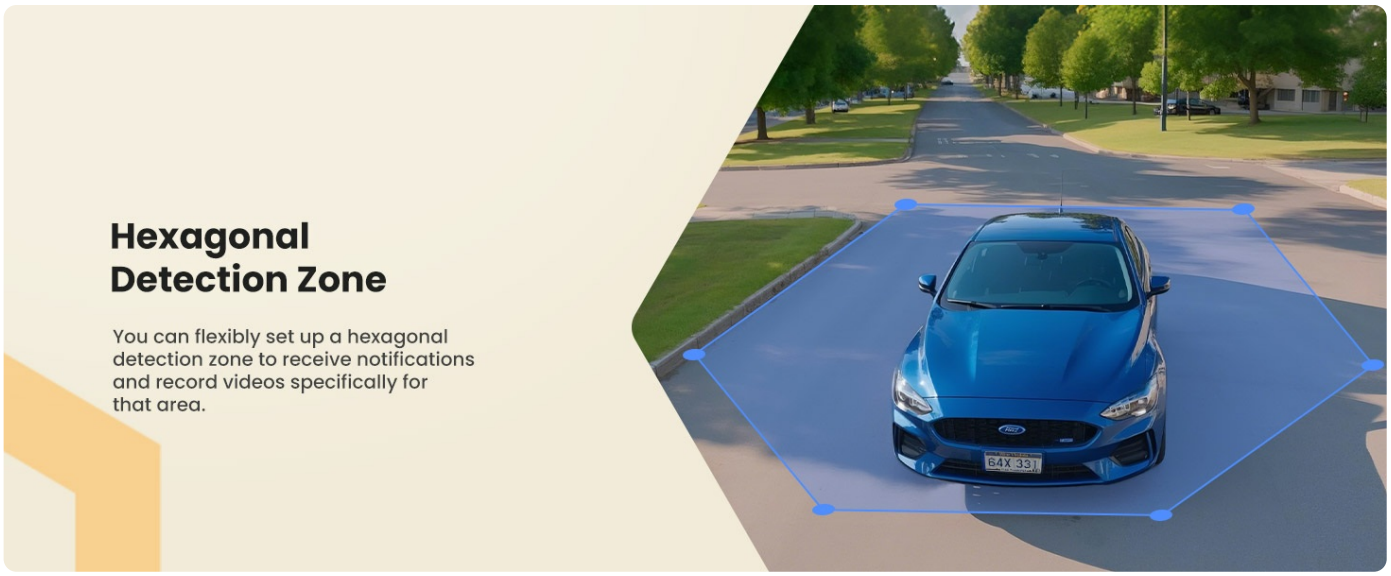



*Image: Illustration of the camera's siren activation upon detecting suspicious activity.*

## 5.6 Flexible Storage Options

Choose between local storage using a microSD card (32GB to 256GB supported) or secure US-based cloud storage for your continuous recordings and event footage.

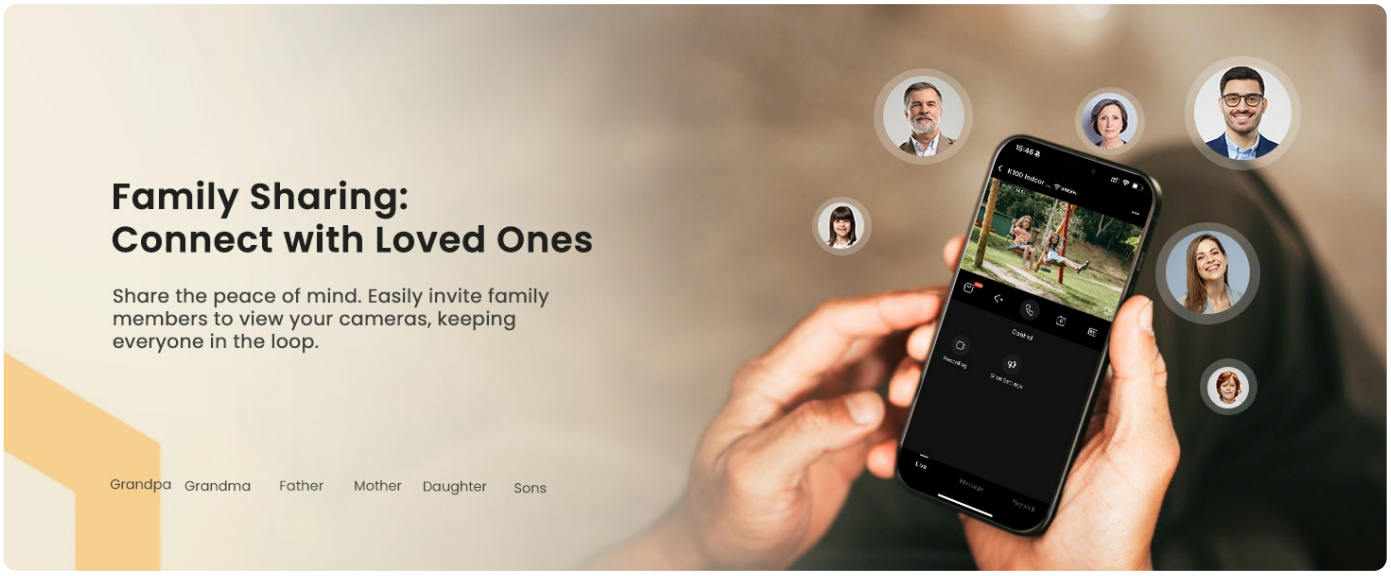



*Image: Visual representation of cloud and SD card storage options.*

## 5.7 Family Sharing and Multi-Device Viewing

Easily share access to your camera with family and friends through the app. You can also monitor up to four camera feeds simultaneously on your smartphone or tablet.

# More Vivid and Clear Picture



**Girafit** Anti- Glare & Anti- Reflection AI-enhanced clarity with HDR



Other



Other

*Image: Examples of versatile camera placement options.*

## Work with Smart Home

Upgrade your home security with GIRAFIT Alexa-compatible camera. Hands-free control means you can adjust settings, check in, or even scare off intruders with just your voice.



*Image: Illustration of the family sharing feature within the app.*

### 5.8 Smart Home Integration

The Girafit W150 camera is compatible with Alexa, allowing for hands-free control, checking camera status, or even deterring intruders using voice commands.

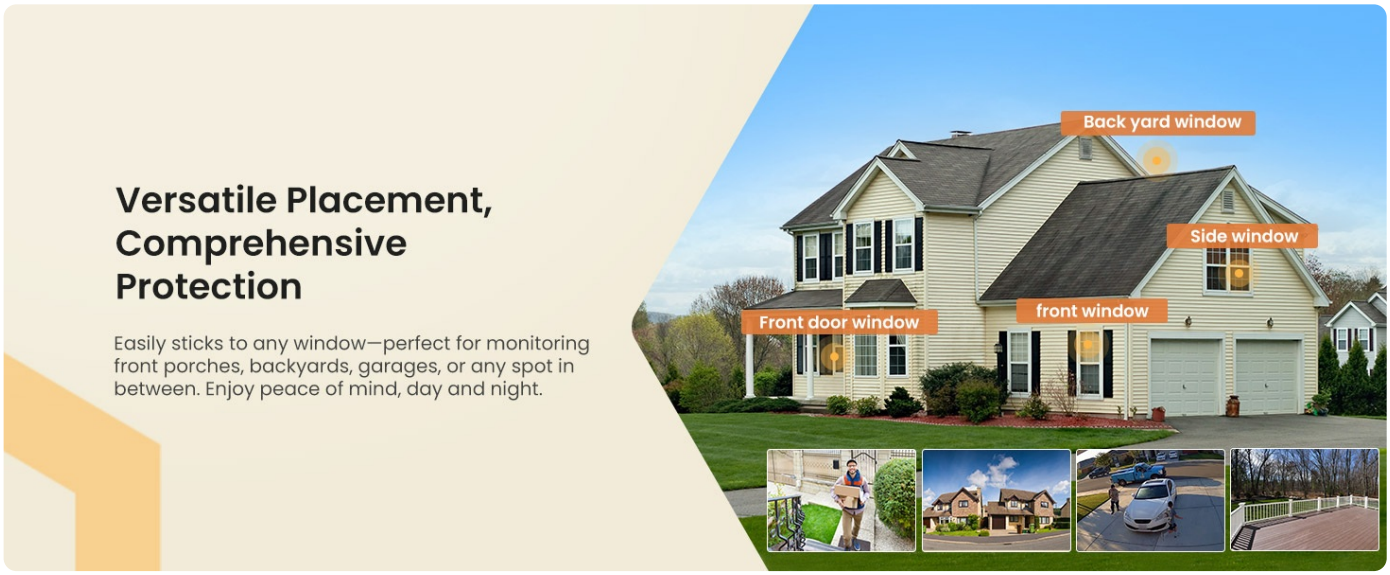



*Image: Demonstrating Alexa compatibility for smart home control.*

## 6. Maintenance

To ensure optimal performance and longevity of your Girafit W150 camera, follow these maintenance guidelines:

- **Lens Cleaning:** Gently wipe the camera lens with a soft, lint-free cloth to remove dust or smudges. Avoid abrasive cleaners.
- **Exterior Cleaning:** Clean the camera's exterior with a dry or slightly damp cloth. Do not use harsh chemicals or solvents.
- **Firmware Updates:** Regularly check the Girafit app for available firmware updates to ensure your camera has the latest features and security enhancements.
- **Power Supply:** Use only the original power adapter and USB cable provided with the camera.
- **Environmental Conditions:** Ensure the camera is used within its specified operating temperature and humidity ranges. While designed for window mounting, avoid direct exposure to extreme weather conditions.

## 7. Troubleshooting

If you encounter issues with your Girafit W150 camera, refer to the following common problems and solutions:

| Problem | Possible Solution |
|---|---|
| Camera not powering on | Check power adapter and USB cable connections. Ensure the power outlet is functional. |
| Unable to connect to Wi-Fi | Ensure your Wi-Fi network is 2.4GHz or 5GHz. Verify Wi-Fi password. Move camera closer to the router. Reset the camera using the reset button and try setup again. |

| Problem | Possible Solution |
|---|---|
| Poor video quality | Clean the camera lens and the window surface. Ensure sufficient lighting. Check your internet connection speed. |
| No motion detection alerts | Verify motion detection settings in the app are enabled. Adjust detection sensitivity and zone. Check app notification settings on your smartphone. |
| MicroSD card not recording | Ensure the microSD card is inserted correctly and is between 32GB and 256GB. Format the card through the app. Check if the card is full or corrupted. |
| App crashes or freezes | Close and restart the app. Clear the app's cache. Reinstall the app. Ensure your smartphone's operating system is up to date. |

If these solutions do not resolve your issue, please contact Girafit customer support.

## 8. Specifications

| Feature | Detail |
|---|---|
| Model Name | GRF-W150SW-NL |
| Video Capture Resolution | 3K (5MP Ultra-HD) |
| Connectivity Technology | Wired (Power), Wi-Fi (Data) |
| Wi-Fi Frequency | 2.4GHz & 5GHz |
| Special Features | ChroMax AI Color Night Vision, Person & Motion Detection, Anti-Glare & Anti-Reflection, 24/7 Recording |
| Indoor/Outdoor Usage | Outdoor (Monitored from Indoor Window) |
| Compatible Devices | Smartphone (Android, iOS) |
| Mount Type | Window Mount (Peel-and-Stick) |
| Power Source | Corded Electric |
| Storage Options | microSD Card (32GB-256GB), US-based Cloud Storage |
| Item Dimensions | 2.5 x 2.5 x 1.3 inches |
| UPC | 764742517928 |

## 9. Warranty and Support

Girafit products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Girafit website. For technical support, troubleshooting assistance, or any inquiries regarding your Girafit GRF-W150SW-NL camera, please contact our customer support team through the contact information provided on our website or within the Girafit app.
We are committed to providing excellent service and support to ensure your satisfaction with our products.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B0DP42DQHD**

More documents and user manuals: **https://manuals.plus/**