**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**ZdalaMit MR24GA**

# ZdalaMit MR24GA Voice Replacement Magic Remote Control User Manual

Model: MR24GA | Brand: ZdalaMit

## 1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your ZdalaMit MR24GA Voice Replacement Magic Remote Control. This remote is designed to be compatible with various 2024 LG Smart TV models, offering voice control and intuitive navigation. Please read this manual thoroughly before use to ensure proper functionality and to maximize your viewing experience.

## 2. Safety Information

- Do not expose the remote control to direct sunlight, heat, fire, or water.
- Avoid dropping or subjecting the remote to strong impacts.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

## 3. Package Contents

Verify that all items are present in the package:

- 1x ZdalaMit MR24GA Voice Replacement Magic Remote Control
- *Note: 2x AA size alkaline batteries are required and not included.*

## 4. Setup

### 4.1 Installing Batteries

To install the batteries:

1. Open the battery compartment cover on the back of the remote control.

2. Insert two (2) AA size alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.



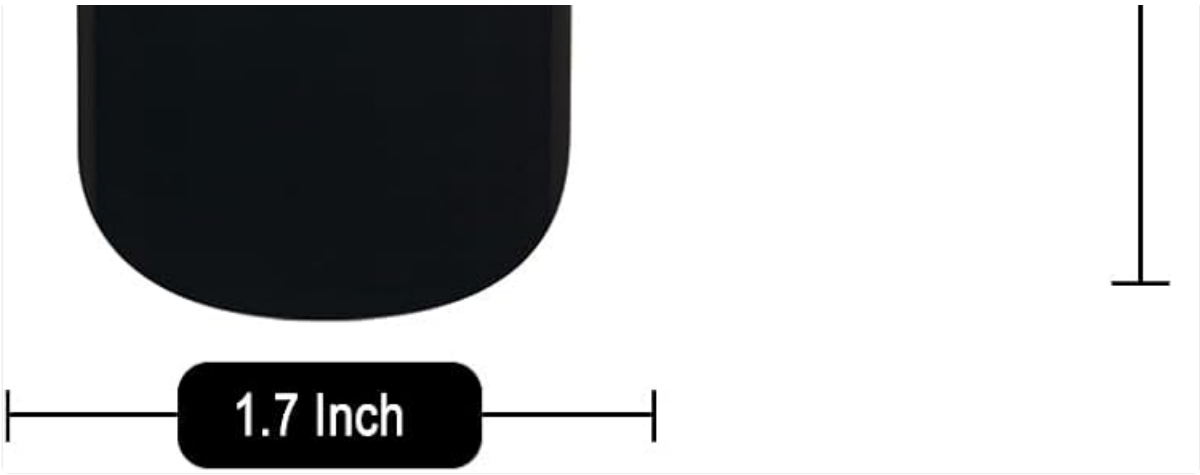



Image: Rear view of the remote control, illustrating the battery compartment location.

## 4.2 Pairing the Remote Control

Pairing is required before using the remote control with your LG Smart TV. Follow these steps:

1. Turn on your LG Smart TV manually using the power button on the TV itself.
2. Point the ZdalaMit MR24GA remote control towards your TV.
3. Press the **Wheel (OK)** button (the center button of the directional pad) on the remote control.
4. The TV screen should display a message indicating that the remote control is pairing. Once paired, a confirmation message will appear.
5. If pairing fails, remove the batteries from the remote, wait a few seconds, reinsert them, and repeat the pairing process. Ensure there are no obstructions between the remote and the TV.






Image: Front view of the remote control, showing the layout of all buttons, including the central Wheel (OK) button.

## 5. Operating Instructions

### 5.1 Basic Functions

- **Power Button** (): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly input channel numbers or other numerical data.
- **Volume Up/Down** (): Adjusts the TV volume.
- **Channel Up/Down** (): Changes TV channels.
- **Mute Button** (): Mutes or unmutes the TV sound.
- **Directional Pad (Up/Down/Left/Right)**: Navigates through menus and options.
- **Wheel (OK) Button**: Selects an item or confirms an action. Also functions as a scroll wheel in some interfaces.
- **Home Button** (): Accesses the TV's home screen or smart hub.
- **Back Button** (): Returns to the previous screen or menu.

## 5.2 Voice Control

The ZdalaMit MR24GA remote features voice control for convenient operation:

1. Press and hold the **Voice Recognition Button** (, typically located below the mute button).
2. Speak your command clearly into the microphone located on the remote control. Examples include: "Change to Channel 5", "Open Netflix", "Search for action movies", or "What's the weather like?".
3. Release the button once you have finished speaking. The TV will process your command.









Image: The remote control with a focus on the voice recognition (microphone) button.

## 5.3 Smart TV Quick Access Buttons

The remote includes dedicated buttons for quick access to popular streaming services and features:

- **Netflix Button**: Launches the Netflix application.
- **Prime Video Button**: Launches the Amazon Prime Video application.
- **Disney+ Button**: Launches the Disney+ application.
- **Rakuten TV Button**: Launches the Rakuten TV application.
- **L channels Button**: Provides quick access to LG Channels.
- **alea Button**: Provides quick access to the alea application.




Image: The remote control, highlighting the dedicated quick access buttons for various streaming services.

## 6. Maintenance

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage**: When not in use for extended periods, store the remote in a cool, dry place. Consider removing batteries to prevent leakage.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously.

## 7. Troubleshooting

| Issue | Possible Cause | Solution |
|---|---|---|
| Remote not responding | Dead batteries, remote not paired, obstruction. | Replace batteries. Re-pair the remote (Section 4.2). Remove any obstructions between the remote and TV. |
| Voice control not working | Microphone blocked, remote not paired, TV settings. | Ensure microphone is clear. Re-pair the remote. Check TV's voice recognition settings. |
| Cursor not appearing/moving | Remote not paired, sensor obstruction. | Re-pair the remote. Ensure nothing is blocking the TV's remote sensor. |

| Issue | Possible Cause | Solution |
| --- | --- | --- |
| Buttons unresponsive | Low batteries, remote malfunction. | Replace batteries. If issue persists, contact support. |

## 8. Specifications

- **Model:** MR24GA
- **Brand:** ZdalaMit
- **Power Source:** 2 x AA Alkaline Batteries (not included)
- **Product Dimensions:** 7.62 x 1.75 x 0.6 inches (approximately 19.35 x 4.45 x 1.52 cm)
- **Item Weight:** 2 ounces (approximately 56.7 grams)
- **Special Feature:** Voice Search
- **Color:** Black
- **Compatible Devices:** LG Smart Televisions (2024 models including OLED65B4AUA, 75QNED85TAA, etc.)






Image: The remote control with its approximate length and width measurements displayed.

## 9. Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.

## 10. Support

If you encounter any issues not covered in this manual or require further assistance, please contact the ZdalaMit customer support team or the retailer from whom you purchased the product. Provide your model number (MR24GA) and a detailed description of the issue for efficient support.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0DP43ZPFT**

More documents and user manuals: **https://manuals.plus/**