Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LUXOAK CTS029

LUXOAK 66" Farmhouse TV Stand Instruction Manual

Model: CTS029 | Brand: LUXOAK

1. Introduction

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your LUXOAK 66" Farmhouse TV Stand. Designed to accommodate televisions up to 75 inches, this entertainment center features a rustic antique white finish, sliding barn doors, and ample storage with adjustable shelves. Please read this manual thoroughly before beginning assembly or use to ensure safe and proper installation and functionality.



Image 1: The LUXOAK 66" Farmhouse TV Stand, showcasing its antique white finish and sliding barn doors, suitable for a living room setting.

2. Safety Information

WARNING: To prevent serious injury, always follow these safety guidelines:

- Do not exceed the weight capacity of**150 pounds** on the tabletop.
- Ensure proper assembly to avoid tipping. All fasteners must be securely tightened.
- Keep the TV stand away from direct heat sources, open flames, and excessive moisture.
- Place the TV stand on a level, stable surface to prevent wobbling or accidental falls.
- Do not allow children to climb on or play with the TV stand, especially the sliding doors.
- Always use the included anti-tip hardware to secure the unit to a wall, if provided.

3. Product Features

- **Large Tall TV Stand:** Crafted with precision and elegance, this entertainment center is designed to elevate farmhouse decor. Overall Size: 40"H x 66"W x 15"D, suitable for 75/70/65 inch TVs.
- **Farmhouse Sliding Barn Doors:** Features 2 sliding barn doors, adding a distinctive rural aesthetic. Quality metal bars and handles ensure smooth operation.
- **Protruding Thickened Base:** Unique design provides a three-dimensional effect while ensuring stability.
- **Ample Storage TV Cabinet:** Ingenious partition storage includes 2 soundbar shelves with cable holes and 2 cabinets with adjustable shelves to accommodate multimedia equipment.
- **Sturdy Structure:** High-quality engineered wood tabletop and base ensure long-term use. Adjustable support feet prevent deformation.

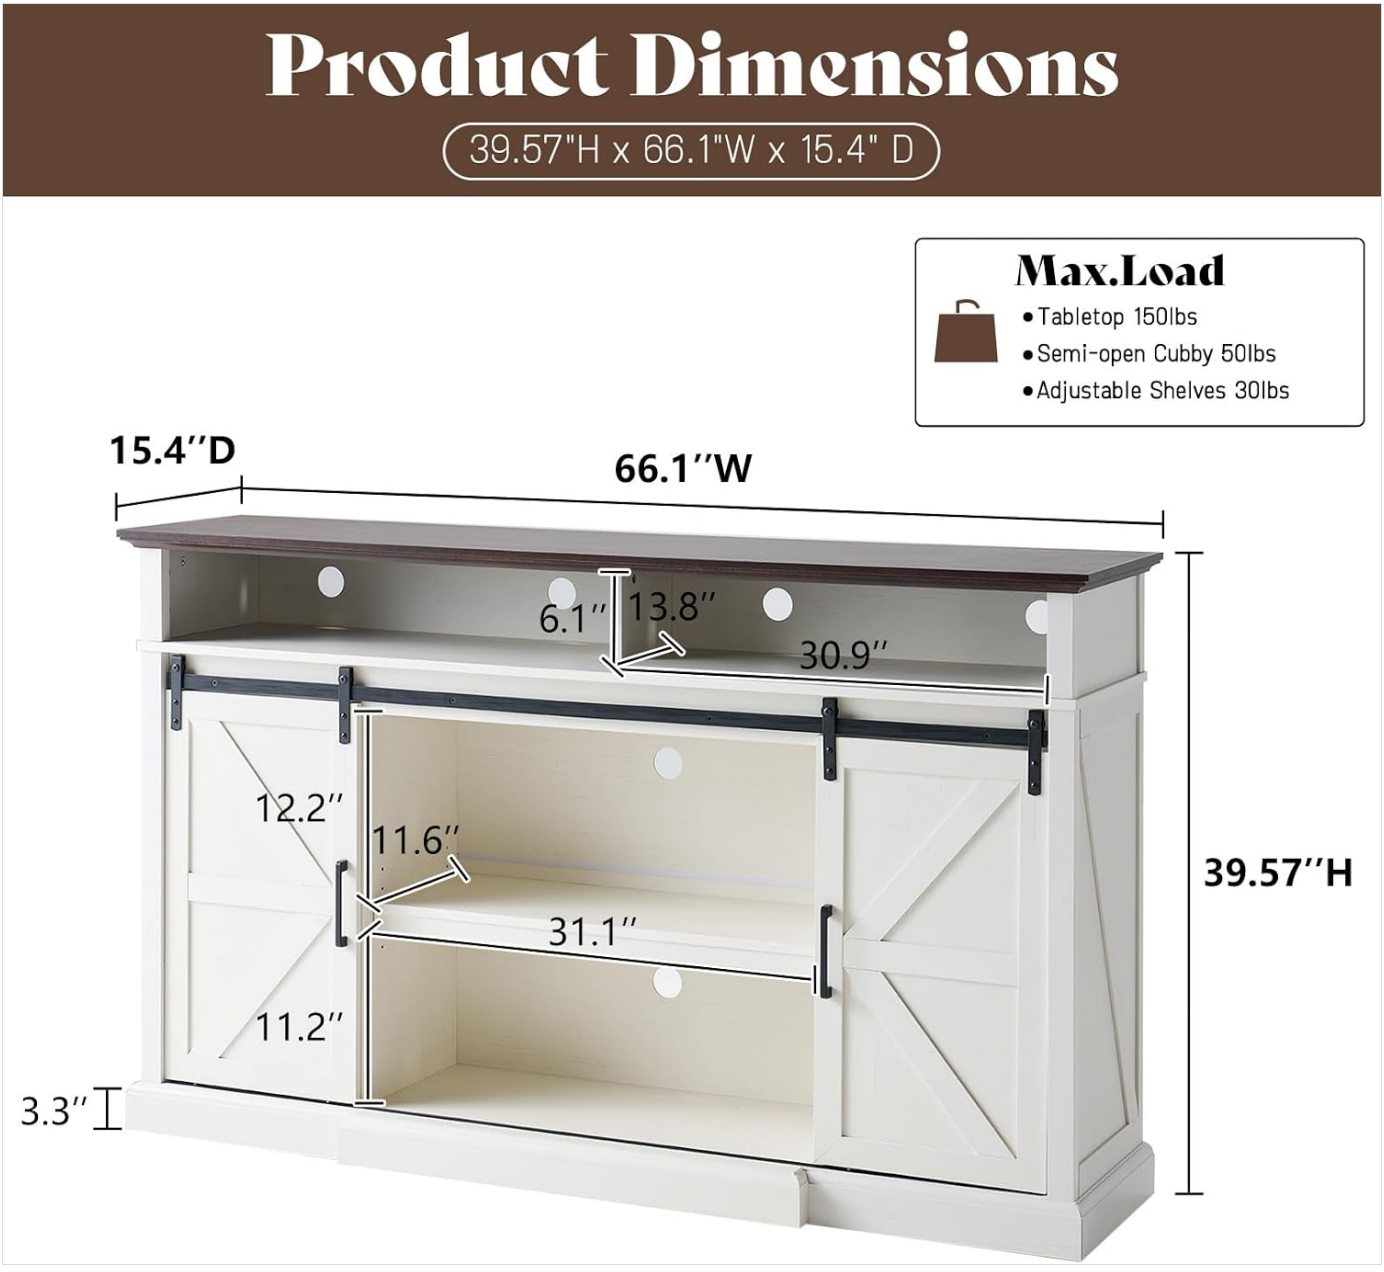


Image 2: Detailed dimensions of the TV stand: 39.57"H x 66.1"W x 15.4"D. Max load capacities are also shown: Tabletop 150lbs, Semi-open Cubby 50lbs, Adjustable Shelves 30lbs.



Image 3: Illustration showing the TV stand's compatibility with various TV sizes, up to 75 inches.



Image 4: Details of the rustic farmhouse style, highlighting the double sliding barn doors, wood grain finish, thickened tabletop and base, unique smooth rails, and retro metal handles.



Image 5: View of the protruding base design, which adds a three-dimensional effect, and the adjustable shelves within the cabinet, indicated by arrows showing vertical movement.



Image 6: Demonstrates the semi-open storage area for media devices, the adjustable shelves for flexible storage, and the strategically placed cable management holes for organization.



Image 7: Close-up details of the 1.2" thick top plate, the 3.3" stable base, and the adjustable support feet designed for stability on uneven surfaces.

Product Showcase Video

Your browser does not support the video tag.

Video 1: A visual overview of the LUXOAK 66" Farmhouse TV Stand, highlighting its dimensions, rustic distressed finish, classic farmhouse style, protruding thickened base, smooth sliding track, retro metal handles, sliding barn door design, adjustable shelves, semi-open storage area, and ample storage space.

4. Specifications

Feature	Detail
Brand	LUXOAK
Model Name	Farmhouse TV Stand (CTS029)

Color	Antique White
Product Dimensions	15.4"D x 66.1"W x 40"H
Recommended TV Size	Up to 75 inches
Weight Limit (Tabletop)	150 Pounds
Material	Engineered Wood
Special Feature	Sliding Barn Doors, Adjustable Shelves, Cable Management Holes
Mounting Type	Floor Mount (Freestanding)
Number of Shelves	5 (including fixed and adjustable)
Assembly Required	Yes
Item Weight	125 Pounds

5. Package Contents

Upon opening the package, please verify that all components are present and undamaged. The package should contain:

- 1 x LUXOAK 66" Farmhouse TV Stand (main unit)
- 1 x Assembly Instructions Manual
- 1 x Components Fittings (hardware pack)

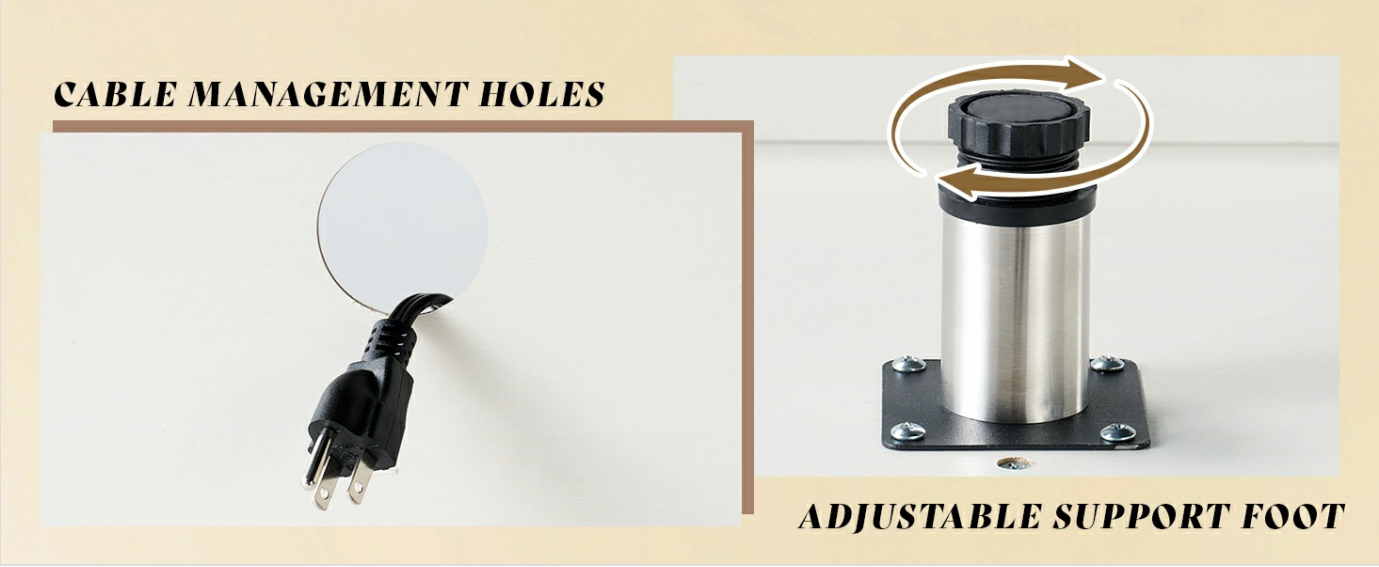


Image 8: Visual representation of the package contents and key specifications.

6. Setup and Assembly

Assembly of the LUXOAK 66" Farmhouse TV Stand is required. Clear and detailed instructions are included in the package to guide you through the process. Please follow these general steps:

1. **Unpack:** Carefully remove all components from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in the included assembly manual to identify all pieces and hardware.

3. **Assemble Frame:** Follow the step-by-step diagrams to assemble the main frame of the TV stand.
4. **Install Shelves:** Insert the adjustable shelves into your desired positions.
5. **Attach Sliding Doors:** Mount the sliding barn doors onto the rails, ensuring they glide smoothly.
6. **Final Checks:** Ensure all screws and fasteners are securely tightened. Attach the anti-tip hardware to a wall for added safety.

It is recommended to have at least two people for assembly due to the size and weight of the unit.

7. Operating Instructions

- **Sliding Barn Doors:** Gently slide the barn doors along the top track to open or close the cabinet sections. Avoid forcing the doors.
- **Adjustable Shelves:** To adjust a shelf, remove any items, lift the shelf, and reposition the shelf pins into the desired holes. Ensure the shelf is level and securely seated before placing items on it.
- **Cable Management:** Utilize the pre-drilled cable management holes in the back panel to route and organize power cords and media cables, keeping them tidy and out of sight.
- **Placement of TV:** Center your television on the tabletop, ensuring its base is fully supported and does not overhang the edges.

8. Maintenance

- **Cleaning:** Wipe the surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth with mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.
- **Sliding Mechanism:** Keep the sliding door tracks clean and free of debris to ensure smooth operation.
- **Avoid Moisture:** Protect the TV stand from prolonged exposure to liquids or high humidity, which can damage the engineered wood.

9. Troubleshooting

Issue: TV Stand feels unstable or wobbly.

Solution: Ensure the TV stand is placed on a flat, level surface. Check all assembly screws and tighten them if loose. Adjust the support feet at the base to stabilize the unit. Verify that the anti-tip hardware is correctly installed and secured to the wall.

Issue: Sliding doors are stiff or do not move smoothly.

Solution: Inspect the sliding tracks for any obstructions or debris. Clean the tracks with a soft cloth. Ensure the doors are properly aligned on the track. If necessary, apply a silicone-based lubricant to the track (avoid oil-based lubricants).

Issue: Missing parts or damaged components upon arrival.

Solution: Refer to the parts list in your assembly manual. Contact LUXOAK customer support immediately with your purchase details and a description of the missing or damaged parts for assistance.

10. Warranty and Support

LUXOAK is committed to providing quality products. For specific warranty details, please refer to the documentation included with your purchase or visit the official LUXOAK website. If you require further assistance, have questions about assembly, or need to report an issue, please contact LUXOAK customer support.
You can find more information and contact details by visiting theLUXOAK Store on Amazon.

Protection plans are also available for purchase separately to extend coverage for your product. Please check Amazon for details on available 2-Year or 3-Year Protection Plans.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DP4FHYZM

More documents and user manuals: **https://manuals.plus/**