Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY SRC802V

ALLIMITY SRC802V IR Replacement Remote Control User Manual

Comprehensive guide for setup, operation, and maintenance.

1. Product Overview

The ALLIMITY SRC802V is an infrared (IR) replacement remote control designed for various TCL TV models. It provides essential functions for controlling your television, including power, volume, channel selection, navigation, and quick access to popular streaming services.





Figure 1: Front view of the SRC802V Remote Control. This image displays the front of the ALLIMITY SRC802V IR Replacement Remote Control, highlighting its ergonomic design and button layout, including power, settings, navigation, volume, channel, and dedicated Netflix and YouTube buttons.

Compatible Models:

This remote control is compatible with a wide range of TCL TV models, including but not limited to:

- 06-BTZNYY-SRC802V
- 32S330, 40S330, 43A445, 43S434, 55Q637, 65S434
- 42A342, 32S334, 40A345, 50A443, 50A547, 43A443
- 32A343, 55A547, 65Q637, 75S434, 70S430, 75A445

2. Setup

2.1 Installing Batteries

The SRC802V remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



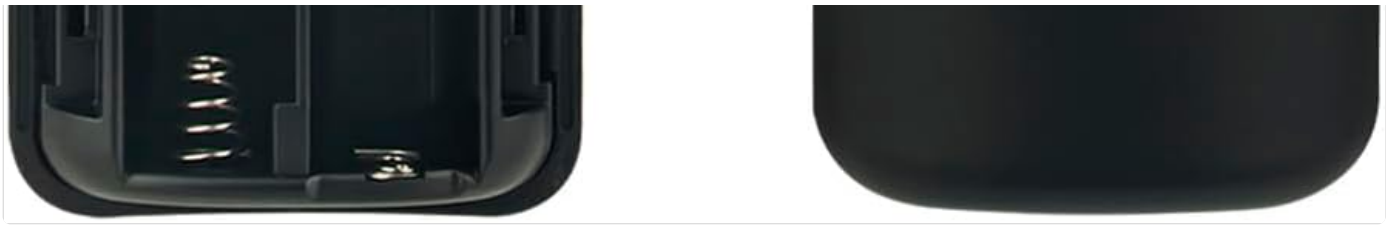


Figure 2: Battery Compartment. This image illustrates the rear of the remote control with the battery cover removed, revealing the battery compartment designed for two AAA (LR03 1.5V) batteries. Ensure correct polarity when inserting.

3. Operating Instructions

3.1 Basic Operation

To operate the remote control, aim it directly at the infrared sensor on your TCL TV. Ensure there are no obstacles between the remote and the TV sensor. The effective range is typically several meters.

3.2 Button Functions

Familiarize yourself with the functions of each button:

Button	Function
Power ( )	Turns the TV on or off.
Settings (⚙)	Accesses the TV's settings menu.
Home (⌂)	Returns to the TV's home screen or smart TV interface.
Menu (≡)	Opens the TV's main menu or context menu.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms a selection or enters a menu item.
Back (←)	Returns to the previous screen or menu.
Input (⏏)	Selects the input source (HDMI, AV, etc.).
Search	Activates the search function on the TV.
Volume Up/Down (+ / –)	Adjusts the TV's volume level.
Mute ( )	Mutes or unmutes the TV's audio.
Channel Up/Down (CH+ / CH-)	Changes the TV channel.
Netflix	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.



Figure 3: Remote Control Button Layout. This image provides an angled perspective of the remote control, emphasizing the intuitive placement of its buttons for easy access and comfortable use.

4. Maintenance

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5. Troubleshooting

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Solution
Remote control is not responding.	• Check if the batteries are inserted correctly with the correct polarity. • Replace the batteries with new ones. • Ensure there are no obstacles between the remote control and the TV's IR sensor. • Make sure you are pointing the remote directly at the TV's IR sensor.
Some buttons are not working.	• Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. • Replace the batteries.
Short operating range.	• Replace the batteries with new ones. • Ensure there are no strong light sources (like direct sunlight) interfering with the IR signal.

6. Specifications

Key specifications for the ALLIMITY SRC802V IR Replacement Remote Control:

- **Model Number:** SRC802V (also known as YH-SRC802V-IR)
- **Product Material:** Plastic
- **Dimensions:** Approximately 5 x 1 x 0.5 inches (15.5 cm x 3.8 cm x 1.3 cm)
- **Item Weight:** Approximately 1 ounce (28 grams)
- **Power Source:** 2 x AAA batteries (LR03 1.5V)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** TCL Televisions



Figure 4: Remote Control Dimensions. This image provides a visual representation of the remote control's dimensions, indicating its length of 15.5 cm (6.1 inches) and width of 3.8 cm (1.5 inches).

7. Warranty and Support

For any questions, concerns, or support regarding your ALLIMITY SRC802V IR Replacement Remote Control, please contact the seller or manufacturer directly through the platform where the purchase was made. They can provide assistance with product inquiries, troubleshooting beyond this manual, and information regarding any applicable warranty.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DP5Y87B7

More documents and user manuals: **https://manuals.plus/**