Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FOSSIBOT S2

FOSSIBOT S2 Smartphone User Manual

Model: S2

1. Introduction

This user manual provides detailed instructions for the FOSSIBOT S2 smartphone. Please read this manual carefully before using your device to ensure proper operation and to maximize its performance. The FOSSIBOT S2 is an unlocked Android 14 smartphone featuring a powerful processor, large memory, high-resolution cameras, and a long-lasting battery.



Image: Overview of the FOSSIBOT S2 smartphone, highlighting its slim design and innovative features.

2. Package Contents

Ensure all items are present in your product package:

- FOSSIBOT S2 Smartphone
- Power Adapter
- SIM Tray Ejector
- USB Cable
- User Manual/Warranty Card
- TPU Case



Image: Contents of the FOSSIBOT S2 retail package, including the phone, charger, cable, SIM ejector, manual, and case.

3. Product Features

3.1 Performance and Storage

The FOSSIBOT S2 is powered by a MediaTek Helio G85 Octa-Core Processor, ensuring smooth performance for various applications. It comes with 8GB of physical RAM, expandable to 20GB with 12GB of virtual memory, and 256GB of built-in storage, which can be expanded up to 1TB via a TF card.



Image: Diagram illustrating the MediaTek Helio G85 processor, 8GB RAM, 12GB virtual RAM, and 256GB ROM with 1TB TF card expansion.

3.2 Battery Life

Equipped with a 5000mAh large battery, the FOSSIBOT S2 provides extended usage times for streaming, gaming, and calls. It supports 18W fast charging via a Type-C port, allowing for quick power replenishment.



Image: Visual representation of the 5000mAh battery capacity and 18W fast charging capability, along with estimated usage times.

3.3 Display

The device features a 6.72-inch FHD+ in-cell display with a resolution of 1080*2400 pixels. It offers vivid visuals, accurate color reproduction, and a high screen-to-body ratio for an immersive viewing experience.

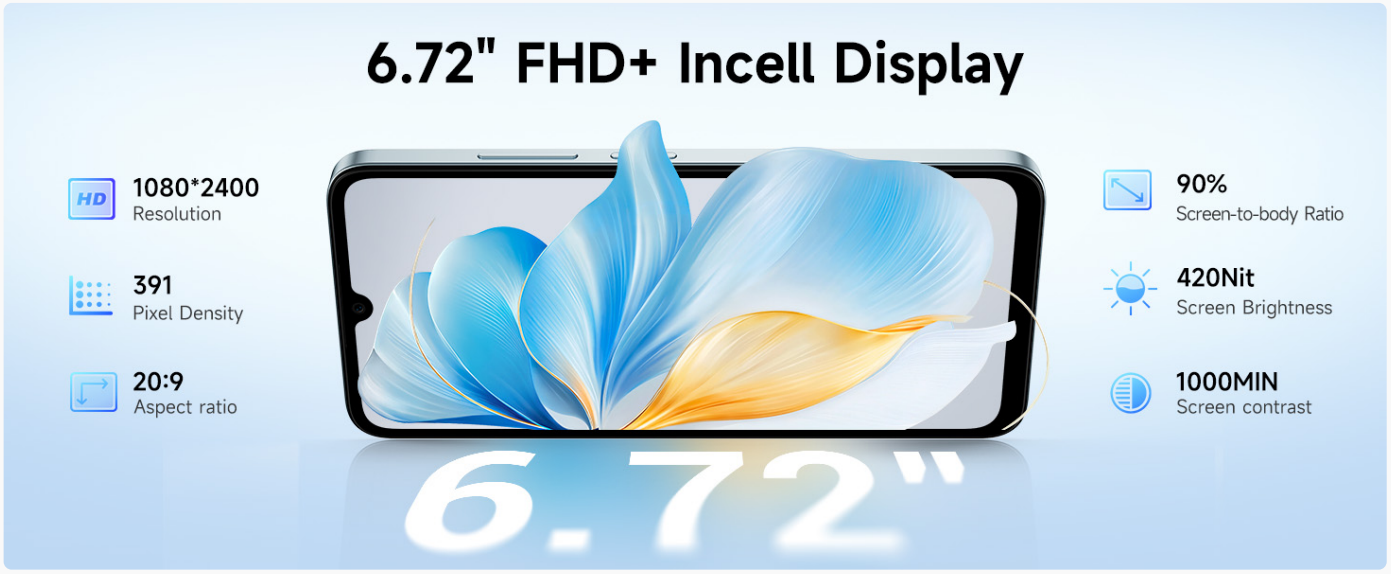


Image: Details of the 6.72-inch FHD+ in-cell display, including resolution, aspect ratio, pixel density, and screen brightness.

3.4 Camera System

Capture stunning photos with the 50MP rear camera (F1.8 aperture) and take clear selfies with the 16MP front camera (Sony IMX471 Sensor). The camera system includes an optimized algorithm and various shooting modes like Portrait, Night Mode, and Panorama.



Image: Illustration of the 50MP rear camera and 16MP front camera, highlighting their specifications and capabilities.



Image: Examples of different shooting modes available on the FOSSIBOT S2, including Portrait, Night Mode, and Panorama.

3.5 Operating System

The FOSSIBOT S2 runs on the Android 14 operating system, providing a seamless, efficient, and secure user experience with enhanced simplicity and access to a wide range of applications.



Image: Visual representation of the Android 14 operating system interface on the FOSSIBOT S2.

3.6 Design

With an ultra-slim 8.6mm body and a weight of 201g, the FOSSIBOT S2 offers a comfortable tactile experience and is easy to carry. It is available in Space Gray and Light Sky Blue.



Image: Depiction of the FOSSIBOT S2's sleek and stylish design, highlighting its slim profile and light weight.

3.7 Connectivity and Security

The FOSSIBOT S2 supports dual 4G SIM cards and a TF card simultaneously. It offers global frequency band compatibility. For security, it includes a side-mounted fingerprint sensor and AI face unlock. Multi-function NFC is also supported for convenient mobile payments.



Image: Diagram showing the 3-card slot design for dual Nano SIMs and one TF card, along with supported global frequency bands.

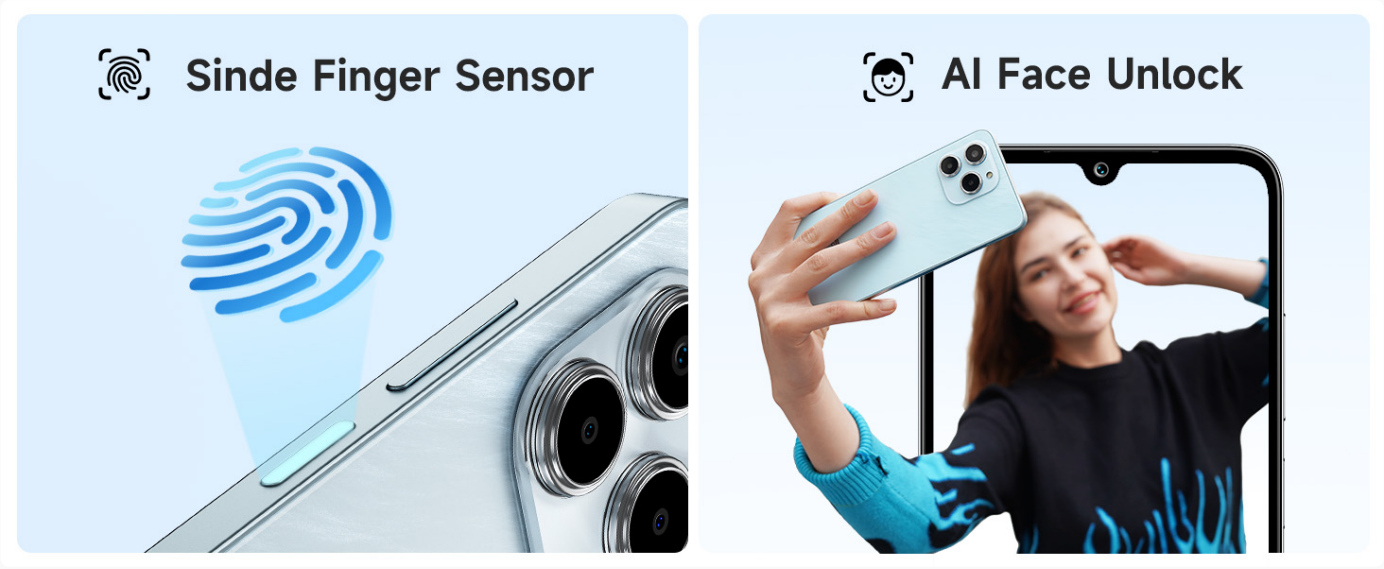


Image: Illustrations of the side-mounted fingerprint sensor and AI face unlock features for secure access.



Image: Depiction of the multi-function NFC capability, showing its use for Google Pay.

4. Setup

4.1 Inserting SIM and TF Cards

1. Locate the SIM tray on the side of the phone.
2. Insert the SIM tray ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano SIM cards (up to two) and/or a TF card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the phone until it is flush with the device body.

4.2 Initial Power On

1. Press and hold the Power button (located on the side) until the FOSSIBOT logo appears on the screen.
2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

4.3 Network Connection

After inserting your SIM card, the phone should automatically detect your mobile network. If not, navigate to **Settings > Network & internet > Mobile network** to configure APN settings or select your preferred network operator.

5. Operating

5.1 Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom, long-press for context menus.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

5.2 Calls and Messaging

- **Making Calls:** Open the Phone app, enter the number, and tap the call icon.
- **Sending Messages:** Open the Messages app, tap the new message icon, enter recipient and text, then send.

5.3 Camera Usage

Open the Camera app from the home screen or app drawer. Select between photo, video, portrait, night mode, or panorama. Tap the shutter button to capture images or start/stop video recording.

5.4 Wi-Fi and Internet

Go to **Settings > Network & internet > Wi-Fi**. Turn on Wi-Fi, select your desired network, and enter the password if required.

5.5 GPS Navigation

The FOSSIBOT S2 supports GPS, GLONASS, Galileo, and Beidou for accurate positioning. Use pre-installed map applications or download your preferred navigation app from the Google Play Store.



Image: Depiction of the FOSSIBOT S2 being used for GPS navigation in a vehicle, highlighting its multi-system support.

5.6 NFC Functionality

The multi-function NFC allows for contactless payments and quick pairing with compatible devices. To use for payments, ensure Google Pay or a similar app is set up and enabled.

6. Maintenance

6.1 Battery Care

- Avoid extreme temperatures (hot or cold) as they can degrade battery life.
- Use only the provided charger and cable for optimal charging.
- Do not let the battery completely drain frequently.

6.2 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials.

6.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

6.4 Storage Management

Periodically review your installed apps, photos, and videos. Delete unnecessary files or transfer them to a computer or cloud storage to free up internal memory. Utilize the TF card slot for additional storage.

7. Troubleshooting

7.1 Phone Not Turning On

- Ensure the battery is charged. Connect the phone to the charger for at least 15 minutes before attempting to power on.
- Press and hold the Power button for 10-15 seconds to force a restart.

7.2 Network Issues

- Check if your SIM card is properly inserted.
- Verify that mobile data is enabled in settings.
- Restart the phone.
- Contact your network provider to confirm service availability in your area.

7.3 Apps Crashing or Freezing

- Close the app and reopen it.
- Clear the app's cache and data in**Settings > Apps > [App Name] > Storage**
- Update the app to its latest version from the Google Play Store.
- If the issue persists, uninstall and reinstall the app.

7.4 Charging Problems

- Ensure the charging cable and adapter are securely connected.
- Try a different power outlet.
- Inspect the charging port for any debris or damage.

7.5 Factory Reset

If severe issues persist, you may consider a factory reset.**Warning: This will erase all data on your phone. Back up important data before proceeding.** Go to **Settings > System > Reset options > Erase all data (factory reset)**

8. Specifications

Feature	Specification
Model Name	S2
Operating System	Android 14
Processor	MediaTek Helio 6769 (G85) Octa-Core, 2 GHz CPU Speed
RAM Memory	8 GB (expandable to 20 GB with virtual memory)
Internal Storage	256 GB (expandable to 1 TB via TF card)
Display Size	6.72 Inches FHD+ In-cell
Resolution	1080 x 2400
Rear Camera	50 MP
Front Camera	16 MP
Battery Capacity	5000 mAh
Charging	18W Fast Charging
Dimensions	6.57 x 3.03 x 0.34 inches
Item Weight	1 pounds
Connectivity	4G, Wi-Fi, Bluetooth, GPS (GLONASS+GPS+Galileo+Beidou), NFC
SIM Support	Dual 4G SIM
Security Features	Side Fingerprint Sensor, AI Face Unlock

9. Warranty and Support

FOSSIBOT offers a **1-year long-term warranty** for the S2 smartphone. Additionally, a **30-day free return guarantee** is provided. For any inquiries or assistance, FOSSIBOT provides year-round customer support and 24-hour online customer service. Please refer to the warranty card included in your package for detailed terms and conditions.
For support, please visit the official FOSSIBOT website or contact their customer service channels as indicated in your warranty documentation.

© 2025 FOSSIBOT. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I forgot the PIN code for my new FOSSIBOT S2 and need to perform a factory reset, but the recovery mode menu is in Chinese. Which option should I select to reset the device?

When a FOSSIBOT S2 or similar MediaTek-based Android device displays the recovery/factory menu in Chinese, you are likely in the "Factory Mode" menu rather than the standard Android Recovery. To perform a factory reset...

Read full answer

Open the live page

https://manuals.plus/asin/B0DP6NTG2F

More documents and user manuals: **https://manuals.plus/**