Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Yixinxin UK4K806BU01

Yixinxin 4K 56MP Underwater Digital Camera User Manual

Model: UK4K806BU01

1. Introduction

Thank you for purchasing the Yixinxin 4K 56MP Underwater Digital Camera. This manual provides essential information for the safe and effective operation of your camera. Please read it thoroughly before use and retain it for future reference.

2. Safety Information

- Ensure all ports and battery/memory card compartments are securely closed before submerging the camera in water.
- Do not expose the camera to extreme temperatures or direct sunlight for extended periods.
- Use only specified batteries and accessories.
- Keep the camera away from strong magnetic fields.
- Clean the camera with a soft, damp cloth. Avoid harsh chemicals.

3. Package Contents

Verify that all items are present in your package:

- Yixinxin 4K 56MP Digital Camera
- 1250mAh Lithium-ion Battery
- 32GB Memory Card
- Type-C USB Cable
- Lanyard
- Storage Bag
- User Manual (this document)
- Cleaning Cloth



Image 3.1: Included accessories for the Yixinxin 4K 56MP Underwater Digital Camera.

4. Camera Overview

Familiarize yourself with the main components of your camera:



Image 4.1: Front and rear views of the Yixinxin 4K 56MP Underwater Digital Camera.

Front Panel:

- **Digital Lens:** Main camera lens.
- **Front LCD Screen:** For selfies and easy framing.
- **Flash:** Provides illumination in low light.

Rear Panel:

- **Main LCD Screen:** For viewing, menu navigation, and playback.
- **Power Button:** Turns the camera on/off.
- **Zoom Buttons (T/W):** Adjusts digital zoom.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **Mode Button:** Switches between photo, video, and playback modes.
- **SET/OK Button:** Confirms selections in menus.
- **Menu Button:** Accesses camera settings.

5. Setup

5.1 Battery Installation

1. Locate the battery compartment on the side or bottom of the camera.
2. Open the compartment latch.
3. Insert the 1250mAh Lithium-ion battery, ensuring correct polarity.
4. Close the compartment securely until it clicks into place.



Image 5.1: Battery installation and capacity.

5.2 Memory Card Installation

1. Locate the memory card slot, usually adjacent to the battery compartment.
2. Insert the provided 32GB memory card with the gold contacts facing the correct direction (refer to the diagram inside the compartment if available).

3. Push the card gently until it locks into place.
4. Close the compartment cover securely.

5.3 Initial Charging

1. Connect the camera to a power source using the provided Type-C USB cable.
2. The charging indicator light will illuminate.
3. Charge the camera fully before first use (approximately 2-3 hours). The indicator light will change or turn off when charging is complete.

6. Operating the Camera

6.1 Power On/Off

Press and hold the **Power Button** for a few seconds to turn the camera on or off.

6.2 Basic Photo Capture

1. Turn on the camera. Ensure it is in photo mode (indicated on the screen).
2. Frame your shot using either the front or rear LCD screen.
3. Half-press the **Shutter Button** to activate autofocus. The autofocus frame on the screen will change from yellow to green when focus is achieved.
4. Fully press the **Shutter Button** to take the photo.



Image 6.1: Autofocus operation and effective still resolutions.

6.3 Video Recording

1. Press the **Mode Button** to switch to video recording mode.
2. Press the **Shutter Button** once to start recording. A recording indicator (e.g., red dot, timer) will appear on the screen.
3. Press the **Shutter Button** again to stop recording.

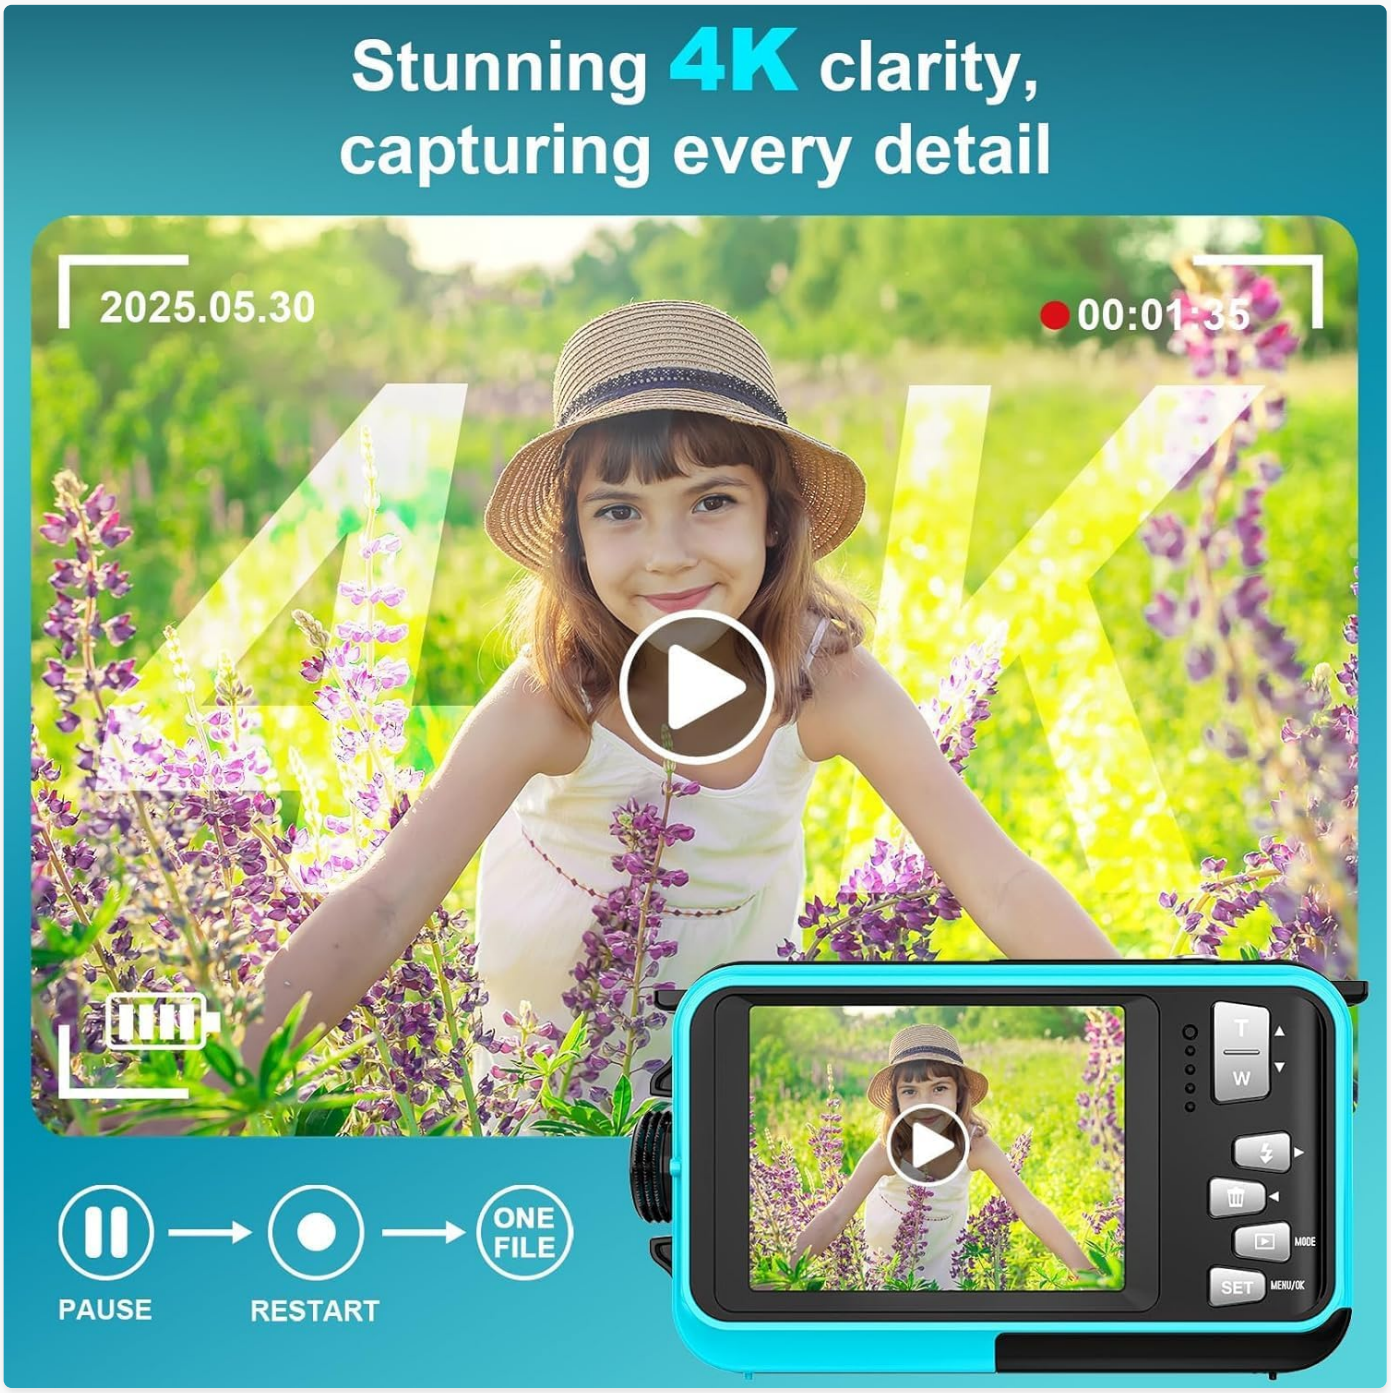


Image 6.2: 4K video recording interface.

6.4 Dual Screen Operation (Selfie Mode)

The camera features a front LCD screen for convenient self-portraits.

1. In photo or video mode, the front screen can be activated for framing.
2. Use the front screen to compose your selfie or group shot.
3. Press the **Shutter Button** to capture.



Image 6.3: Dual-screen functionality for easy selfies.

6.5 Underwater Use

This camera is designed to be waterproof up to 16 feet (approximately 4.8 meters) with an IP68 rating.

- Before submerging, ensure the battery and memory card compartments are completely sealed.
- Avoid opening compartments while underwater or when the camera is wet.
- After use in saltwater, rinse the camera with fresh water and dry thoroughly before opening any compartments.



Image 6.4: Underwater capability with IP68 rating and 16ft depth.

6.6 Digital Zoom Function

The camera supports up to 16X digital zoom.

1. In photo or video mode, press the**T (Telephoto) button** to zoom in.
2. Press the **W (Wide) button** to zoom out.



Image 6.5: Digital zoom capabilities up to 16X.

6.7 Playback/Review

1. Press the **Mode Button** to enter playback mode.
2. Use the navigation buttons (often the zoom buttons double as navigation in playback) to scroll through your photos and videos.
3. Press **SET/OK** to view a video or a photo in full screen.

6.8 Menu Navigation

1. Press the **Menu Button** to access camera settings.
2. Use the navigation buttons to scroll through menu options.
3. Press **SET/OK** to select an option or enter a sub-menu.
4. Press the **Menu Button** again to exit the menu.

7. Maintenance

7.1 Cleaning

- Use the provided cleaning cloth to gently wipe the lens and screens.
- For stubborn smudges, slightly dampen the cloth with water. Do not use alcohol or chemical cleaners.
- Ensure the camera is dry before storing.

7.2 Waterproofing Care

- Regularly inspect the rubber seals around the battery and memory card compartments for any signs of damage or debris.
- Keep the seals clean and free of sand or lint.
- After each underwater use, especially in saltwater, rinse the camera thoroughly with fresh water and allow it to air dry completely before opening any compartments.

7.3 Battery Care

- Store the battery in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing for an extended period, charge the battery to about 50% capacity.

8. Troubleshooting

If you encounter issues with your camera, refer to the following common problems and solutions:

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted.
- **Cannot take photos/videos:** Check if the memory card is inserted correctly and has sufficient free space. The camera might also be in playback mode.
- **Images are blurry:** Ensure the lens is clean. Half-press the shutter button to allow the camera to autofocus before fully pressing.
- **Water leakage:** Immediately remove the camera from water. Open compartments and dry thoroughly. Inspect seals for damage. Contact support if damage is found.
- **Screen is blank:** Check battery level. Try restarting the camera.

9. Specifications

Feature	Specification
Brand	Yixinxin
Model Name	UK4K806BU01
Product Type	Compact Digital Camera
Color	Blue
Effective Still Resolution	56 Megapixels

Video Resolution	4K
Waterproof Rating	IP68, up to 16 feet (approx. 4.8 meters)
Screen	2.8 inch LCD (Dual Screen)
Optical Zoom	1x
Digital Zoom	16x
Image Stabilization	Digital
Focus Type	Autofocus (49 points)
Aperture Modes	F2.8-F5.6
ISO Range	100-6400
Photo Sensor Technology	CMOS
Photo Sensor Size	1/3 inch
Supported File Formats	JPG, AVI
Battery Type	1250mAh Lithium-ion
Connectivity Technology	USB (Type-C compatible)
Special Features	Continuous shooting and recording during charging
Model Year	2024

10. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Yixinxin website. Keep your proof of purchase for warranty claims.

© 2024 Yixinxin. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DPW598VS

More documents and user manuals: **https://manuals.plus/**