ZIPCIDE ZD39-1210

ZIPCIDE 64GB Voice Recorder User Manual

Model: ZD39-1210
Brand: ZIPCIDE

1. Introduction

This manual provides detailed instructions for the operation and maintenance of your ZIPCIDE 64GB Voice Recorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize its capabilities.



Figure 1.1: The ZIPCIDE 64GB Voice Recorder shown with its included accessories, including headphones and various cables.

2. What's in the Box

- 1 x ZIPCIDE 64GB Voice Recorder
- 1 x Type-C Charging Cable
- 1 x Headphone
- 1 x Headphone Adaptor Cable
- 1 x Type-C OTG Cable
- 1 x User Manual



Figure 2.1: All components included in the product package, laid out for clear visibility.

3. Product Features

3.1. High-Performance Recording

Equipped with advanced dual noise reduction microphones, the recorder supports 1536kbps HD sound recording, ensuring clear and detailed audio capture. It features a professional noise cancellation chip for pure voice recording.



Figure 3.1: Visual representation of the 1536Kbps premium sound quality and built-in DSP noise cancellation technology.

3.2. Ultra-Compact Design

The dictaphone device features a sleek zinc alloy one-piece moulding, making it comfortable to hold and easy to carry in a pocket or small bag. Its ultralight and ultra-compact form factor ensures portability.



Figure 3.2: The compact size of the voice recorder, demonstrating its portability when placed into a bag.

3.3. Large Memory & Long Battery Life

With 64GB of internal memory, the device can store up to 4800 hours of recording files. The built-in rechargeable battery supports up to 30 hours of continuous recording on a single charge. Files are automatically saved when the battery is low to prevent data loss.



Figure 3.3: Key features of the device, including its 64GB internal memory and extended 30-hour continuous recording capability.

3.4. Voice Activated Recording (VOR)

The VOR feature allows the audio recorder to start recording automatically when it detects sound, and stop when silence is detected. This feature has 7 adjustable levels of voice control sensitivity, optimizing recording time and storage space.



Figure 3.4: Illustration of the VOR function, showing how the device activates recording based on sound levels, with sensitivity levels indicated.

3.5. Convenient File Management

Files can be easily transferred to computers via the included Type-C cable. Recordings are saved with a timestamp, making it simple to recognize and manage your audio files directly on your computer. The device can also function as a portable drive.



Figure 3.5: The voice recorder connected to a laptop, illustrating the ease of file transfer and management.

3.6. Multi-functional Capabilities

The ZIPCIDE recorder offers various functions beyond basic recording, including password protection for confidential recordings, Line-in input for direct recording from other audio devices, variable play speed, A-B repeat function, MP3 player capability, screensaver, and one-click delete. It is ideal for lectures, meetings, interviews, speeches, and classes.

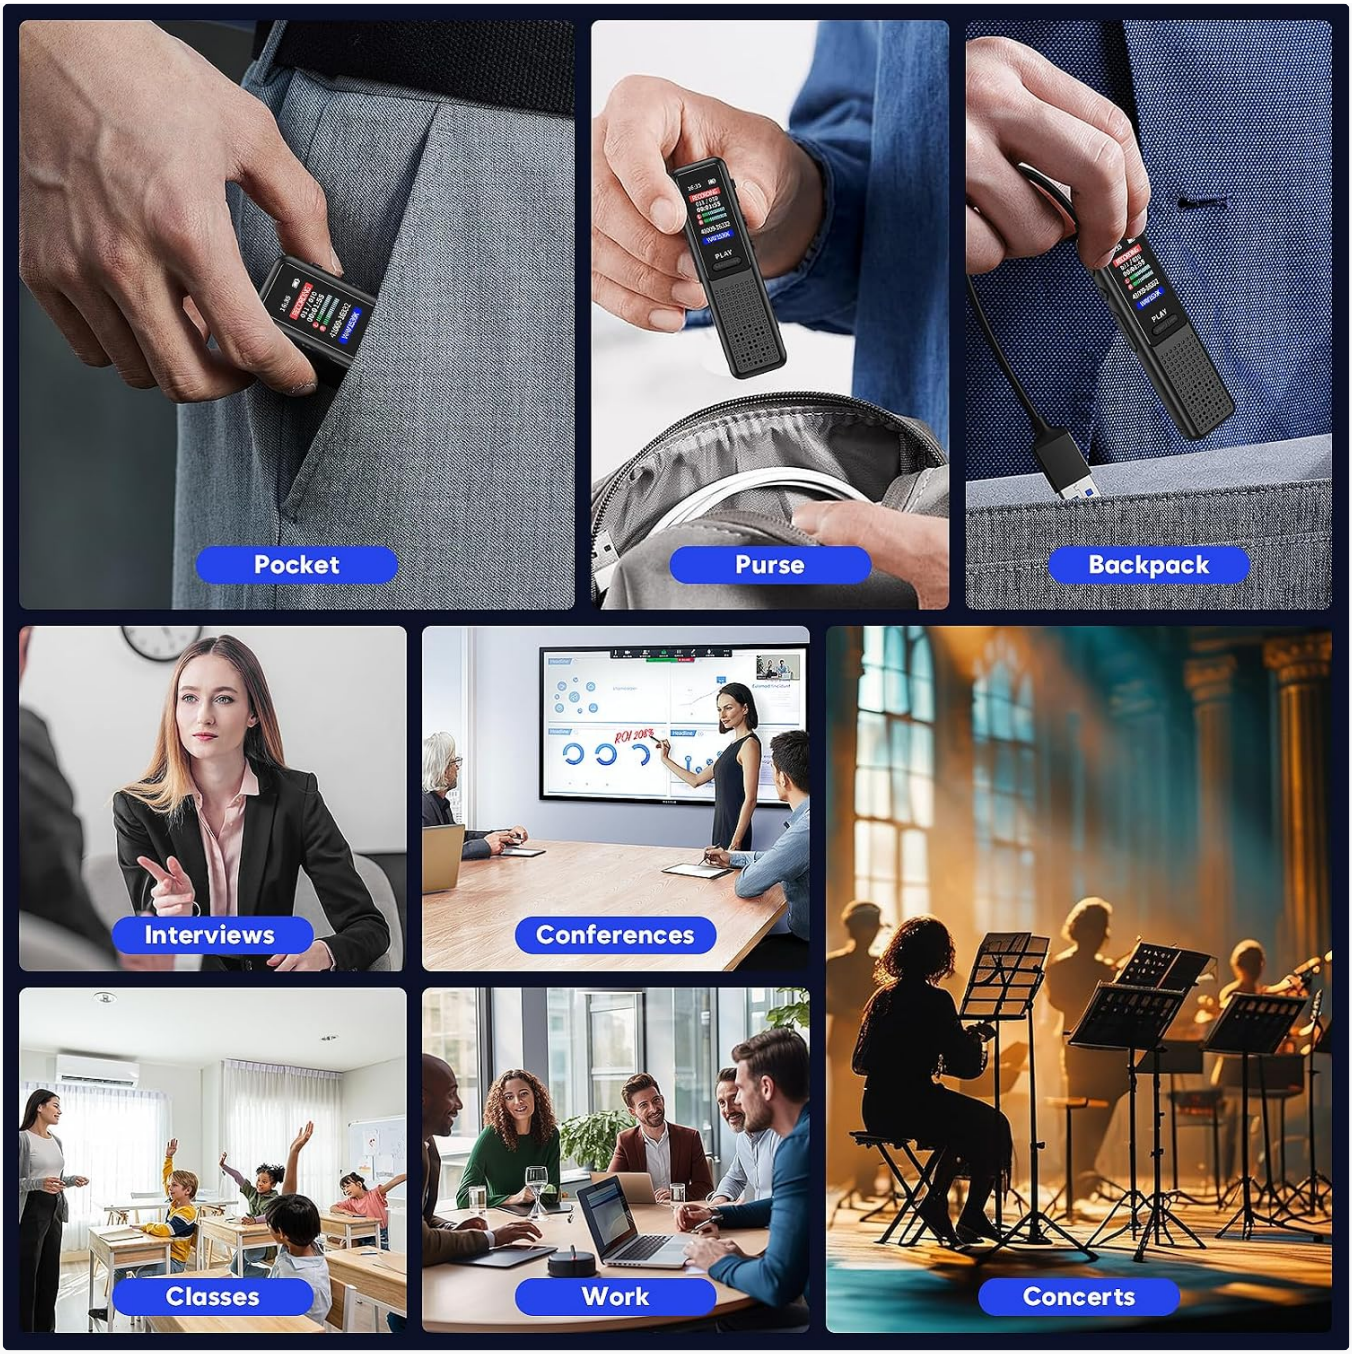


Figure 3.6: Diverse applications of the voice recorder, from personal notes to professional settings like interviews and conferences.

4. Setup

4.1. Initial Charge

Before first use, fully charge the device using the provided Type-C cable connected to a USB power source (e.g., computer USB port, wall adapter). The battery indicator on the screen will show charging status.

4.2. Powering On/Off

To power on the device, press and hold the 'PLAY' button for 3 seconds. The screen will illuminate and display 'WELCOME'. To power off, press and hold the 'PLAY' button again for 3 seconds.

5. Operating Instructions

5.1. One-Touch Recording

To start recording, slide the 'SAVE/REC' button (located on the side) upwards. The device will immediately begin recording. To stop recording and save the file, slide the 'SAVE/REC' button downwards.



Figure 5.1: The simple one-touch slide button for initiating and saving recordings.

5.2. Playback

In standby mode, short press the 'PLAY' button to play the current recording. During playback, short press 'PLAY' again to pause. Press 'PLAY' again to resume. Use the 'Previous Track' and 'Next Track' buttons to navigate between files. Long press these buttons for rewind and fast forward functions, respectively.

5.3. Volume Control

During playback or pause, briefly press the 'VOL' button (located on the top) to access the volume icon. Then, use the 'Up' and 'Down' buttons to increase or decrease the volume level.

5.4. File Deletion

To delete a file, navigate to the desired file during playback or in the file list. Press the 'DEL' button (located on the side) and confirm the deletion when prompted.

5.5. A-B Repeat Function

In playback mode, press the 'A/B' button briefly to enter Repeat Mode. The screen will display a flashing 'A' character. Press the 'A/B' button again to set the 'B' point as the end of the repeat segment. The device will then execute A-B repeat playback. During A-B repeat playback, press the 'A/B' button briefly to exit A-B repeat mode.

6. Maintenance

6.1. Battery Care

To prolong battery life, avoid fully discharging the device frequently. Charge the device regularly, even if not in constant use. Store in a cool, dry place when not in use for extended periods.

6.2. Cleaning

Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

7. Troubleshooting

- **Device does not power on:** Ensure the device is fully charged. If the issue persists, try resetting the device by pressing the 'PLAY' button for an extended period (10-15 seconds).
- **Poor recording quality:** Check microphone placement. Ensure there are no obstructions. Adjust the VOR sensitivity level if voice activation is enabled. Ensure the recording environment is not excessively noisy.
- **Cannot transfer files to computer:** Ensure the Type-C cable is securely connected to both the device and the computer. Try a different USB port or cable. The device should appear as a removable disk drive on your computer.
- **Device freezes or becomes unresponsive:** Press and hold the 'PLAY' button for 10-15 seconds to force a restart.
- **No sound during playback:** Ensure the volume is turned up. If using headphones, ensure they are properly connected.

8. Specifications

Specification	Value
Model Number	ZD39-1210

Memory Storage Capacity	64 GB
Digital Recording Time	Up to 4800 hours (at 32kbps)
Battery Life (Continuous Recording)	30 Hours
Product Dimensions	3 x 0.5 x 0.9 inches
Item Weight	5.6 ounces
Hardware Interface	USB Type C
Microphone Form Factor	Built-In
Audio Format	MP3 Audio
Headphones Jack	TYPE-C
Compatible Devices	Earphone, Laptop, MP3 Player, Personal Computer, Smartphone

9. Warranty and Support

ZIPCIDE offers a 1-year warranty on this product, ensuring quality and reliability. For any issues or inquiries, please contact our customer service support. We are committed to providing professional support within 24 hours and offer 30-day returns and exchanges.

ZIPCIDE

Brand Logo



1 Year Warranty



After-sale Service Support

For further assistance, please visit the ZIPCIDE Store on Amazon.

© 2024 ZIPCIDE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can the ZIPCIDE ZD39-1210 voice recorder append recordings to an existing file, and can I manage multiple separate files for different events like sermons and concerts before downloading them to a computer?

Based on the manual for the ZIPCIDE ZD39-1210, here is how the device handles your requirements:Multiple Separate Files: Yes, this is easily done. Every time you slide the SAVE/REC button up to record and...

Read full answer

I bought the ZIPCIDE ZD39-1210 voice recorder a few months ago on Amazon and forgot the PIN/password. How can I reset it?

The ZIPCIDE ZD39-1210 manual mentions that the device supports password protection for confidential recordings, but it does not provide a specific "master code" or a software-based password reset procedure for users who have forgotten...

Read full answer