realme Realme C75

realme C75 Smartphone User Manual

Model: Realme C75
Brand: realme

1. Introduction

Welcome to the user manual for your new realme C75 smartphone. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. Please read this manual carefully to ensure optimal performance and longevity of your realme C75.

2. Package Contents

Upon unboxing your realme C75, please verify that all the following items are included:

- realme C75 Smartphone
- USB Cable

If any items are missing or damaged, please contact your retailer or realme customer support immediately.

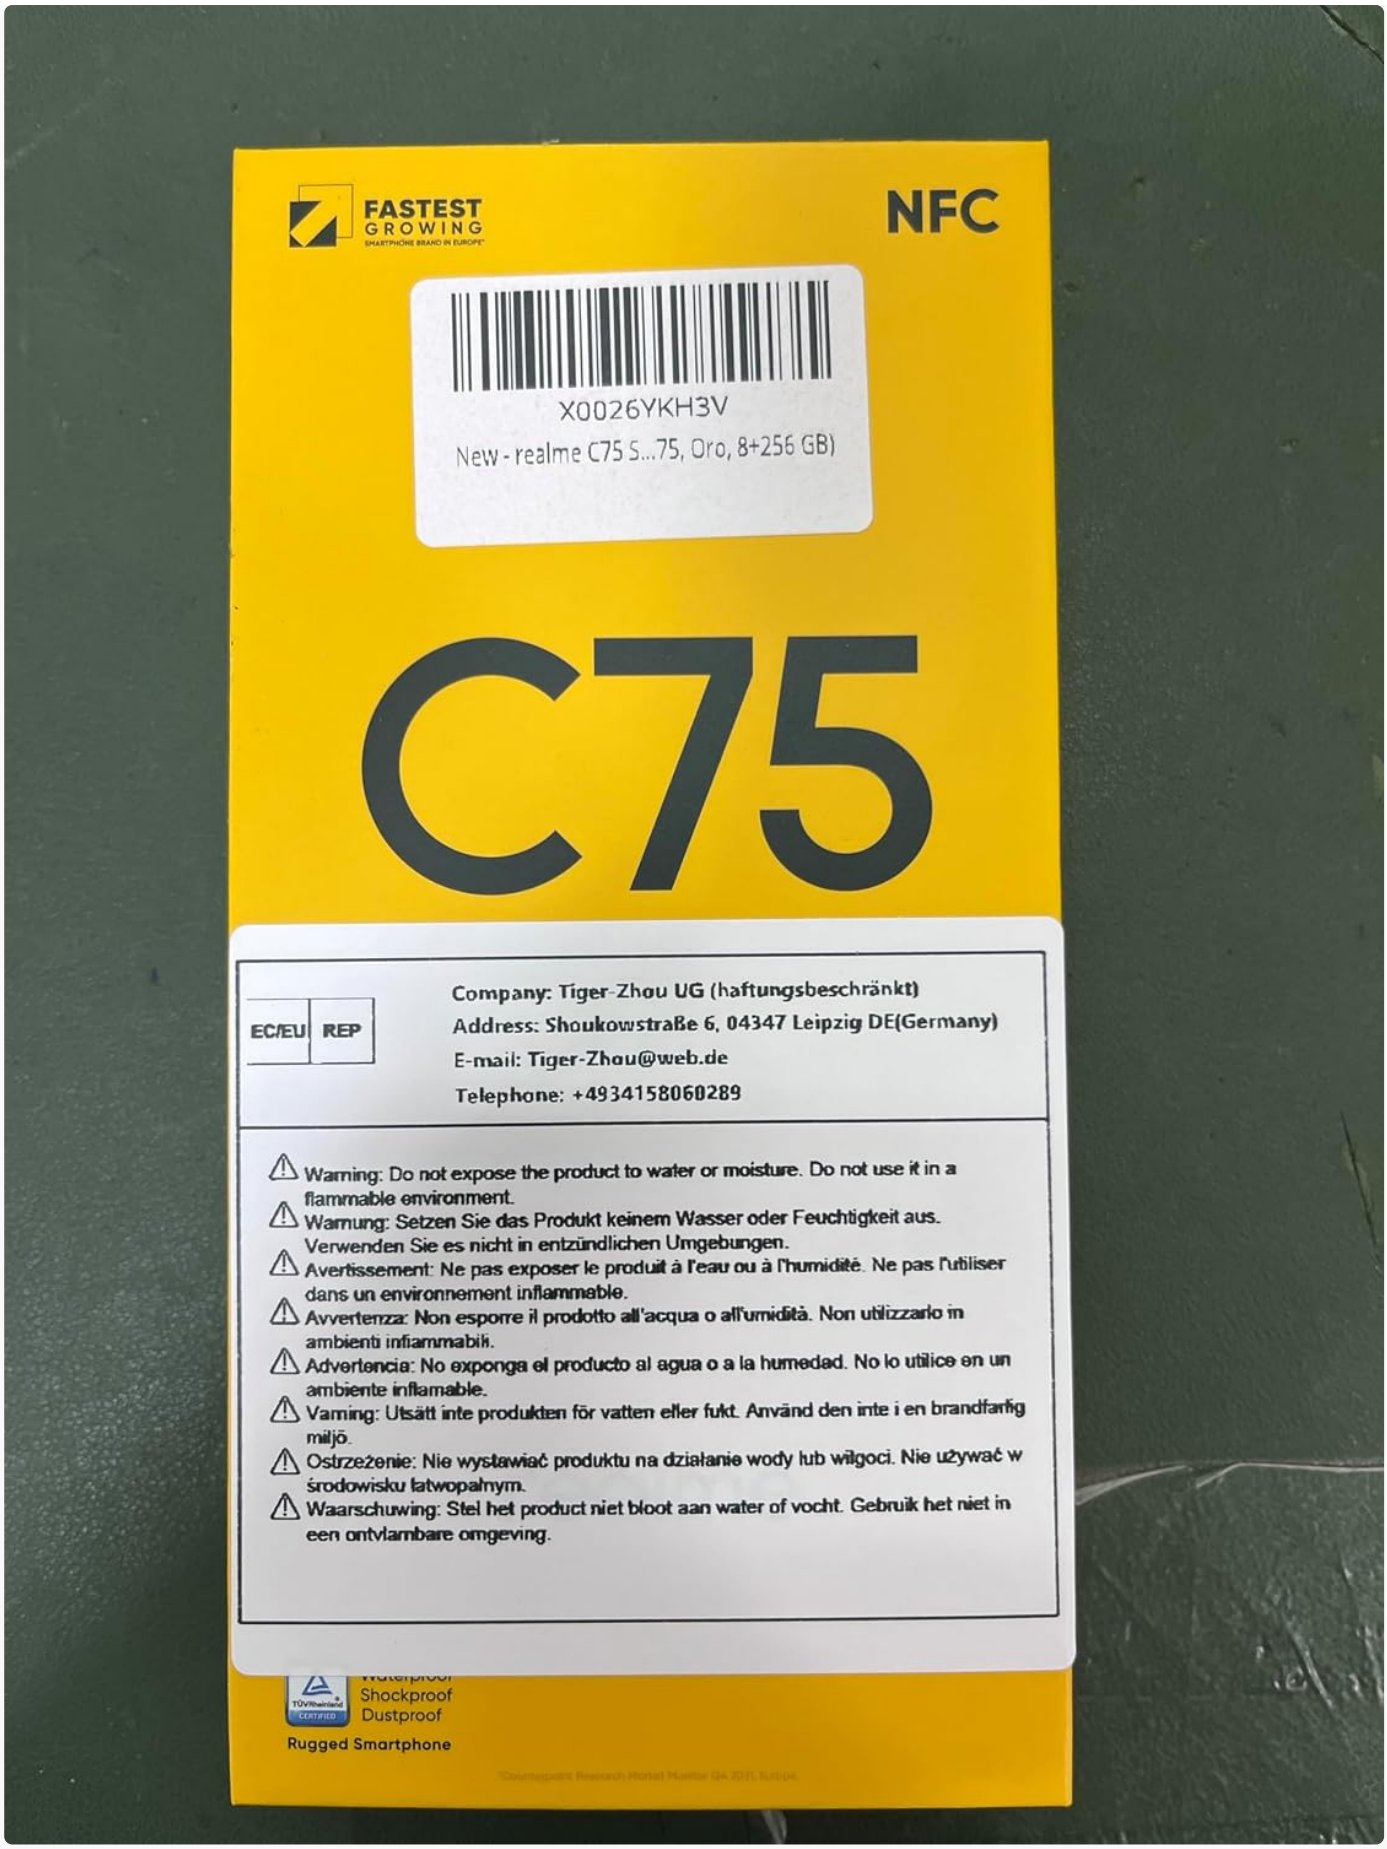


Image: Front of the realme C75 retail packaging.



Image: Back of the realme C75 retail packaging, highlighting key specifications.

3. Product Overview

Familiarize yourself with the physical components of your realme C75 smartphone.

3.1 Device Layout



Image: Front and back view of the realme C75, showcasing its design and camera module.




realme
C75



Image: Detailed front view of the realme C75, showing the 6.72-inch IPS LCD display.





Image: Detailed back view of the realme C75, featuring the 50 MP main camera.



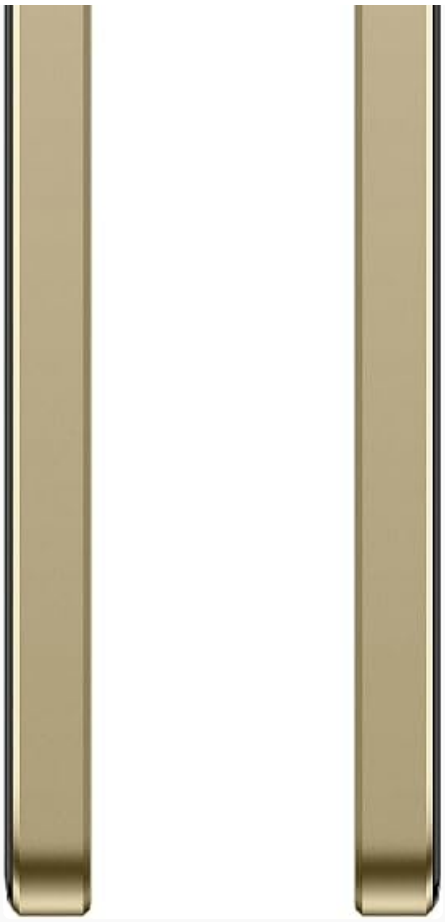


Image: Side profile of the realme C75, illustrating the placement of physical buttons.

- **Display:** 6.72 inches, IPS LCD, 1080 x 2400 pixels resolution.
- **Front Camera:** Located at the top center of the display.
- **Rear Camera Module:** Features a 50 MP main camera, located on the upper left of the back panel.
- **Power Button:** Typically on the right side, often integrated with a fingerprint sensor.
- **Volume Rocker:** Usually located above the power button on the right side.
- **SIM/microSD Tray:** Located on the left side.
- **USB-C Port:** For charging and data transfer, located at the bottom.
- **3.5mm Audio Jack:** Located at the bottom.

4. Setup

4.1 SIM Card and microSD Card Installation

1. Locate the SIM tray on the left side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSDXC card into the designated slots on the tray. The realme C75 supports Dual-SIM functionality and a shared SIM slot for microSDXC expansion.
4. Carefully reinsert the tray into the phone, ensuring it is flush with the device body.

4.2 Initial Power On and Setup

1. Press and hold the Power button on the right side of the phone until the realme logo appears.

2. Follow the on-screen prompts to complete the initial setup, including selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features.

4.3 Charging the Battery

Before first use, it is recommended to fully charge the device. Connect the USB cable to the phone's USB-C port and the other end to a compatible power adapter (not included) or a computer's USB port. The battery indicator on the screen will show the charging status.

5. Operating

This section covers the basic operations of your realme C75 smartphone.

5.1 Basic Navigation

Your realme C75 runs on Android 14. Navigate the interface using touch gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through screens or lists.
- **Pinch:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move icons.

5.2 Making Calls

1. Open the **Phone** app.
2. Enter the phone number using the dial pad or select a contact from your address book.
3. Tap the **Call** button to initiate the call.

5.3 Sending Messages

1. Open the **Messages** app.
2. Tap the **New Message** icon.
3. Enter the recipient's number or select from contacts.
4. Type your message in the text field and tap**Send**.

5.4 Connecting to the Internet

- **Wi-Fi:** Go to **Settings > Network & internet > Wi-Fi** Turn on Wi-Fi, select your desired network, and enter the password if required.
- **Mobile Data:** Go to **Settings > Network & internet > Mobile network** Ensure Mobile data is turned on.

5.5 Using the Camera

Your realme C75 features a 50 MP main rear camera and an 8 MP front camera.

1. Open the **Camera** app.
2. Select your desired mode (e.g., Photo, Video, Portrait).
3. Tap the **Shutter** button to capture a photo or start/stop recording a video.

6. Maintenance

Proper maintenance helps extend the life of your realme C75.

6.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials, as they can damage the device's finish and screen coating.

6.2 Battery Care

The realme C75 is equipped with a 6000mAh non-removable battery. To maximize battery life:

- Avoid extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the original or certified charging accessories.

6.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

7. Troubleshooting

Here are solutions to some common issues you might encounter.

7.1 Device Not Powering On

- Ensure the battery is charged. Connect the phone to a charger for at least 10 minutes before attempting to power on again.
- Press and hold the Power button for 10-15 seconds to force a restart.

7.2 Network Connectivity Issues

- Check if your SIM card is properly inserted.
- Ensure Mobile Data is enabled in settings.
- Restart your phone.
- Verify with your network provider for compatibility, especially if you are in the USA, as this smartphone is not compatible with CDMA networks (e.g., Verizon, Sprint, US Cellular).

7.3 Slow Performance

- Close unused applications running in the background.
- Clear cache and data of frequently used apps.
- Ensure sufficient storage space is available.
- Restart the device periodically.

For more complex issues, please refer to the realme support website or contact customer service.

8. Specifications

Detailed technical specifications for the realme C75 smartphone:

Feature	Specification
Model Name	Realme C75
Operating System	Android 14
Processor	Mediatek Helio G92 Max (12 nm), Octa-core (2x2.0 GHz Cortex-A75 & 6x1.8 GHz Cortex-A55)
RAM	8GB
Internal Storage	256GB
Expandable Storage	microSDXC (uses shared SIM slot)
Display	6.72 inches, IPS LCD, 1080 x 2400 pixels, ArmorShell glass
Rear Camera	50 MP, f/1.8, (wide), PDAF
Front Camera	8 MP, f/2.0, (wide)
Battery	6000mAh non-removable
Connectivity	4G/LTE, Wi-Fi, Bluetooth, 3.5 mm Audio Jack
SIM Support	Dual-SIM (Nano-SIM)
Dimensions	6.89 x 3.5 x 1.93 inches (Package)
Weight	6.5 ounces (Item) / 185 Grams
Color	Gold

8.1 Network Frequencies

SIM CARD 1 & 2:

- **2G:** GSM 850 / 900 / 1800 / 1900
- **3G:** HSDPA 850 / 900 / 2100
- **4G:** FDD-LTE 700(B28) / 800(B20) / 850(B5) / 900(B8) / 1800(B3) / 2100(B1) / 2600(B7)
- **4G:** TDD-LTE 2300(B40) / 2500(B41) / 2600(B38)

Important: Please check with your network provider for compatibility before purchase, especially regarding CDMA networks.

9. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official realme website. For technical support, troubleshooting assistance, or to inquire about repairs, please contact realme customer service.

You can also join the realme community for peer support and updates: realme Community
For information regarding environmental labeling, please visit: Environmental Labeling Information

© 2025 realme. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question