Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XINFUTE RC-SA01

User Manual for RC-SA01 TV Remote Control

Model:RC-SA01

Introduction

This user manual provides detailed instructions for the XINFUTE RC-SA01 TV Remote Control. This remote is designed to be compatible with SEIKI 2017 TV models, specifically SC-32HS703N and SC-39HS950N. It is an original replacement unit, ensuring seamless functionality with your compatible television.

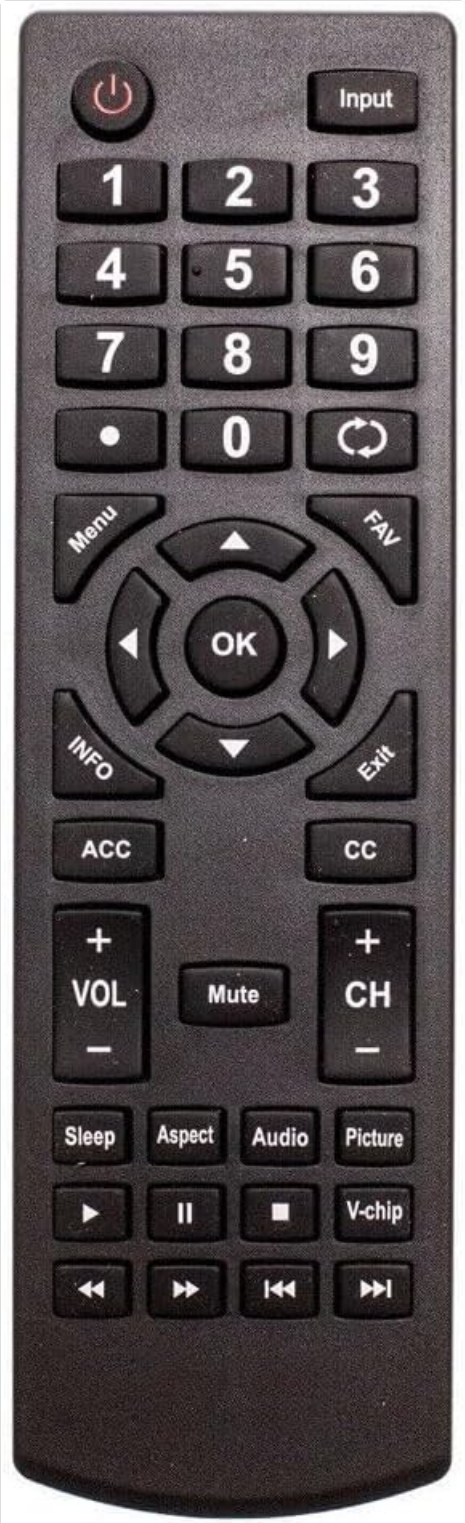


Image:Front view of the RC-SA01 TV Remote Control, showing all buttons clearly arranged.

Setup

The RC-SA01 remote control requires two AAA batteries (not included) for operation. No programming is required; simply insert the batteries, and the remote is ready to use with compatible SEIKI TV models.

Inserting Batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Image:Back view of the RC-SA01 TV Remote Control, highlighting the battery compartment cover.

Operating Instructions

The RC-SA01 remote control features an ergonomic design for comfortable use and provides direct access to all essential TV functions. Point the remote control directly at your television's infrared receiver for optimal performance.

Key Functions:

Button	Function

Button	Function
Power ( )	Turns the TV on or off.
Input	Selects the input source (HDMI, AV, etc.).
0-9 (Number Buttons)	Direct channel selection.
Menu	Accesses the TV's main menu.
Navigation Arrows (▲ ▼ ◄ ►)	Navigates through menus and options.
OK	Confirms selections in menus.
Info	Displays program information.
Exit	Exits the current menu or function.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the TV channel.
Mute	Mutes or unmutes the TV sound.
CC	Activates or deactivates Closed Captions.
Sleep	Sets the TV sleep timer.
Aspect	Adjusts the screen aspect ratio.
Audio	Selects audio options.
Picture	Adjusts picture settings.
V-chip	Accesses V-chip parental controls.
Play/Pause/Stop/Rewind/Fast Forward	Controls media playback (if supported by TV).



Image:Angled view of the RC-SA01 TV Remote Control, showing the layout of the buttons from a different perspective.

Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:**Use a soft, dry cloth to wipe the surface of the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:**Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:**Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

- **Avoid Drops:**Protect the remote from physical impact. Dropping the remote can damage internal components.

Troubleshooting

If you encounter issues with your RC-SA01 remote control, refer to the following common problems and solutions:

Problem	Possible Solution
Remote control is not working.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Make sure you are within the effective range of the TV's sensor.
Some buttons are not responding.	◦ Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or residue. ◦ Ensure the remote is pointed directly at the TV.
Remote works intermittently.	◦ Batteries may be low; replace them. ◦ Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

Specifications

- **Model Number:**RC-SA01
- **Compatible TV Models:**SEIKI SC-32HS703N, SC-39HS950N
- **Material:**ABS Material
- **Connectivity Technology:**Infrared
- **Power Source:**2 x AAA Batteries (not included)
- **Product Dimensions:**6 x 3 x 1 inches
- **Item Weight:**2.82 ounces
- **Special Features:**Ergonomic design, No Programming Required
- **Max Number of Supported Devices:**1 (Television)
- **Manufacturer:**XINFUTE
- **Country of Origin:**China

Warranty

Enjoy a one-year warranty on all purchases of the XINFUTE RC-SA01 TV Remote Control. This warranty covers manufacturing defects and ensures your satisfaction with the product.

Support

Your satisfaction is our priority. All goods are inspected before shipment. If you are not satisfied with your

purchase, please contact us within 24 hours of receipt. For further assistance or inquiries, please refer to the seller's contact information provided at the point of purchase.
For more information about XINFUTE products, you can visit theXINFUTE Store on Amazon.

© 2024 XINFUTE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DPZZWSPF

More documents and user manuals: **https://manuals.plus/**