Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XCWIIE Wood Ceiling Fan with Light

XCWIIE 70 Inch Black Smart Ceiling Fan with Lights User Manual

Model: Wood Ceiling Fan with Light

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your XCWIIE 70 Inch Black Smart Ceiling Fan with Lights. This modern ceiling fan features a silent DC motor, smart control options (remote, app, voice), reversible airflow, and adjustable LED lighting. Please read this manual thoroughly before installation and use to ensure safe and efficient operation. Keep this manual for future reference.



Image: Illustration of the high-quality DC motor, highlighting its quiet operation, reliability, ultra-powerful performance, long-lasting life, and energy efficiency compared to traditional AC fans.



Image: Chart illustrating the quiet operation of the fan, showing its noise level is below 30dB, comparable to a library or flower sound, ensuring a super quiet environment.

Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these guidelines:

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. Consult a qualified electrician if you are unsure.
- The mounting structure must be capable of supporting the weight of the fan (at least 35 lbs).
- Do not operate the fan with a damaged power cord or plug.
- Keep hands, clothing, and other objects away from fan blades during operation.
- This fan is suitable for indoor and covered outdoor use. Do not expose to direct water spray.
- Do not attempt to repair or modify the fan yourself. Contact customer support for assistance.

Package Contents

Verify that all components are present before beginning installation:

- 1 x Quiet DC Motor
- 1 x Remote Control
- 1 x LED Light Kit
- 3 x Black Wood Fan Blades
- 3 x Down Rods (5", 10", 24")
- 1 x English User's Manual
- Special accessories for inclined ceilings



Image: Detailed view of the fan components including the US standard canopy, silent reversible DC motor, ABS blades, and 22W integrated LED light.

Specifications

Brand	XCWIIE
Model Name	Modern Smart Ceiling Fan (Wood Ceiling Fan with Light)
Size	70 Inch
Color	Black Ceiling Fan
Material	Wood
Power Source	AC/DC
Control Method	App, Remote, Voice (Alexa, Google Assistant)

Special Features	3 Down Rods (5", 10", 24"), Max Air Volume 9660CFM, Smart Control, Solid Wood Blades, Damp Rated, Reversible DC Motor, Adjustable Light (3000K-5000K, 10-100% dimming)
Indoor/Outdoor Usage	Indoor, Covered Outdoor
Product Dimensions	70 x 70 x 25 inches
Noise Level	Less than 30dB
Certifications	CE, ETL, FCC

Installation

Detailed installation instructions are provided in the included English User's Manual. Below are general steps and considerations:

1. **Preparation:** Turn off power at the circuit breaker. Ensure the mounting location can support the fan's weight.
2. **Mounting Bracket:** Securely attach the mounting bracket to the ceiling junction box.
3. **Downrod Selection:** Choose the appropriate downrod (5", 10", or 24") for your ceiling height. Longer downrods (20"/40" or more) may be available upon request from the manufacturer.
4. **Wiring:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the manual. Ensure all connections are secure.
5. **Fan Assembly:** Attach the fan motor assembly to the downrod and then hang it on the mounting bracket.
6. **Blade Installation:** Securely attach the three black wood fan blades to the motor housing.
7. **Light Kit Installation:** Install the LED light kit according to the instructions.
8. **Canopy Installation:** Slide the canopy up to cover the mounting bracket and wiring, securing it in place.

This fan is suitable for flat ceilings or sloped/vaulted ceilings with a tilt angle of ≤20°.

Operation

Your XCWIIE Smart Ceiling Fan can be operated via the included remote control, the TUYA app, or voice commands through Alexa and Google Assistant.

Fan Functions:

- **Speed Control:** The fan offers 6 adjustable speeds.
    - Speed 1-2: Low, suitable for sleep.
    - Speed 3-4: Medium, suitable for family activities.
    - Speed 5-6: High, suitable for summers or strong airflow needs.
- **Reversible Function:** The powerful DC motor allows for dual-direction blade rotation.
    - **Summer Mode (Downward Airflow):** Circulates air downwards to create a cooling effect.
    - **Winter Mode (Upward Airflow):** Circulates warm air upwards to improve heat distribution.
- **Timer:** Set the fan to turn off automatically after 1, 4, or 8 hours.



Image: Illustration of the reversible function, showing downward airflow for summer cooling and upward airflow for winter heat circulation.



Image: Visual representation of the 6 adjustable fan speeds, indicating suitable speeds for sleeping, family activities, and summer use.

Light Functions:

- **Adjustable Brightness:** The integrated LED light can be dimmed from 10% to 100%.
- **Color Temperature:** Choose from 3 color temperatures:
  - 3000K (Warm Light)
  - 4000K (Neutral Light)
  - 5000K (Cool Light)
- **Light Memory Function:** The light will remember your last setting.



Image: Displaying the adjustable light features, including 10-100% infinite dimming and three color temperature options (3000K, 4000K, 5000K).



Image: Close-up of the Eye-Care LED beads, highlighting features like uniform light, softened line of sight, no flashing, and long lifespan.

Smart Control Features

Your XCWIIE ceiling fan integrates with smart home systems for convenient control.

- **Remote Control:** Use the included remote to adjust fan speed, light settings, and direction. A wall bracket is provided for remote storage.
- **TUYA App Control:** Download the TUYA app on your smartphone to control all fan and light functions from anywhere. Follow the app's instructions for pairing.
- **Voice Control (Alexa/Google Assistant):** Connect your fan to Amazon Alexa or Google Assistant for hands-free operation.
    - Ensure your fan is connected to the TUYA app first.
    - Enable the TUYA skill in your Alexa or Google Home app.
    - Discover devices and assign a name to your fan (e.g., "Living Room Fan").
    - Use commands like "Alexa, turn on the ceiling fan" or "Hey Google, set the fan speed to 3."

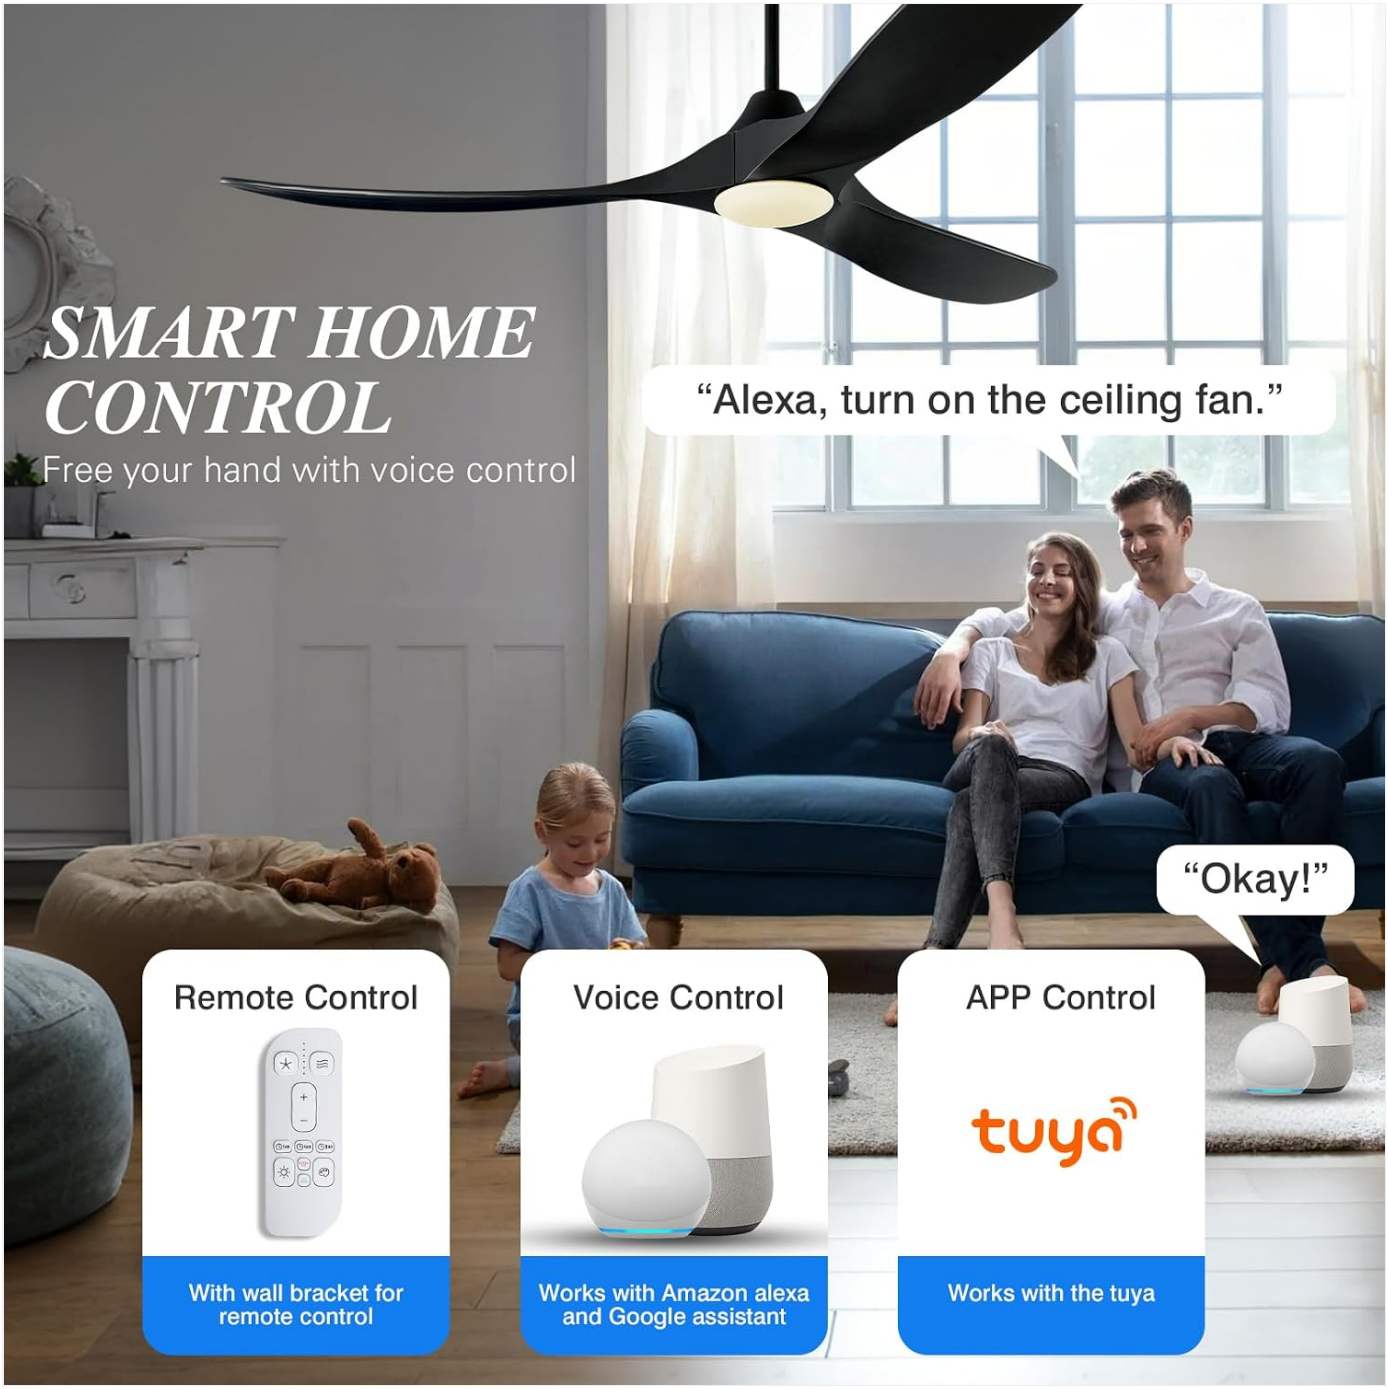


Image: Demonstrates the various smart control methods: remote control with wall bracket, voice control via Amazon Alexa and Google Assistant, and control through the TUYA app.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Balance:** Check fan blades for any wobbling. If wobbling occurs, ensure all blade screws are tightened. A balancing kit may be used if necessary.
- **Tighten Fasteners:** Annually check all screws and fasteners for tightness.
- **Light Source:** The LED light kit is integrated. If it malfunctions, contact customer support for replacement or service.
- **Power Off:** Always turn off the power at the circuit breaker before performing any cleaning or maintenance.

Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use a blade balancing kit; Ensure mounting bracket is securely fastened.
Light does not work	Loose wire connection to light kit; Faulty LED driver; Remote control battery low.	Check light kit wiring; Contact customer support for LED driver issues; Replace remote control battery.
Remote control not working	Low battery; Not paired with fan; Obstruction between remote and receiver.	Replace battery; Re-pair remote with fan (refer to manual); Ensure clear line of sight.
Smart control (App/Voice) not working	Wi-Fi connectivity issues; Incorrect app pairing; Skill not enabled.	Check Wi-Fi connection; Re-pair fan with TUYA app; Ensure TUYA skill is enabled in Alexa/Google Home.

If problems persist after attempting these solutions, please contact XCWIIE customer support.

Warranty and Support

XCWIIE products are designed for quality and reliability. For warranty information, technical support, or replacement parts, please refer to the contact information provided in your product packaging or visit the official XCWIIE website. Please have your model number and purchase date available when contacting support.

© 2024 XCWIIE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQ17W47D

More documents and user manuals: **https://manuals.plus/**