MOKKOM B0DQ7954NG

MOKKOM 42oz Automatic Nut Milk Maker Instruction Manual

Model: B0DQ7954NG

1. Introduction

Thank you for choosing the MOKKOM 42oz Automatic Nut Milk Maker. This appliance is designed to simplify the process of creating fresh, homemade plant-based milks and other beverages. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.

2. Important Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before using the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Exercise extreme caution when moving an appliance containing hot liquid.
- The appliance has a safety switch lock on the lid. Opening the lid during operation will automatically power off the unit.
- The appliance is equipped with overheating protection. If the machine gets too hot, it will automatically turn off and stay off until it cools down.

3. Product Overview

Components

Familiarize yourself with the main parts of your MOKKOM Nut Milk Maker:

- Main Unit with Heating Element and Motor
- Detachable 8-Blade Assembly
- Lid with Safety Switch Lock
- Control Panel with Digital Display
- Ergonomic Handle
- Anti-slip Mats (on base)


MOKKOM
00:15
Hot
212 °F
Room
Temp
Warm
195 °F
Boil
Water
Warm
140 °F
Keep
Warm
Warm
113 °F
Self
Clean
Menu
Select
Delay
Start
Start
Cancel

Figure 3.1: Front view of the MOKKOM Nut Milk Maker, showing the digital display and control buttons.

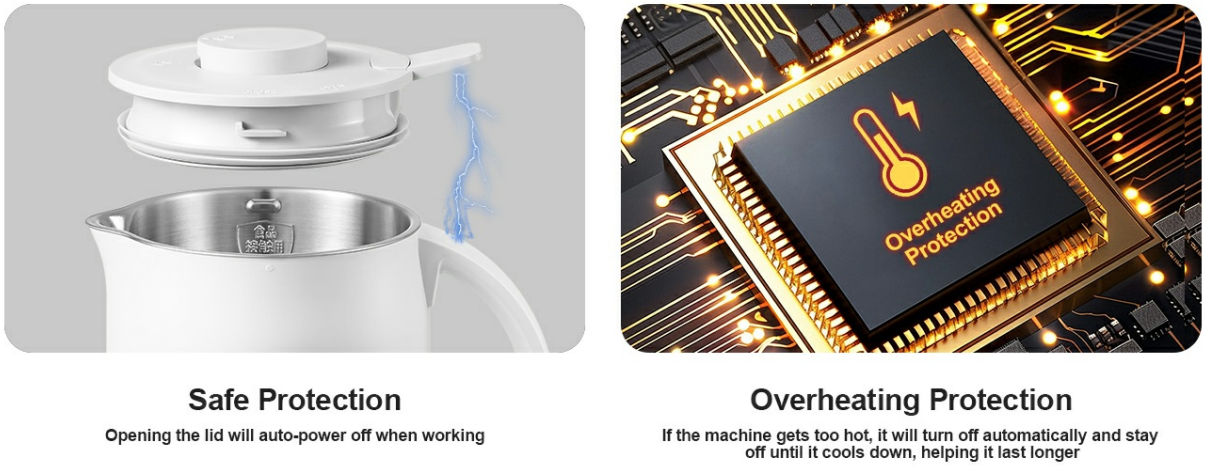


Figure 3.2: Key features including the lid with safety switch, power port, anti-slip mats, and ergonomic handle design.

4. Package Contents

Upon unpacking, please ensure all items are present:

- MOKKOM Nut Milk Maker Main Unit
- Power Cord
- Nut Milk Bag
- Cleaning Brush
- Measuring Spoons
- Instruction Manual (this document)
- Recipe Book

5. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the interior of the pitcher and the blade assembly with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.
3. **Place:** Position the nut milk maker on a stable, flat, and dry surface. Ensure it is away from heat sources and out of reach of children.
4. **Connect Power:** Plug the power cord into the appliance, then into a standard electrical outlet.

6. Operating Instructions

General Operation Steps

1. **Add Ingredients:** Place your desired nuts, grains, or seeds into the pitcher.
2. **Add Water:** Fill the pitcher with water up to the indicated maximum fill line for hot (34oz) or cold (42oz) beverages.
3. **Secure Lid:** Place the lid firmly onto the pitcher, ensuring it is properly locked. The machine will not operate if the lid is not securely closed.
4. **Select Mode:** Press the 'Menu Select' button to cycle through the available programs (e.g., Almond Milk, Soy Milk, Oat Milk, Smoothie, Boil Water, Self Clean).
5. **Start:** Press the 'Start/Cancel' button to begin the selected program.



Figure 6.1: Illustrated steps for preparing and starting a program.

Available Programs and Functions

The MOKKOM Nut Milk Maker offers a variety of programs and functions to suit your needs:

- **Plant-Based Milk Programs:** Dedicated settings for Almond Milk, Soy Milk, Oat Milk, Cashew Milk, Rice Milk, and more. These programs are designed to produce smooth, rich, and creamy results without the need for pre-soaking or filtering.

- **Smoothie:** For blending cold beverages.
- **Boil Water:** Heats water to 212°F (100°C).
- **Self Clean:** A 2-minute rinse cycle for easy preliminary cleaning.



Figure 6.2: The versatility of the MOKKOM Nut Milk Maker for different plant-based milks.

Temperature Modes

The appliance features 5 temperature modes to cater to different beverage requirements:

- **Hot:** 212°F (100°C)
- **Warm:** 195°F (90°C)
- **Warm:** 140°F (60°C)
- **Warm:** 113°F (45°C)
- **Room Temp:** No heating, for cold beverages.



Figure 6.3: Control panel displaying the various temperature options.

Delay Start Function

The 'Delay Start' function allows you to set a timer for up to 24 hours, so your beverage is ready when you need it. Simply add ingredients and water, set the delay time, and the machine will start automatically after the set period.



Figure 6.4: How to use the Delay Start function for convenient preparation.

Keep Warm Function

After a hot beverage program finishes, the 'Keep Warm' function can maintain the temperature for up to 6 hours.

Capacity

The MOKKOM Nut Milk Maker has a capacity of 42oz for cold drinks and 34oz for hot drinks, suitable for 2-4 people.

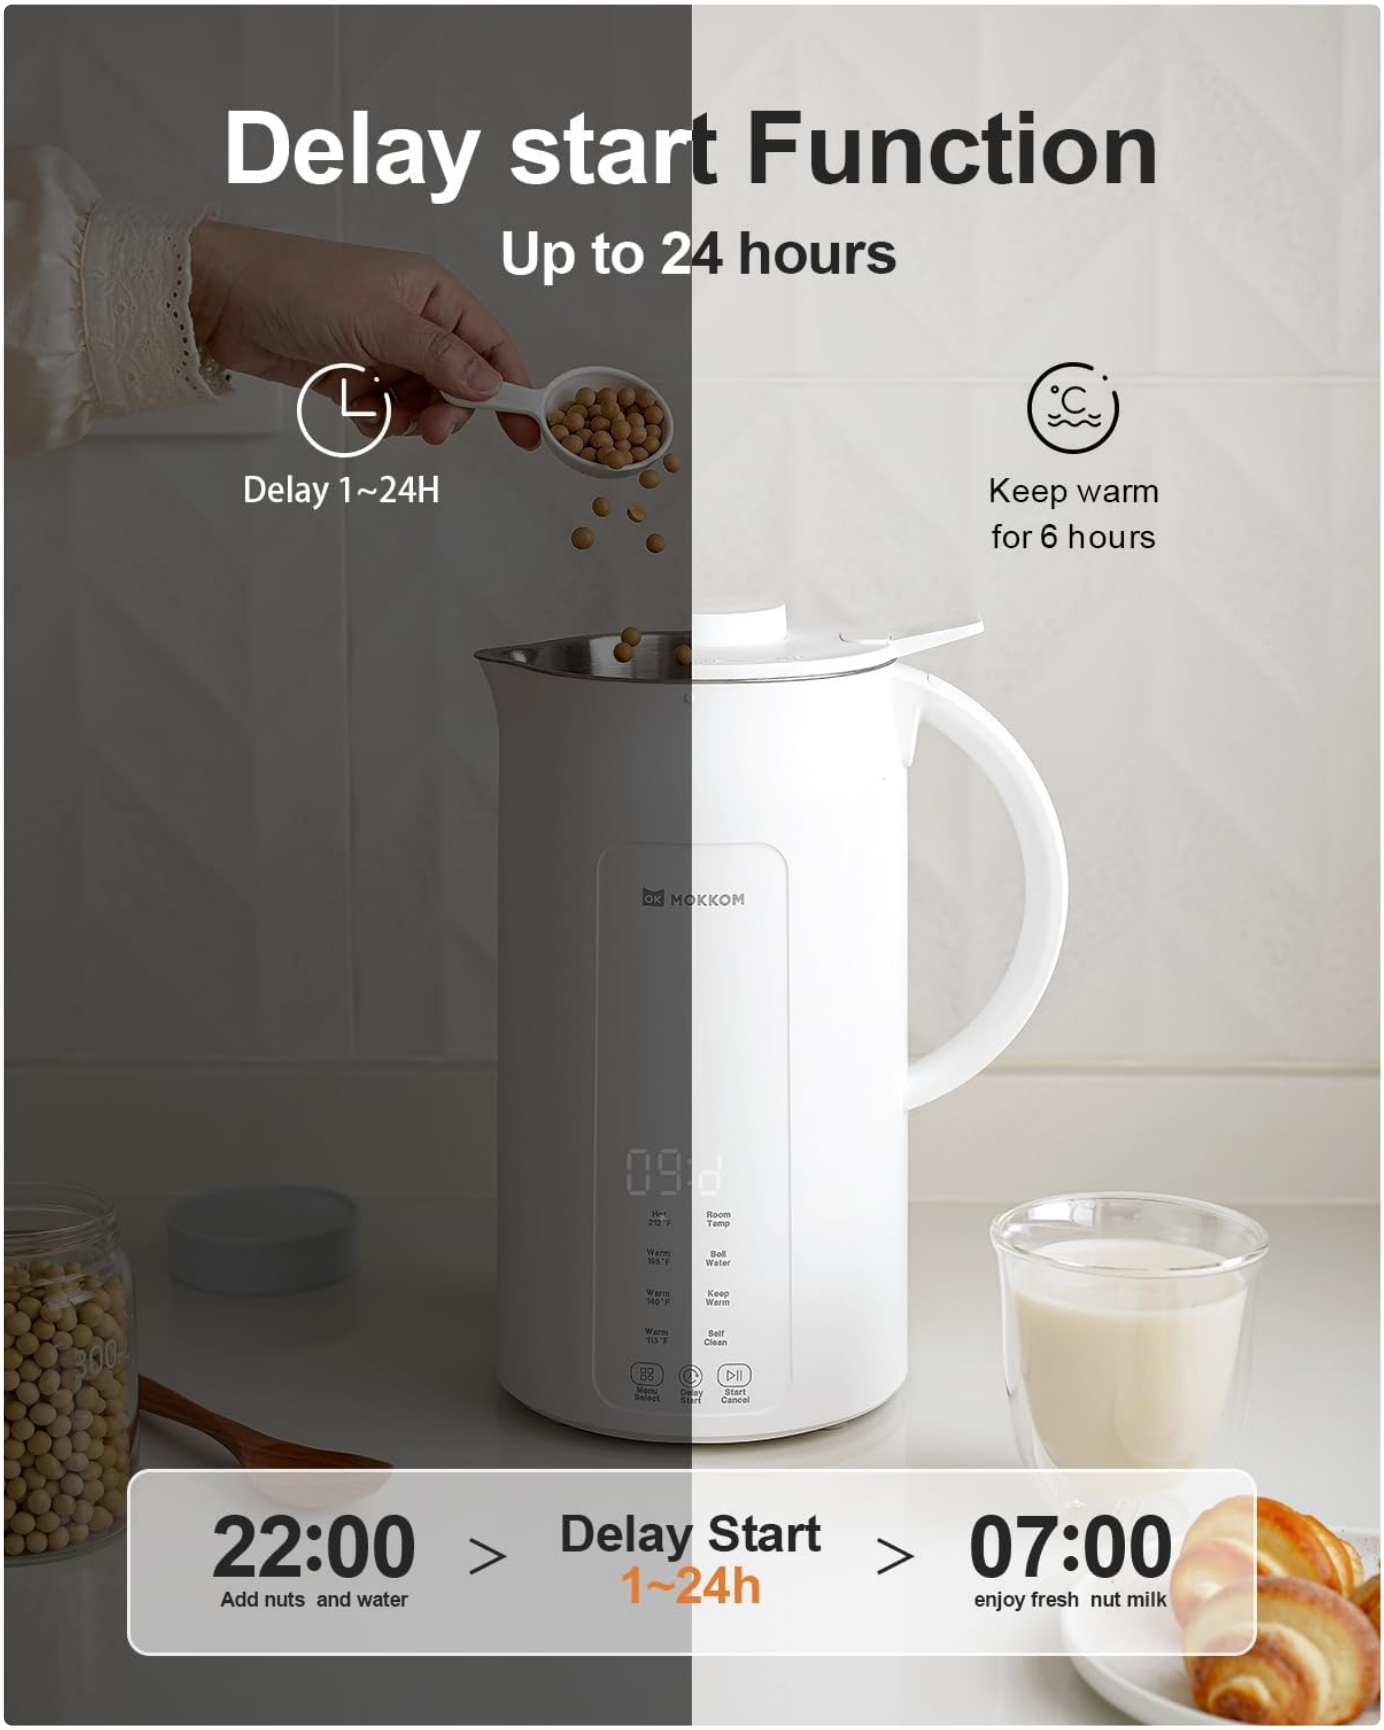


Figure 6.5: The MOKKOM Nut Milk Maker does not require pre-soaking or filtering for smooth results.

7. Cleaning and Maintenance

Regular cleaning ensures the longevity and hygiene of your nut milk maker.

Detachable Blade Cleaning

1. **Power Off and Unplug:** Always ensure the machine is unplugged before cleaning.
2. **Detach Blade:** Turn the machine over. Locate the triangle symbol pointing to "BLADE REMOVE/INSTALL". Insert the other end of the cleaning brush into the screw on the blade. Turn it clockwise to loosen, then remove the blade upwards.
3. **Rinse:** Rinse the detached blade directly under running water using the cleaning brush to remove any residue.
4. **Reinstall:** Align the blade and turn counter-clockwise to secure it back into place.



Figure 7.1: Instructions for detaching and cleaning the blade.

Self-Clean Function

For quick and easy cleaning of the pitcher interior:

1. After use, rinse out any large food particles.
2. Fill the pitcher with clean water up to the minimum fill line.
3. Select the 'Self Clean' program and press 'Start'.

4. After the 2-minute cycle, discard the water and rinse the interior.

Exterior Cleaning

Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.

8. Troubleshooting

If you encounter issues with your MOKKOM Nut Milk Maker, refer to the following table:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Lid not properly secured.	Ensure power cord is securely plugged into both the unit and the outlet. Check that the lid is fully closed and locked.
Error Code 'E3' displayed.	This code may appear briefly after a cycle finishes, indicating completion, or it could signal an issue.	If 'E3' appears immediately after 'End', it typically means the cycle is complete. If it appears unexpectedly or persists, unplug the unit, wait 5 minutes, and plug it back in. If the issue continues, contact customer support.
Milk is not smooth or has residue.	Insufficient blending time; Too many ingredients; Blade not clean.	Ensure ingredients and water are within recommended levels. Run the cycle again if needed. Clean the blade thoroughly.
Machine stops unexpectedly.	Lid opened during operation; Overheating protection activated.	Ensure the lid remains closed during operation. If overheating protection activated, allow the unit to cool down completely before restarting.

9. Specifications

- **Brand:** MOKKOM
- **Model:** B0DQ7954NG
- **Color:** White
- **Capacity:** 42 Fluid Ounces (Cold Drink), 34 Fluid Ounces (Hot Drink)
- **Product Dimensions:** 8.5"D x 6"W x 11"H
- **Power Source:** AC
- **Voltage:** 110V
- **Blade Material:** Stainless Steel
- **Container Material:** Stainless Steel
- **Item Weight:** 4.88 pounds
- **Special Feature:** Portable, Detachable 8-Blade Design, 5 Temperature Modes, Delay Start, Keep Warm, Self-Cleaning

- **UPC:** 768461944867

10. Warranty and Support

The MOKKOM Nut Milk Maker comes with a limited warranty. For specific details regarding warranty coverage and duration, please refer to the warranty card included in your product packaging or contact MOKKOM customer support.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact MOKKOM customer support through the retailer where the product was purchased or visit the official MOKKOM website for contact information.

Online Resources: Visit the MOKKOM Store on Amazon

© 2025 MOKKOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question