**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## BSNAW Y501 (XL-638B)

# BSNAW Y501 Cordless Vacuum Cleaner User Manual

Model: Y501 (XL-638B)
Brand: BSNAW

## 1. Safety Instructions

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Only use the charger supplied by the manufacturer to recharge.
- Store the appliance indoors after use to prevent accidents.

## 2. Package Contents

Verify that all components are present and in good condition upon opening the package.

- Main Motor (Handheld Vacuum)
- Motorized Brush (Floor Head)
- Retractable Metal Tube (Extension Wand)
- 2-in-1 Brush
- Gap Head (Crevice Nozzle)
- Wall Mount Plate
- Adapter (Charger)
- Hair Cleaning Tool
- HEPA Filter (Spare)
- Manual Instruction




Figure 2.1: All included components of the BSNAW Y501 Cordless Vacuum Cleaner.

## 3. Product Overview

The BSNAW Y501 is a versatile cordless stick vacuum cleaner designed for efficient cleaning across various surfaces.



Figure 3.1: Main assembly of the BSNAW Y501 Cordless Vacuum Cleaner.

### Key Features:

- **Powerful Suction:** Up to 45000Pa for deep cleaning.
- **Long-lasting Battery:** 7*2200mAh removable battery, up to 45 minutes runtime in Standard mode.
- **Smart Display:** LED screen shows battery level and power mode.
- **Advanced Filtration:** Fully sealed cyclonic system with HEPA, stainless steel, and sponge filters.
- **Versatile Design:** 8-in-1 functionality, easily converts to handheld.
- **Anti-Tangle Brush:** Large V-shaped roller brush for effective hair pickup.
- **LED Headlights:** Illuminates dark areas for thorough cleaning.
- **Lightweight:** Ultra-lightweight design for easy maneuverability.

## 4. Setup & Assembly

Follow these steps to assemble your BSNAW Y501 Cordless Vacuum Cleaner.

1. **Attach the Extension Tube:** Insert the retractable metal tube into the main motor unit until it clicks securely into place.
2. **Connect the Floor Head:** Attach the motorized brush (floor head) to the other end of the extension tube, ensuring it clicks into place.
3. **Install the Battery:** Insert the removable battery pack into the main motor unit until it locks. Ensure the battery is fully charged before first use.
4. **Charging:** Connect the adapter to the charging port on the main motor or directly to the removable battery. The LED display will indicate charging status.
5. **Wall Mount Installation (Optional):** Use the provided wall mount plate to store and charge your vacuum. Choose a suitable location near a power outlet.

Your browser does not support the video tag.

Video 4.1: Demonstration of assembling the BSNAW Y501 Cordless Vacuum Cleaner and its various configurations.

## 5. Operating Instructions

Learn how to effectively use your BSNAW Y501 Cordless Vacuum Cleaner for different cleaning tasks.

### Power On/Off and Mode Selection:

- Press the power button on the handle to turn the vacuum on or off.
- Use the mode selection button (up/down arrows on the display) to switch between Standard (ECO) and Max (TURBO) suction modes. The LED display will show the current mode and battery percentage.

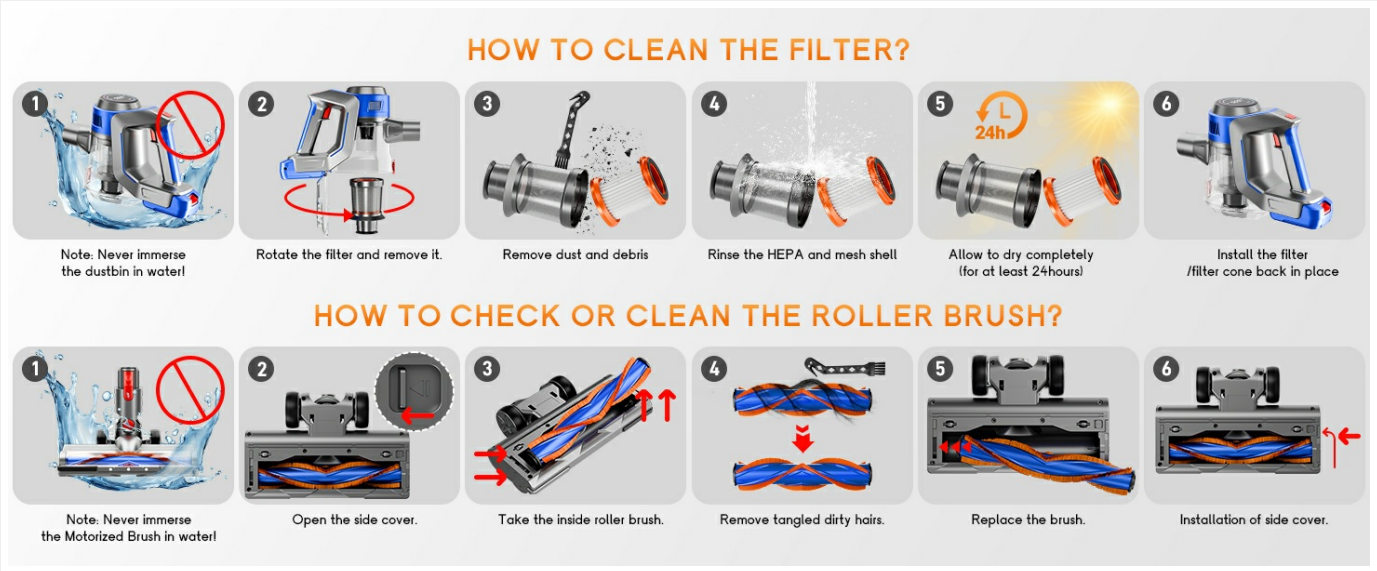



Figure 5.1: LED display indicating battery status and power modes.

### Versatile Cleaning Modes:

- **Stick Vacuum Mode:** Use with the extension tube and motorized brush for floors and carpets. The LED headlights illuminate dust in dark areas.
- **Handheld Vacuum Mode:** Detach the extension tube and attach the 2-in-1 brush or gap head directly to the main motor for cleaning furniture, car interiors, stairs, and tight spaces.

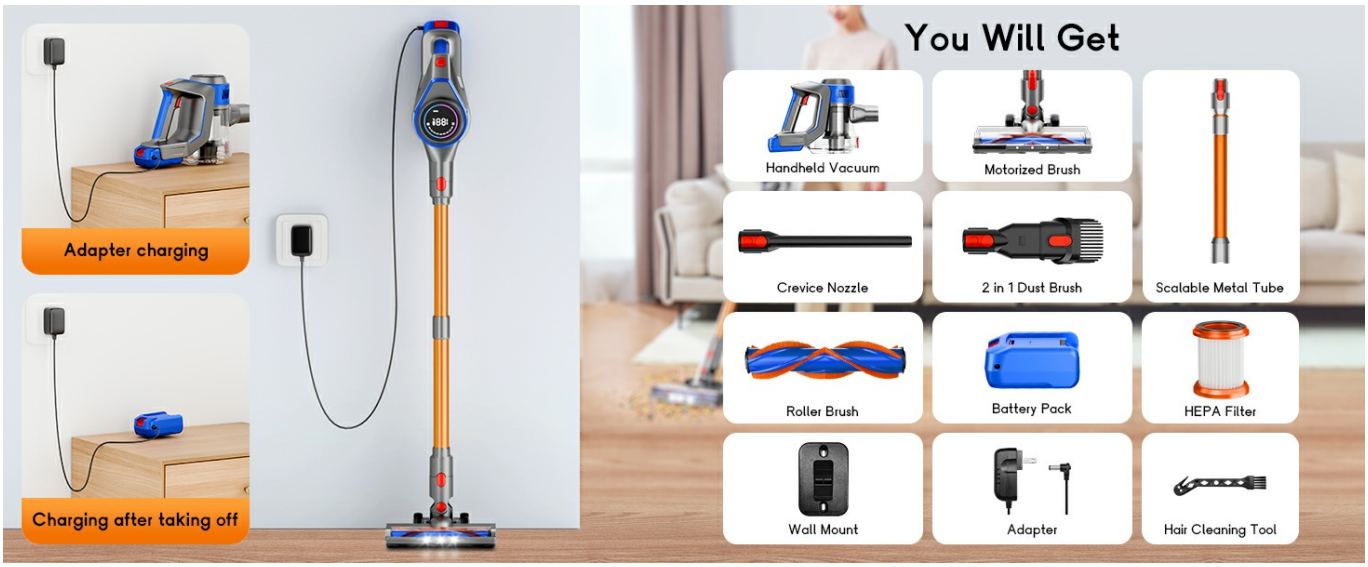



Figure 5.2: Flexible swivel head and LED lights for cleaning hard-to-reach areas.

Your browser does not support the video tag.

Video 5.1: Demonstration of the vacuum's effectiveness on various surfaces and its maneuverability.

## 6. Maintenance & Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Emptying the Dustbin:

- Press the dustbin release button to open the bottom flap and empty collected debris into a trash bin.




Figure 6.1: One-touch dust disposal for convenient cleaning.

### Cleaning the Filters:

- Twist and pull out the filter assembly from the dustbin.
- Separate the HEPA filter, stainless steel filter, and sponge filter.
- Tap out loose dust and debris. Rinse the filters under running water.
- Allow all filter components to air dry completely for at least 24 hours before reassembling and placing back into the vacuum.




Figure 6.2: Advanced filtration system components.

### Cleaning the Roller Brush:

- Turn off the vacuum and detach the motorized brush from the extension tube.
- Use a coin or flat tool to unlock the side cover of the brush head.
- Remove the roller brush. Use the provided hair cleaning tool to cut and remove any tangled hair or fibers.
- Reinsert the clean roller brush and secure the side cover.




Figure 6.3: V-shaped anti-tangle roller brush for easy maintenance.

## 7. Troubleshooting

Refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---|---|---|
| Vacuum does not turn on. | Battery is not charged or not properly installed. | Charge the battery fully. Ensure the battery pack is securely clicked into place. |
| Low suction power. | Dustbin is full, filters are clogged, or roller brush is tangled. | Empty the dustbin. Clean or replace filters. Remove tangled hair from the roller brush. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Motorized brush stops rotating. | Obstruction in the brush head or tangled hair. | Turn off the vacuum and remove any obstructions. Clean the roller brush. |
| Battery life is shorter than expected. | Using Max suction mode continuously, or battery degradation. | Use Standard mode for longer runtime. Ensure battery is fully charged before each use. If issues persist, contact customer support. |

## 8. Specifications

Detailed technical specifications for the BSNAW Y501 Cordless Vacuum Cleaner.

| Feature | Detail |
|---|---|
| Model Name | Y501 (XL-638B) |
| Brand | BSNAW |
| Suction Power | Up to 45000Pa |
| Battery Capacity | 7 * 2200mAh (Removable) |
| Runtime | Up to 45 minutes (Standard mode) |
| Charging Time | Approximately 4 hours |
| Filter Type | HEPA Filter, Stainless Steel Filter, Sponge Filter |
| Motor Horsepower | 0.334 horsepower |
| Voltage | 25.9 Volts (DC) |
| Item Weight | 3.2 Kilograms (Approx. 7.05 lbs) |
| Item Dimensions (L x W x H) | 43.31"L x 9.45"W x 9.06"H |
| Surface Recommendation | Carpet, Hard Floor |
| Special Features | Brushless High Efficiency Motor, Headlight, Low-Noise, Powerful Suction, Adjustable Telescoping Tube |

## 9. Warranty & Support

BSNAW prioritizes customer satisfaction and offers comprehensive support for your product.

- **Lifetime Customer Service Guarantee:** Dedicated support for any inquiries or issues you may encounter.
- **3-Year Return and Exchange Service:** Enjoy a long-term warranty for returns and exchanges.

For any issues with your BSNAW Y501 Cordless Vacuum Cleaner, please contact our customer service team for assistance.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0DQ95RZ23**

More documents and user manuals: **https://manuals.plus/**