Monster Monster Persona 3rd ANC

Monster Persona 3rd ANC Active Noise Canceling Headphones

USER MANUAL

Introduction

Thank you for choosing the Monster Persona 3rd ANC Active Noise Canceling Headphones. These over-ear wireless Bluetooth headphones are designed to provide an immersive audio experience with advanced Active Noise Cancellation, extended playtime, and comfortable design. This manual will guide you through the setup, operation, and maintenance of your new headphones.

Safety Information

- Do not expose the headphones to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This will void the warranty.
- Clean the headphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

Package Contents

- Monster Persona 3rd ANC Headphones
- Protective Case
- USB-C Charging Cable (Note: Audio cable not included)
- User Manual

Product Overview

Familiarize yourself with the various components of your Monster Persona 3rd ANC headphones for optimal use.



Image: The Monster Persona 3rd ANC headphones in white, showcasing their sleek design and over-ear form factor.

The headphones feature soft ear cushions for comfort, an adjustable headband for a customized fit, and 90° rotating earcups for easy storage and portability. Controls for power, volume, playback, and ANC modes are intuitively placed on the earcups.



Image: An exploded view illustrating the internal components of the headphone's earcups, highlighting the audio driver for pure Monster Sound.

Setup

Charging the Headphones

Before first use, fully charge your headphones. Connect the included USB-C charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status and turn off when fully charged. A full charge provides up to 70 hours of playtime.



Image: The Monster Persona 3rd ANC headphones highlighting their impressive 70-hour battery life.

Bluetooth Pairing

To connect your headphones to a device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Monster Persona 3rd ANC" from the list.
5. Once connected, the LED indicator will turn solid blue.



Image: An illustration of the internal Bluetooth 5.4 chip, emphasizing fast and stable wireless connectivity.

Dual-Device Pairing

The Monster Persona 3rd ANC headphones support dual-device pairing, allowing you to connect to two devices simultaneously. This enables seamless switching between, for example, your phone and a tablet or laptop, so you don't miss calls while enjoying media on another device.

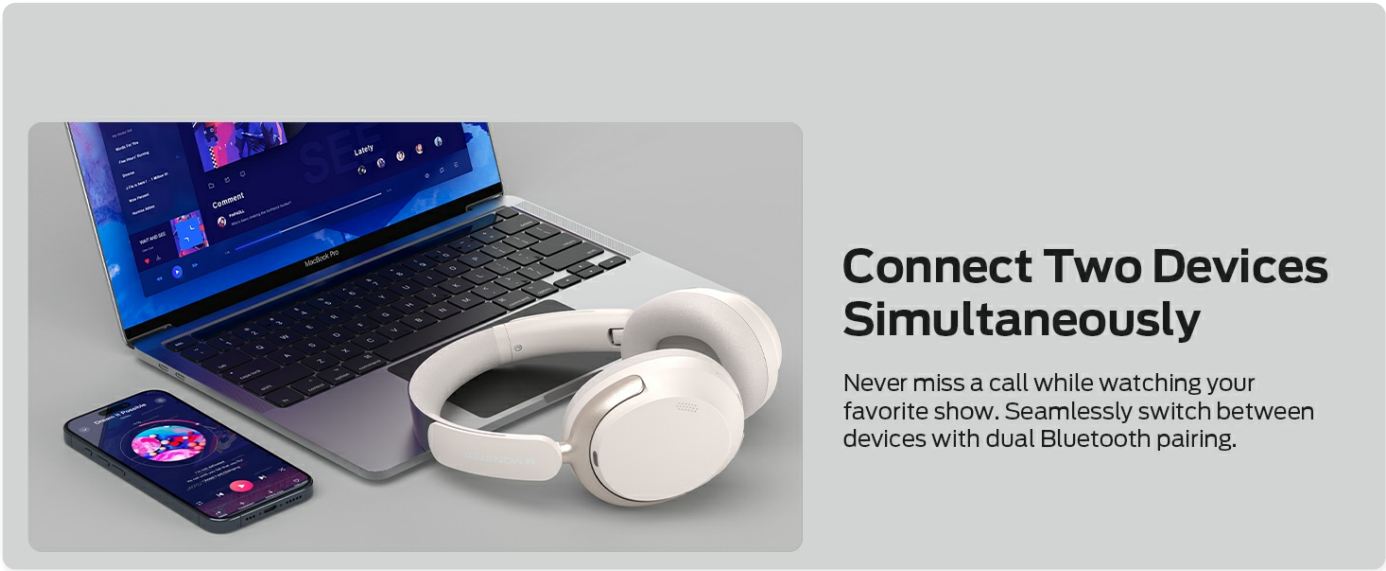


Image: Headphones shown connected to both a laptop and a smartphone, illustrating the dual-device pairing capability.

Operating Instructions

Power On/Off

- **Power On:** Long press the Power button for 2 seconds.
- **Power Off:** Long press the Power button for 1 second.

Music Playback Controls

- **Play/Pause:** Click the Power button once.
- **Volume Up:** Click the '+' button once.
- **Volume Down:** Click the '-' button once.
- **Next Song:** Long press the '+' button for 1 second.
- **Previous Song:** Long press the '-' button for 1 second.

Call Management

- **Answer Call:** Click the Power button once.
- **Reject/Hang Up Call:** Long press the Power button for 1 second.



Image: A man wearing the headphones, demonstrating the built-in microphone for hands-free calls and voice assistant commands.

EQ Modes (ANC, Transparency, Balanced)

Your headphones feature three distinct EQ modes to optimize your listening experience:

- **Active Noise Cancellation (ANC) Mode:** Reduces ambient noise for immersive listening.
- **Transparency Mode:** Allows you to hear your surroundings while still enjoying your audio, ideal for awareness.
- **Balanced Mode:** Provides a neutral sound profile for general listening.

To switch between modes, click the ANC button once.



Image: A visual representation of the three available music modes: Balanced, ANC, and Transparency, with a woman enjoying music.

Voice Assistant

Activate your device's voice assistant (e.g., Siri, Google Assistant) by long pressing the Power button for 1 second.

Control Diagram



Image: A close-up diagram illustrating the various control buttons on the headphones, including volume, power, and ANC, with their corresponding functions.

Maintenance

- **Cleaning:** Gently wipe the headphones with a soft, dry, lint-free cloth. Do not use liquids or spray cleaners directly on the headphones.
- **Storage:** When not in use, store the headphones in their protective case to prevent damage from dust, scratches, and impacts. Store in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.

Troubleshooting

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move device closer to headphones.
No sound or low volume.	Volume too low on headphones or device; headphones not connected.	Increase volume on both headphones and device. Re-pair headphones if disconnected.
ANC not working effectively.	ANC mode not activated; environmental noise too high.	Ensure ANC mode is active. ANC is most effective against low-frequency, constant noise.
Intermittent connection.	Interference; device too far; low battery.	Move away from other wireless devices. Ensure headphones are within range. Charge headphones.

Specifications

Feature	Detail
Model Name	Monster Persona 3rd ANC
Connectivity Technology	Wireless (Bluetooth 5.4)
Noise Control	Active Noise Cancellation
Battery Life	Up to 70 Hours
Microphones	6 Mics (for calls and ANC)
EQ Modes	3 (Balanced, ANC, Transparency)
Control Method	Push Button, Touch
Ear Placement	Over Ear
Material	Thermoplastic Elastomer (TPE)
Color	White
Item Weight	0.176 ounces (approx. 5 grams)
Included Components	Protective Case

Warranty and Support

Monster products are designed and manufactured to the highest quality standards. For information regarding warranty

coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Monster website. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question