Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bajaj ICX 160TS Neo

Bajaj ICX 160TS Neo Induction Stove User Manual

Model: ICX 160TS Neo

Introduction

Thank you for purchasing the Bajaj ICX 160TS Neo Induction Stove. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

Important Safety Instructions

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, always follow basic safety precautions, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, flat, heat-resistant surface.
- Only use induction-compatible cookware.

Product Components

The Bajaj ICX 160TS Neo Induction Stove package includes the following items:

- 1N Induction Stove
- 1N Instruction Manual
- 1N Warranty Card



Image: Bajaj ICX 160TS Neo Induction Stove, showcasing its sleek design and control panel.

Setup Guide

Follow these steps for the initial setup of your induction stove:

1. **Unpack:** Carefully remove the induction stove and all accessories from the packaging. Retain the packaging for future storage or transport.

2. **Placement:** Place the induction stove on a dry, stable, heat-resistant, and non-metallic surface. Ensure there is adequate ventilation around the unit (at least 10 cm clearance from walls or other appliances).
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage rating of the appliance matches your local power supply.
4. **First Use:** Before first use, wipe the ceramic plate with a soft, damp cloth. Do not use abrasive cleaners.

Operating Instructions

Control Panel Overview



Image: Close-up view of the control panel, showing the digital display, power, temperature, time controls, and various function icons.
The control panel features a digital display, tactile buttons for various functions, and indicators for power, temperature, and time settings.

Power On/Off

- To turn on: Place an induction-compatible pan on the cooking zone. Press the **ON/OFF** button. The display will illuminate.

- To turn off: Press the **ON/OFF** button again. The unit will power down.

Using Pre-Set Menus



Image: The 9 pre-set menu icons on the control panel, including Curry, Deep Fry, Idli, Chapati, Milk, Keep Warm, Saute, Pressure Cook, and Dosa.

The induction stove comes with 9 pre-set menus for common Indian culinary preparations. To use a pre-set menu:

1. Ensure the stove is powered on and a suitable pan is in place.
2. Press the desired pre-set menu button (e.g., Curry, Deep Fry, Milk). The stove will automatically adjust to the optimal power and temperature settings for that dish.
3. Some pre-set menus may have a default time setting.

Variable Time, Power, and Temperature Selection

For manual control, you can adjust the cooking time, power, and temperature:

- **Power Adjustment:** After turning on, press the **Power** button, then use the **+** and **-** buttons to increase or decrease the

wattage (up to 1600W).

- **Temperature Adjustment:** Press the **Temperature** button, then use the **+** and **-** buttons to set the desired temperature.
- **Time Setting:** Press the **Timer** button, then use the **+** and **-** buttons to set the cooking duration. The stove will automatically turn off once the timer expires.

Keep Warm Function

The Keep Warm function maintains food at a serving temperature without overcooking. To activate, press the**Keep Warm** button. This function can be used after cooking or as a standalone setting.

Pan Sensor Technology

The induction stove is equipped with a Pan Sensor. It detects if an induction-compatible pan is placed on the cooking zone. If no pan is detected or an incompatible pan is used, the stove will not generate heat and may display an error code.



Image: The induction stove in operation, demonstrating its use for cooking various dishes.

Digital Display and Error Codes

The digital display shows current settings (power, temperature, time) and communicates error codes if an issue arises. Refer to the Troubleshooting section for common error codes and their solutions.

Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your induction stove.

- **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Ceramic Plate:** Wipe the ceramic glass surface with a soft, damp cloth. For stubborn stains, use a mild detergent specifically designed for ceramic cooktops. Do not use abrasive pads, harsh chemicals, or scouring agents, as these can scratch or damage the surface.
- **Control Panel:** Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control buttons or display area.
- **Exterior:** Clean the exterior housing with a soft, damp cloth.
- **Ventilation Openings:** Keep the ventilation openings clear of dust and debris to prevent overheating. Use a soft brush or vacuum cleaner if necessary.
- **Do Not Immerse:** Never immerse the induction stove in water or any other liquid.

Troubleshooting Guide

If you encounter any issues with your induction stove, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Stove does not turn on	No power supply; Power cord not plugged in; Main switch off.	Check power outlet; Ensure cord is securely plugged in; Turn on main switch.
No heat generated (Error code E0/E1)	No pan on cooking zone; Incompatible cookware; Pan too small.	Place an induction-compatible pan; Use cookware with a magnetic base; Ensure pan diameter is appropriate.
Overheating protection (Error code E2/E3)	Ventilation blocked; Empty pan heated for too long.	Clear ventilation openings; Allow stove to cool down; Do not heat empty pans.
Uneven heating	Cookware base is warped or uneven.	Use cookware with a flat, thick base.
Buttons unresponsive	Control panel is wet; Foreign object on buttons.	Wipe the control panel dry; Remove any obstructions.

If the problem persists after attempting these solutions, please contact customer support.

Technical Specifications

Below are the technical specifications for the Bajaj ICX 160TS Neo Induction Stove:

Feature	Specification
Model Number	740313

Feature	Specification
Power Consumption	1600 Watts
Voltage Pro Range	130 - 270V
Pre-Set Menus	9 (Curry, Deep Fry, Idli, Chapati, Milk, Keep Warm, Saute, Pressure Cook, Dosa)
Control Type	Tact Switch Buttons
Display	Digital Display with Error Code Communicator
Safety Features	Pan Sensor Technology
Dimensions (LxWxH)	34.5 x 27 x 6.5 Centimeters
Item Weight	1 kg 740 g
Power Source	Corded Electric
Manufacturer	EPACK DURABLE LIMITED

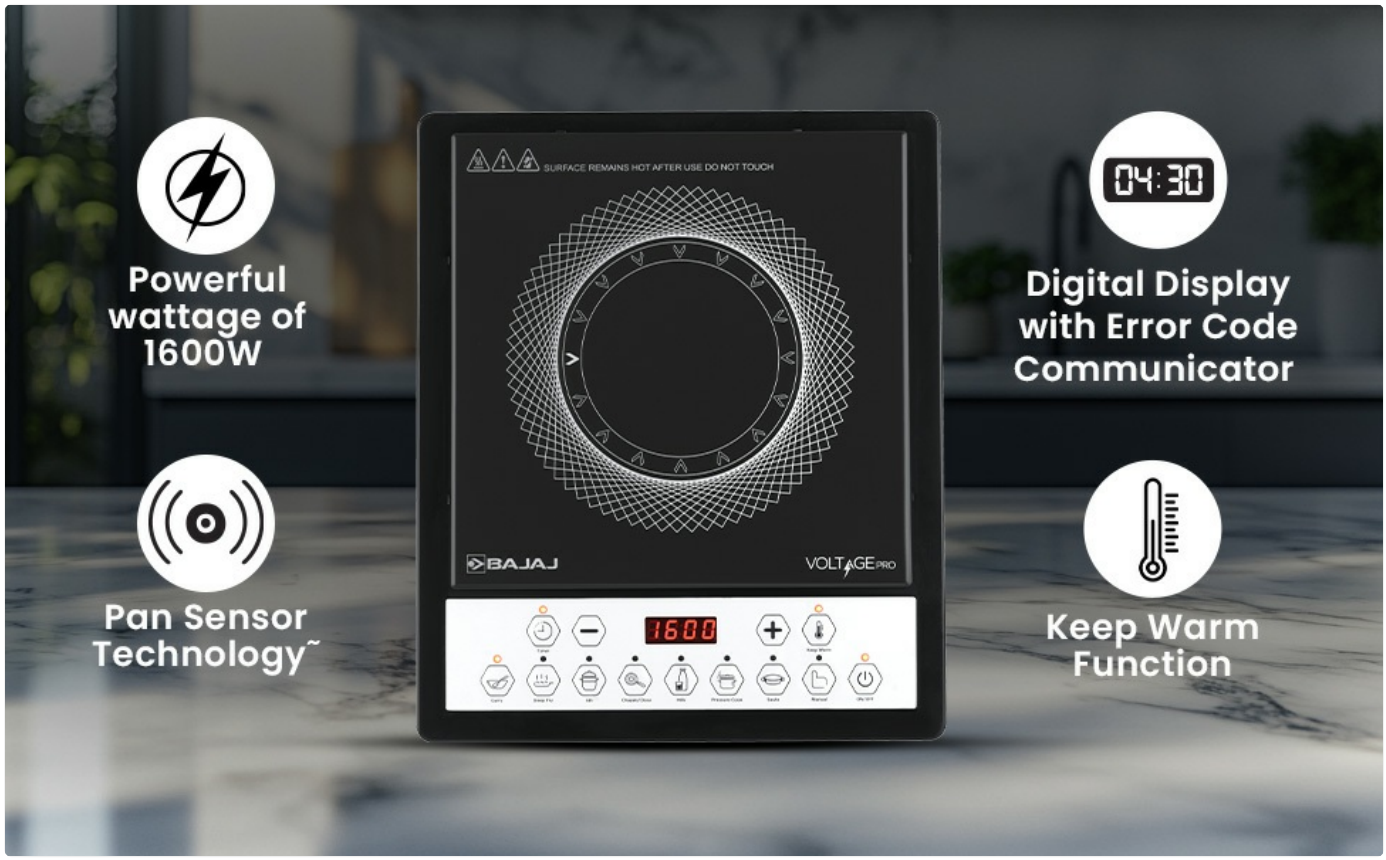


Image: Illustration of the Voltage Pro feature, indicating efficient operation within a 130-270V range.

Warranty and Customer Support

The Bajaj ICX 160TS Neo Induction Stove comes with a 1-year warranty from the date of purchase, covering manufacturing defects. Please refer to the included Warranty Card for detailed terms and conditions.
For any product-related queries, service requests, or consumer complaints, please contact Bajaj Electricals Limited:

Address: M/S. BAJAJ ELECTRICALS LIMITED, # 45/47 VEER NARIMAN ROAD, MUMBAI-400001, MAHARASHTRA.

Telephone: 022 - 41280000

Email: consumercare@bajajelectricals.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQC5BFXN

More documents and user manuals: **https://manuals.plus/**