Dreo DR-HPF002

Dreo PolyFan 502 Pedestal Fan User Manual

Model: DR-HPF002

1. Introduction

Welcome to the user manual for your new Dreo PolyFan 502 Pedestal Fan. This fan is engineered to deliver exceptional air circulation and comfort through its advanced features and quiet operation. To ensure safe and efficient use, please read this manual thoroughly before operating the appliance. Keep this manual for future reference.

2. Important Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the fan, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air openings or operate with any openings blocked. Keep openings free of lint, hair, and the like.
- Do not use outdoors.
- This fan is intended for household use only and not for commercial or industrial use.

- Always unplug the fan before moving, cleaning, or servicing.
- Do not allow children to play with the fan. Close supervision is necessary when any appliance is used by or near children.

3. Package Contents

- Dreo PolyFan 502 Pedestal Fan (Main Unit)
- Remote Control
- User Manual
- 1 x C Battery (included)





Image: The Dreo PolyFan 502 Pedestal Fan shown with its accompanying remote control.

4. Product Diagram and Components

Familiarize yourself with the different parts of your Dreo PolyFan 502 for easier assembly and operation.



Image: Front view of the Dreo PolyFan 502 Pedestal Fan, highlighting its sleek design.

Components:

- **Fan Head:** Contains the blades and grille.
- **Control Panel:** Touch-sensitive buttons for fan operation.

- **Adjustable Pole:** Allows for height adjustment.
- **Base:** Provides stability for the fan.
- **Remote Control:** For convenient operation from a distance.

5. Setup and Assembly

Follow these simple steps to assemble your Dreo PolyFan 502:

1. Carefully unpack all components from the box.
2. Attach the main fan unit to the adjustable pole, ensuring it clicks securely into place.
3. Connect the adjustable pole to the base, twisting until it is firmly tightened.
4. Insert the included C battery into the remote control, observing polarity.
5. Place the fan on a flat, stable surface.

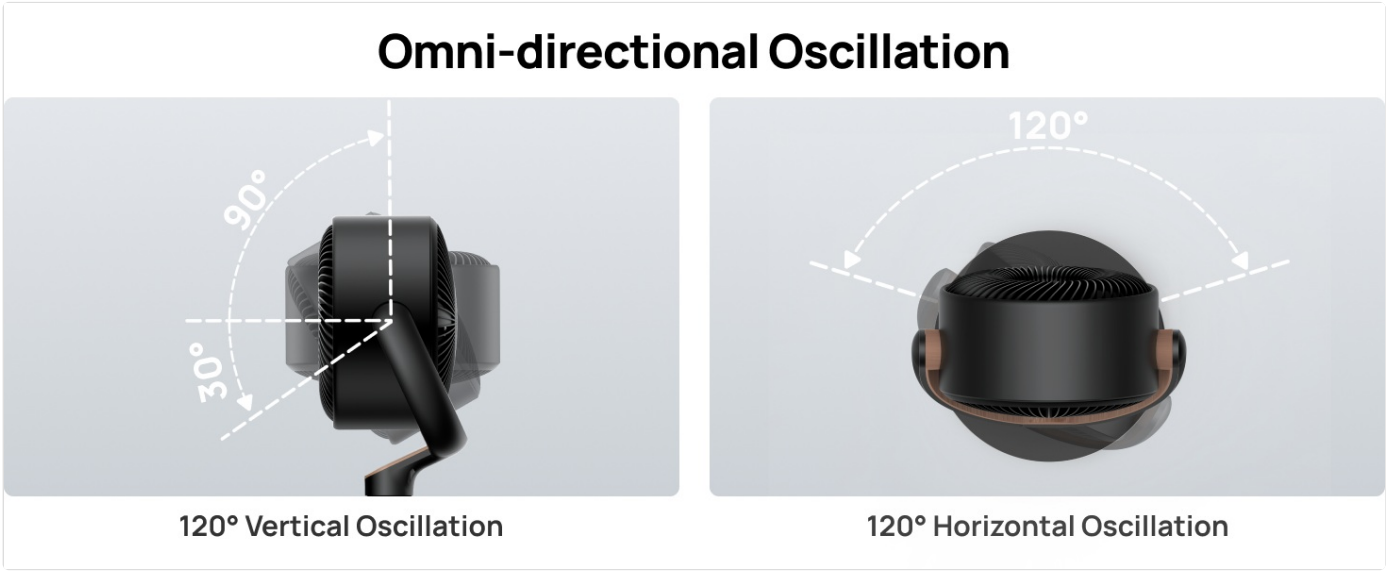


Image: Visual guide demonstrating the straightforward assembly process of the fan's base and main unit.

6. Operating Instructions

Control Panel and Remote Control

The fan can be operated using the touch controls on the unit or the included remote control.



Image: A hand holding the remote control, demonstrating the ease of adjusting fan settings from a distance.

Button/Function	Description
Power Button	Turns the fan On or Off.

Button/Function	Description
Speed Adjustment (+/-)	Increases or decreases the wind speed (8 speeds available).
Mode Button	Cycles through 3 wind modes: Normal, Auto, Turbo.
Oscillation Button	Activates or deactivates horizontal and vertical oscillation.
Timer Button	Sets the auto-off timer (up to 8 hours).

Wind Modes and Speeds

The Dreo PolyFan 502 offers a customizable wind experience with 3 distinct wind modes and 8 adjustable speeds:

- **Normal Mode:** Provides a consistent airflow at your selected speed.
- **Auto Mode:** Adjusts fan speed automatically based on ambient conditions.
- **Turbo Mode:** Delivers maximum airflow for rapid cooling.

Omni-directional Oscillation

Experience comprehensive air circulation with the fan's 1200 simultaneous vertical and horizontal oscillation, ensuring comfort throughout the room.

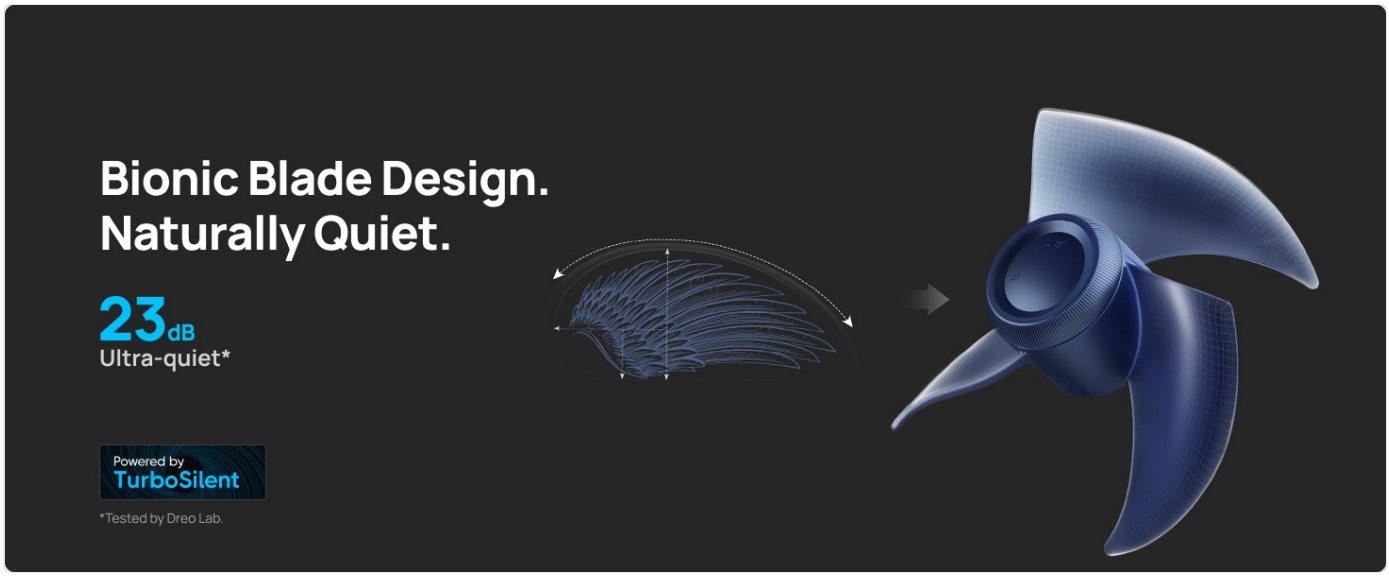


Image: A visual representation of the fan's wide-ranging oscillation capabilities, covering both horizontal and vertical planes.

Timer Function

The integrated 8-hour timer allows you to set the fan to automatically turn off after a specified duration, conserving energy and providing convenience.

Adjustable Height

The fan's height can be adjusted by 5 inches (from 32.7" to 42.5"), allowing you to optimize airflow direction for various settings, whether you are sitting or standing.

7. Maintenance and Cleaning

Regular cleaning is essential to maintain the fan's performance and extend its lifespan. Always unplug the fan before cleaning.

1. **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
2. **Grille and Blade Cleaning:** The front grille can be removed for easier access to the fan blades. Twist the front grille counter-clockwise to unlock and remove it. Carefully wipe the blades and inside of the grille with a dry or slightly damp cloth. Ensure all parts are completely dry before reassembling.
3. **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

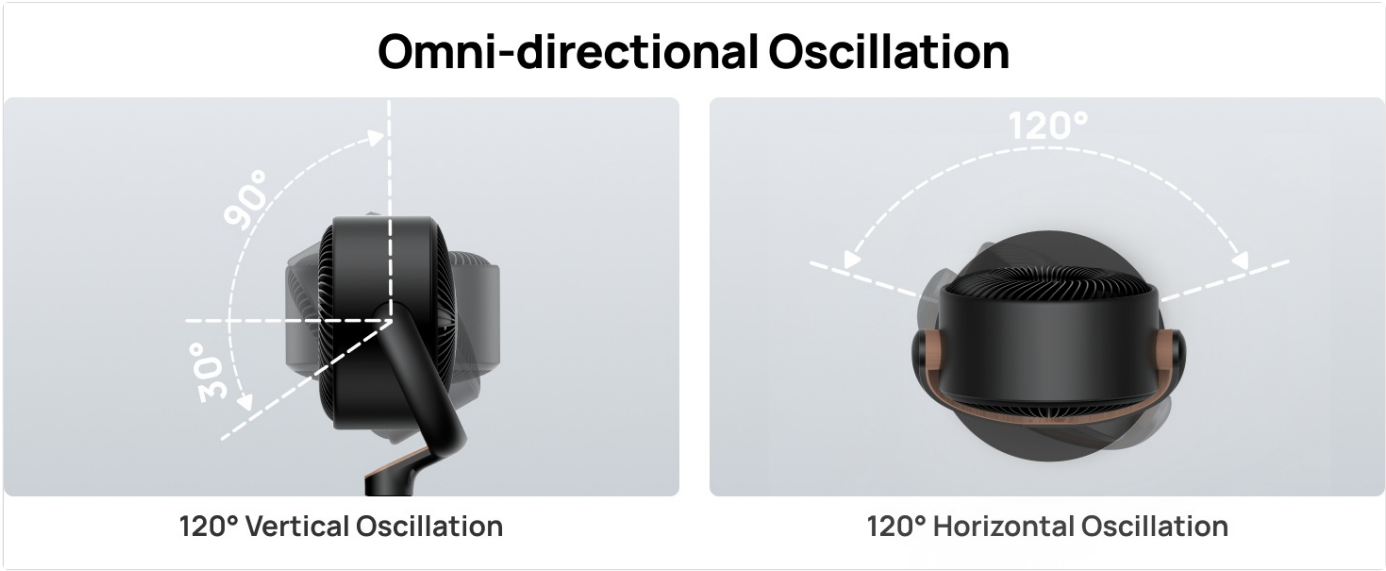


Image: Illustration of the fan head disassembly for convenient cleaning of the blades and grille.

8. Troubleshooting

If you encounter issues with your fan, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Remote control battery depleted.	Ensure the power cord is securely plugged into a working outlet. Replace the remote control battery.
Weak airflow.	Fan blades or grille are dirty; Obstruction in front or behind the fan.	Clean the fan blades and grilles as per maintenance instructions. Remove any obstructions.
Fan is noisy.	Loose parts; Fan not on a stable surface; Dirt accumulation.	Check for any loose components and tighten them. Place the fan on a flat, stable surface. Clean the fan thoroughly.

Problem	Possible Cause	Solution
Remote control not working.	Battery depleted; Obstruction between remote and fan; Remote too far from fan.	Replace the battery. Ensure there are no obstructions. Operate the remote within range.

9. Specifications

Feature	Detail
Brand	Dreo
Model Name	DR-HPF002 (PolyFan 502)
Product Dimensions	7.28"D x 13.07"W x 40"H
Item Weight	13.12 pounds
Power Source	DC Motor
Noise Level	23 dB (Ultra-quiet)
Number of Power Levels	8 Speeds
Modes	3 (Normal, Auto, Turbo)
Oscillation	1200 Horizontal + 1200 Vertical
Timer	8 Hours
Adjustable Height	Yes (32.7" to 42.5")
Included Components	Remote
UPC	810142850742

10. Warranty and Support

Dreo products are manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. For detailed warranty information or to obtain support, please contact Dreo Customer Service.

Dreo Customer Service:

- **Website:** www.dreo.com
- **Email:** support@dreo.com

Please have your model number (DR-HPF002) and purchase invoice ready before contacting support.

© 2024 Dreo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question