Merexcint MX-60069-B

Farmhouse Rustic Ceiling Fan with Light and Remote User Manual

Model: MX-60069-B

1. Introduction

Thank you for choosing the Merexcint Farmhouse Rustic Ceiling Fan with Light and Remote. This versatile fixture combines the functionality of a ceiling fan with the aesthetic appeal of a rustic chandelier, perfect for enhancing the ambiance and comfort of your living space. Its unique bear and deer design adds a vintage industrial and nostalgic touch.

Key Features:

- **Farmhouse Rustic Design:** Black wagon wheel chandelier shade with bear and deer pattern.
- **Quiet Reversible DC Motor:** Operates below 30dB, providing powerful airflow for both summer cooling and winter warmth circulation.
- **Multi-Speed Fan:** 6 adjustable fan speeds for customized comfort.
- **Remote Control:** Conveniently control light on/off, fan speeds, and timing settings.
- **Timer Function:** Set the fan to turn off automatically after 1, 2, or 4 hours.
- **Adjustable Height:** Includes 7.87" and 4.92" downrods for flexible installation.
- **E12 Bulb Base:** Requires 4 E12 bulbs (not included), supporting various bulb types up to 40W per bulb.

2. Safety Information

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Always disconnect power at the circuit breaker before installation, cleaning, or maintenance. Ensure all wiring connections are secure and comply with local electrical codes. If unsure, consult a qualified electrician.
- **Installation:** Mount the fan to a ceiling outlet box marked acceptable for fan support of 35 lbs (15.9 kg) or less. Do not bend the fan blade holders when installing or cleaning.

- **Operation:** Do not insert objects into the path of the fan blades. Ensure the fan is securely mounted before operation.
- **Bulb Requirements:** Use E12 bulbs, maximum 40W per bulb. Do not exceed the recommended wattage.

3. What's in the Box

Carefully unpack all components and ensure all parts are present before beginning installation.

- Ceiling Fan Body with Light Kit
- Remote Control
- Two Downrods (7.87" and 4.92")
- Mounting Bracket
- Hardware Pack (screws, wire nuts, etc.)
- Instruction Manual

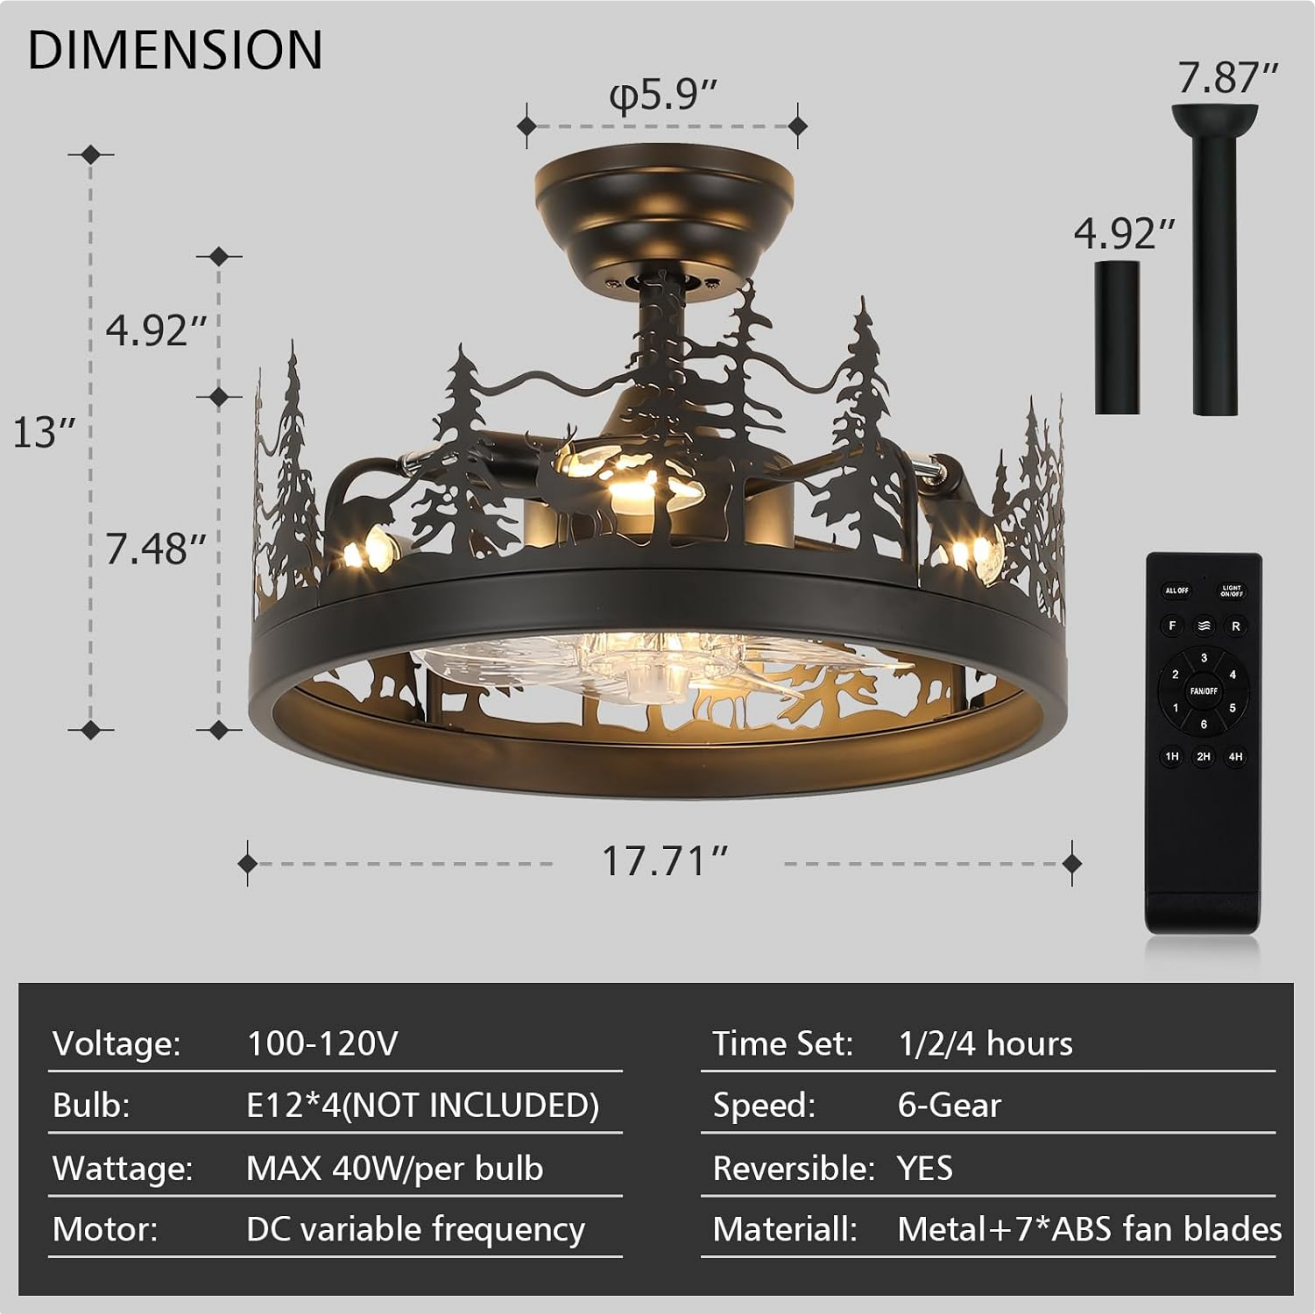


Figure 3.1: Product Dimensions and Included Components.

4. Setup and Installation

Installation should be performed by a qualified electrician for safety. Follow these general steps:

Pre-Installation Checklist:

1. Turn off power at the circuit breaker.
2. Ensure you have all necessary tools (screwdriver, wire strippers, ladder, etc.).
3. Verify all parts are included in the package.

Assembly Steps:

1. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling outlet box.
2. **Downrod Assembly:** Choose the appropriate downrod (7.87" or 4.92") and feed the electrical wires through it. Attach the downrod to the fan motor assembly.
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to the provided wiring diagram in the detailed manual. Ensure all connections are secure with wire nuts.
4. **Canopy Installation:** Lift the fan assembly and secure the canopy to the mounting bracket.
5. **Bulb Installation:** Install 4 E12 bulbs (not included) into the light sockets.



Figure 4.1: Internal Components and Downrod Options.



Figure 4.2: Fan with Lights Off and On.

Note: No official seller installation videos are available for this product. Please refer to the detailed written instructions and diagrams provided in the physical manual for comprehensive guidance.

5. Operating Instructions

Your ceiling fan is operated via the included remote control.

Remote Control Functions:

- **Light On/Off:** Press the 'LIGHT ON/OFF' button to toggle the light.
- **Fan On/Off:** Press the 'FAN/OFF' button to turn the fan on or off.
- **Fan Speed Control (1-6):** Use buttons '1' through '6' to select your desired fan speed. '1' is the lowest speed, '6' is the highest.
- **Reversible Motor (F/R):** Press 'F' for forward mode (summer, downward airflow for cooling) and 'R' for reverse mode (winter, upward airflow for circulating warm air).
- **Timer Settings (1H, 2H, 4H):** Press '1H', '2H', or '4H' to set the fan to automatically turn off after the specified

time.

- **Natural Wind Mode:** Press the wave icon button to activate natural wind mode, which alternates between fast and slow speeds.
- **All Off:** Press 'ALL OFF' to turn off both the fan and light.



Figure 5.1: Remote Control Functions.



Figure 5.2: Cool Mode & Warm Mode Operation.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To avoid scratching the finish, clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before handling. Use E12 base bulbs, maximum 40W.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners to ensure secure operation.

7. Troubleshooting

If you encounter issues with your ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker and wall switch; Verify all wire connections are secure; Replace remote control batteries.
Light does not work	Bulb is loose or burned out; Incorrect bulb type; Loose wire connections.	Tighten or replace bulbs; Ensure correct E12 bulbs are used; Check light kit wiring.
Fan wobbles	Loose mounting screws; Unbalanced blades.	Tighten all screws on the mounting bracket and fan assembly; Ensure blades are securely attached.
Noisy operation	Loose screws; Fan not properly mounted; Obstruction.	Check and tighten all screws; Ensure fan is securely mounted to the ceiling; Remove any obstructions.
Remote control not working	Low battery; Remote not paired.	Replace batteries; Refer to the detailed manual for remote pairing instructions.

8. Specifications

Feature	Detail
Brand	Merexcint
Model Name	MX-60069-B
Color	Black
Material	Metal (Frame), ABS (Fan Blades)
Style	Farmhouse
Light Fixture Form	Ceiling Fan Light
Product Dimensions	17.71"L x 17.71"W x 13"H
Canopy Diameter	5.9"
Downrod Lengths	7.87" + 4.92" (Adjustable Height)
Voltage	120 Volts (DC)
Bulb Base	E12 x 4 (Bulbs not included)
Max Wattage per Bulb	40W
Control Method	Remote
Motor Type	Pure Copper DC Motor
Noise Level	Below 30dB
Fan Speeds	6
Timer Settings	1, 2, 4 hours

Feature	Detail
Item Weight	11.38 pounds
Country of Origin	China

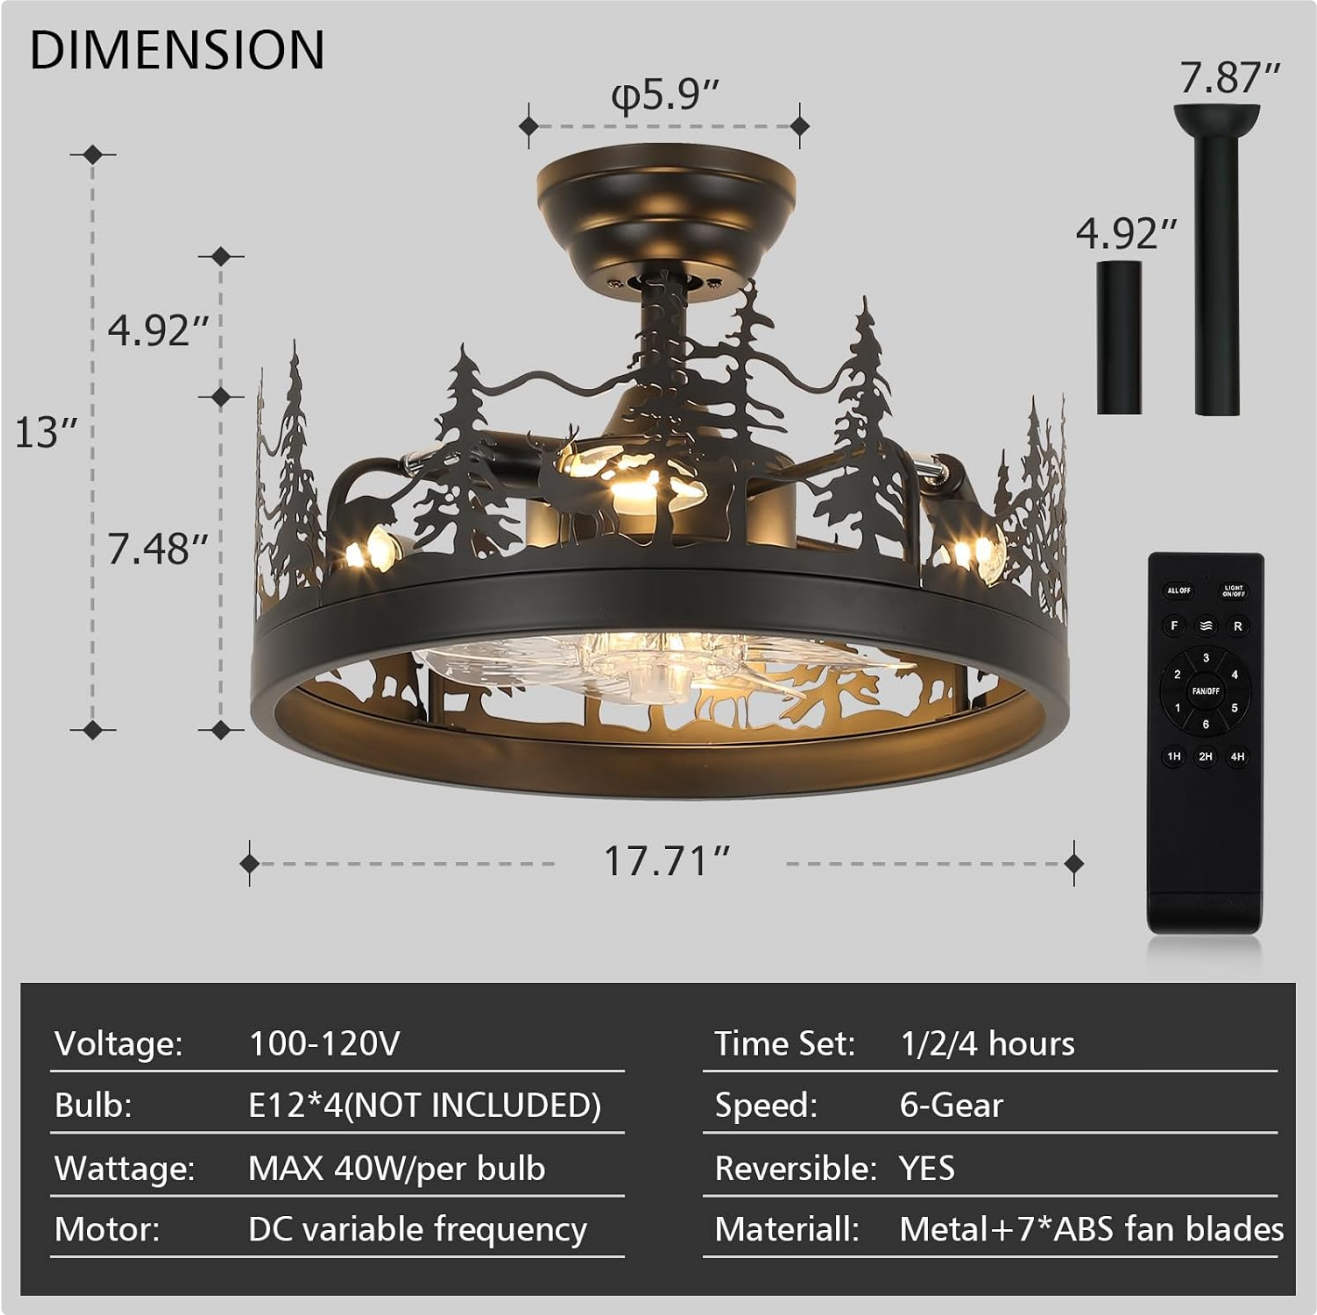


Figure 8.1: Detailed Product Dimensions and Electrical Specifications.

9. Warranty and Support

Merexcint is committed to providing the best customer service. While a specific warranty period is not detailed, we offer comprehensive after-sales support.

If your rustic light fixture is damaged during transportation, we will provide a free exchange. For any questions or concerns regarding your chandelier, please do not hesitate to contact us. Our team is ready to assist you.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question