Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Oosofi Della 90

Oosofi Della 90 Kitchen Pantry Instruction Manual

Model: Della 90 | Brand: Oosofi

1. Introduction

This manual provides essential information for the safe and effective use of your Oosofi Della 90 Kitchen Pantry. Please read these instructions carefully before unpacking, setting up, or using your new pantry. Retain this manual for future reference.



Figure 1: The Oosofi Della 90 Kitchen Pantry, showcasing its design and storage capabilities within a kitchen environment.

2. Safety Information

Always follow basic safety precautions to reduce the risk of injury or damage to the product.

- Ensure the pantry is placed on a flat, stable, and level surface to prevent tipping.
- Do not overload shelves or drawers. Distribute weight evenly.
- Keep small children away from the pantry during unpacking and placement to avoid injury from falling parts or packaging materials.
- Avoid placing hot items directly on the surface without protection.

3. Setup and Placement

The Oosofi Della 90 Kitchen Pantry is designed for free-standing placement and requires no assembly. Follow these steps for proper setup:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the pantry for any damage that may have occurred during shipping.
2. **Location Selection:** Choose a suitable location in your kitchen, dining room, home office, or living room. Ensure the area is level and has sufficient space for the pantry's dimensions (13.7"D x 35.4"W x 66.5"H).
3. **Placement:** Gently move the pantry to its desired location. The unit is free-standing and features legs for stability.
4. **Leveling:** If the floor is uneven, adjust the leveling feet (if present) at the bottom of the pantry to ensure it stands firmly without wobbling.

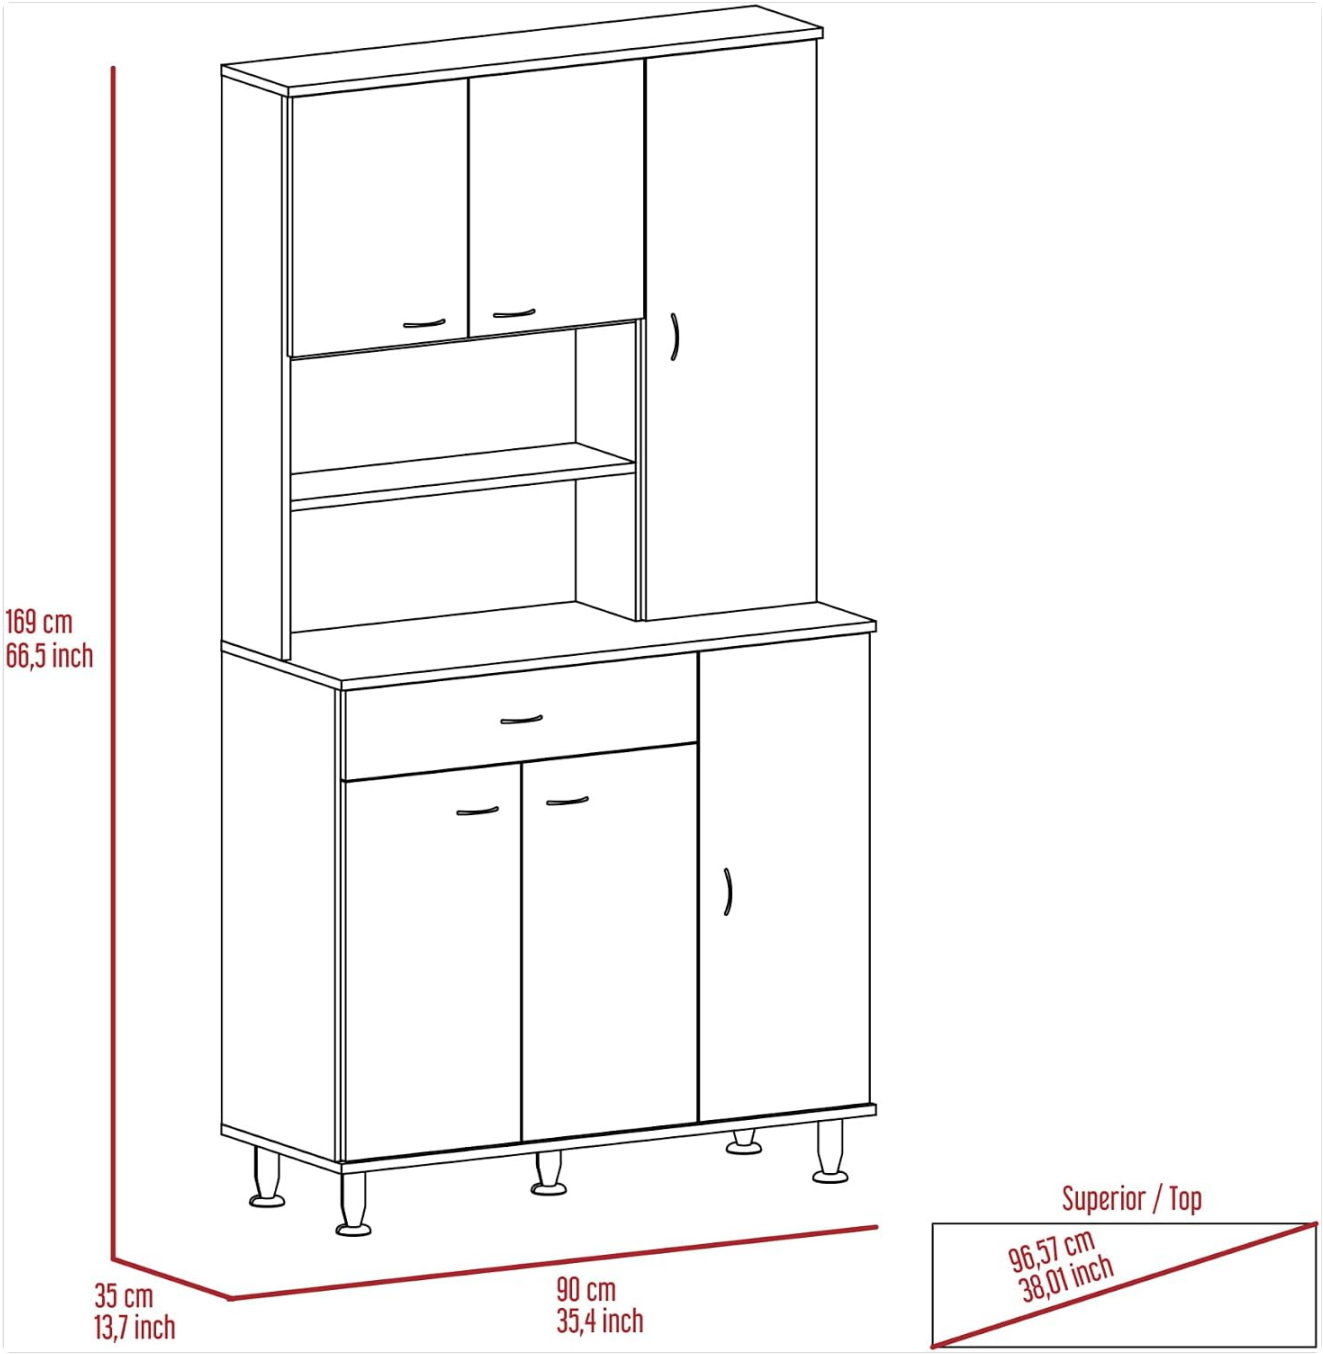


Figure 2: Detailed dimensional diagram of the Oosofi Della 90 Kitchen Pantry, indicating height, width, and depth in both centimeters and inches.

4. Operating Instructions

The Della 90 Kitchen Pantry is designed for organized storage. Utilize its various compartments effectively:

- **Upper Cabinets:** Two upper cabinets provide enclosed storage for items you wish to keep out of sight or protect from dust.
- **Open Shelves:** Two open shelves are ideal for frequently accessed items, decorative pieces, or small appliances.
- **Drawer:** A single large drawer is perfect for storing silverware, utensils, or other small kitchen accessories.
- **Lower Cabinets:** Three lower cabinets offer additional enclosed storage for larger items like pots, pans, or bulkier pantry staples.

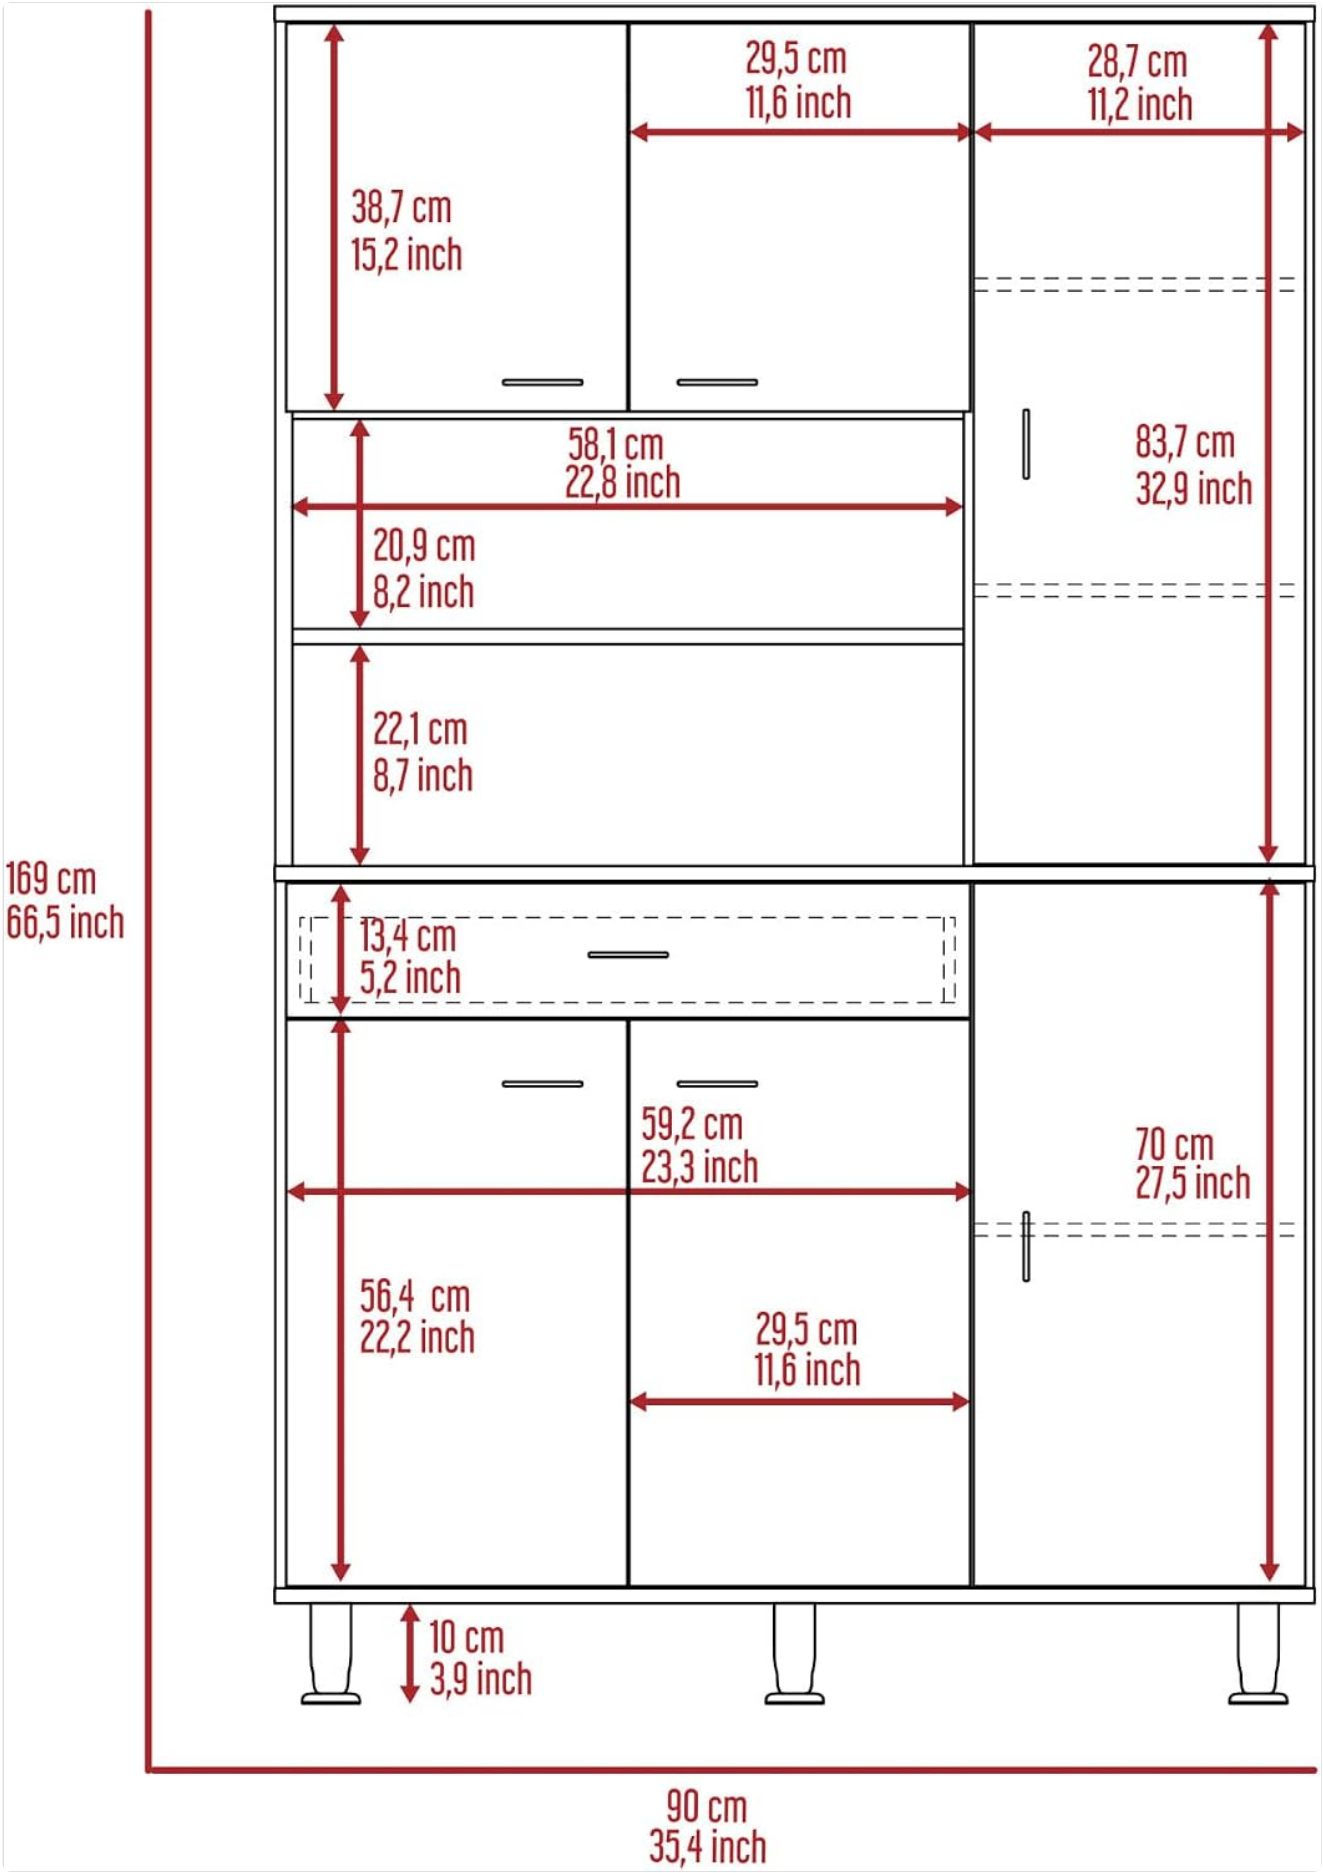


Figure 3: The pantry interior, demonstrating the arrangement of shelves, cabinets, and drawer, filled with dishes, containers, and other kitchen essentials.





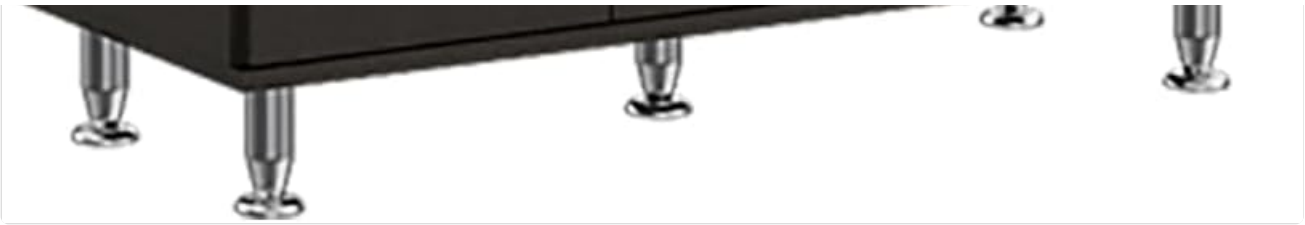


Figure 4: An angled view of the pantry's interior, highlighting the depth and accessibility of the storage compartments, including the drawer and lower cabinets.

5. Maintenance and Care

To ensure the longevity and appearance of your Oosofi Della 90 Kitchen Pantry, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the engineered wood finish.
- **Spills:** Clean up spills immediately to prevent moisture damage or staining.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Tighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.

6. Troubleshooting

If you encounter any issues with your pantry, refer to the following common problems and solutions:

- **Pantry is Wobbly:**
  Solution: Ensure the pantry is on a level surface. Adjust the leveling feet at the base until the unit is stable.
- **Drawer Sticks or Does Not Slide Smoothly:**
  Solution: Check for any obstructions in the drawer slides. Ensure the drawer is properly aligned on its tracks. A small amount of silicone lubricant can be applied to the slides if needed.
- **Cabinet Doors Do Not Close Properly:**
  Solution: Check if the pantry is level. Uneven placement can cause doors to misalign. Inspect hinges for any loose screws and tighten them.

7. Specifications

Feature	Specification
Brand	Oosofi
Model	Della 90
Color	Black
Product Dimensions (D x W x H)	13.7"D x 35.4"W x 66.5"H (35 cm D x 90 cm W x 169 cm H)
Item Weight	94 Pounds (42.6 kg)
Material	Engineered Wood

Mounting Type	Free Standing
Assembly Required	No
Special Feature	Easy to Install (placement)
UPC	761182897450, 753803478476

8. Warranty and Support

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For product support, assistance with parts, or further inquiries, please contact the manufacturer, Oosofi, or your point of purchase.

© 2024 Oosofi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQPKDBSN

More documents and user manuals: **https://manuals.plus/**