Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY AKB36086220

Allimity AKB36086220 Remote Control User Manual

For LG XDSS MP3 Stereo Systems XA-64, XA-66, XA64, XA66

Introduction

This manual provides instructions for the setup, operation, and maintenance of your Allimity AKB36086220 replacement remote control. This remote is designed for use with specific LG XDSS MP3 Stereo System models, including XA-64, XA-66, XA64, and XA66.

Package Contents

- 1 x Allimity AKB36086220 Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

Setup

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA (UM-4/AAA/LR03) alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment with AAA battery insertion guide.

Operating Instructions

Basic Operation

- **Direct Line of Sight:** Point the remote control directly at the infrared (IR) sensor on your LG stereo system.
- **Clear Path:** Ensure there are no objects blocking the path between the remote control and the stereo system's IR sensor.

Button Functions



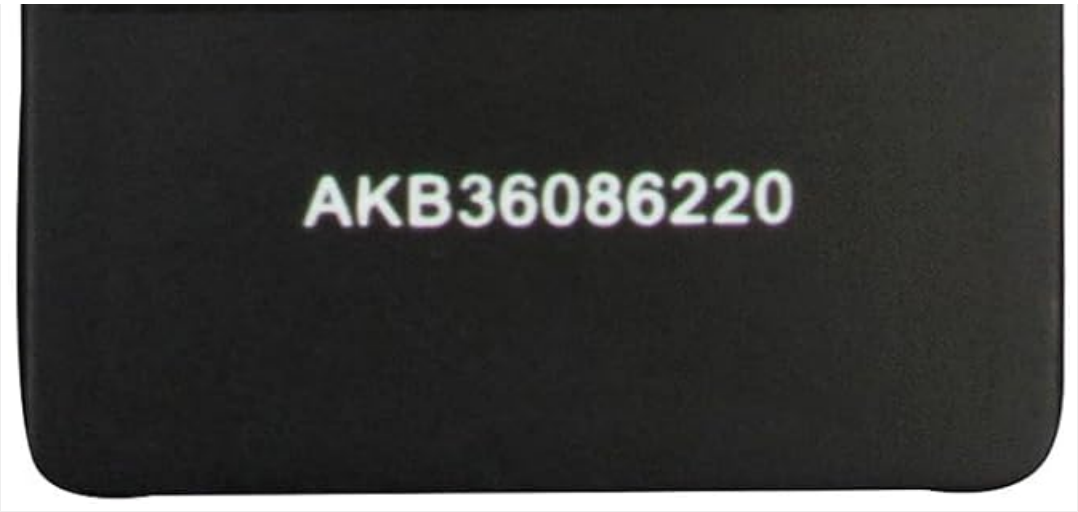


Figure 2: Allimity AKB36086220 Remote Control Layout.

Common Button Functions

Button	Function
POWER	Turns the stereo system on or off.
EQ	Adjusts equalizer settings.
PRESET/FOLDER	Navigates through radio presets or folders on a connected USB device.
FUNCTION	Selects input source (e.g., CD, USB, Radio, Aux).
VOLUME +/-	Increases or decreases the audio volume.
MUTE	Mutes or unmutes the audio output.
SLEEP	Sets a timer for the system to automatically turn off.
INFO	Displays information about the current track or radio station.
TUN.- / TUN.+	Tunes radio frequencies down or up.
PLAY/PAUSE (►/▮▮)	Plays or pauses media playback.
STOP (■)	Stops media playback.
SKIP (◄◄ / ►►)	Skips to the previous or next track/file.
REPEAT/RANDOM	Toggles repeat or random playback modes.
PROGRAM/MEMO	Programs radio stations or creates a playlist.
REC	Initiates recording (if supported by the stereo system).
RDS	Activates or deactivates Radio Data System display.
PTY	Selects program type for RDS radio.

Maintenance

Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries with new AAA alkaline batteries. Refer

to the "Battery Installation" section for detailed steps.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Troubleshooting

Troubleshooting Guide

Problem	Possible Cause	Solution
Remote control is not responding.	◦ Batteries are depleted or incorrectly inserted. ◦ Obstruction between remote and stereo system. ◦ Remote is not pointed directly at the IR sensor.	◦ Reinsert or replace batteries, ensuring correct polarity. ◦ Remove any objects blocking the line of sight. ◦ Point the remote directly at the stereo system's IR sensor.
Buttons are unresponsive or sticky.	Accumulated dirt or debris.	Clean the remote control with a soft, dry cloth.

Specifications

- **Model:** AKB36086220
- **Brand:** ALLIMITY
- **Compatible LG Stereo System Models:** XA-64, XA-66, XA64, XA66
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Dimensions:** 5 x 2 x 0.6 inches (approximately 12.7 x 5.1 x 1.5 cm)
- **Weight:** 1 ounce (approximately 28 grams)



Figure 3: Remote control dimensions.

Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. The manufacturer, ALLIMITY, typically provides support for their products.

If you have any questions or encounter issues not covered in this manual, please reach out to the seller for assistance. They are committed to responding to customer inquiries within 24 hours.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQTVZD2T

More documents and user manuals: **https://manuals.plus/**