Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BT3525

Braun Series 3 BT3525 Beard Trimmer

Model: **BT3525** | Brand: **Braun**

1. Introduction

The Braun Series 3 BT3525 Beard Trimmer is designed for effortless, precise styling. Equipped with ultra-sharp blades and a precision dial offering 40 length settings in 0.5 mm increments, it ensures accurate trimming and ultimate control. This men's trimmer consistently delivers impeccable results for both trimming and contouring. With a cordless runtime of 50 minutes, you can achieve personalized styling with ease.



The Braun Series 3 BT3525 Beard Trimmer in grey, showcasing its ergonomic design.

2. Safety Information

Please read all safety instructions before using the appliance. Keep these instructions for future reference.

- **Warning:** Use this product only on adult skin.
- Avoid contact with eyes and other body openings.
- Refer to instructions for proper product cleaning and maintenance.
- **Caution:** Do not use this product near water or while bathing/showering.
- Keep the appliance dry.

3. Package Contents

Verify that all items are present in the package:

- 1 x Braun Series 3 BT3525 Beard Trimmer
- 3 x Comb Attachments
- 1 x Cleaning Brush
- 1 x Power Adapter (not explicitly listed but implied for charging)



The Braun Series 3 BT3525 trimmer displayed with its accompanying accessories, including various comb attachments and a cleaning brush.

4. Setup

1. **Initial Charge:** Before first use, fully charge the trimmer for approximately 8 hours. The charging indicator light will show the charging status.
2. **Attaching a Comb:** Select the desired comb attachment. Align the comb with the trimmer head and push it firmly until it clicks into place.
3. **Removing a Comb:** To remove, gently pull the comb attachment upwards and away from the trimmer head.

5. Operating Instructions

5.1 Powering On/Off

- To turn on, press the power button.
- To turn off, press the power button again.

5.2 Adjusting Length Settings

The precision dial allows you to select from 40 length settings in 0.5 mm increments.

1. Ensure a comb attachment is securely in place.
2. Rotate the precision dial to your desired hair length setting. The selected length will be indicated on the dial.




The precision dial of the Braun Series 3 BT3525, highlighting the 40 length settings in 0.5 mm increments for accurate control.


5.3 Trimming Your Beard

For best results, ensure your beard is clean and dry before trimming.

1. Attach the appropriate comb and set the desired length.
2. Hold the trimmer with the comb flat against your skin.
3. Move the trimmer against the direction of hair growth, using slow and even strokes.
4. For defining lines and edges, remove the comb attachment and use the bare blade. Hold the trimmer perpendicular to the skin and carefully create your desired shape.

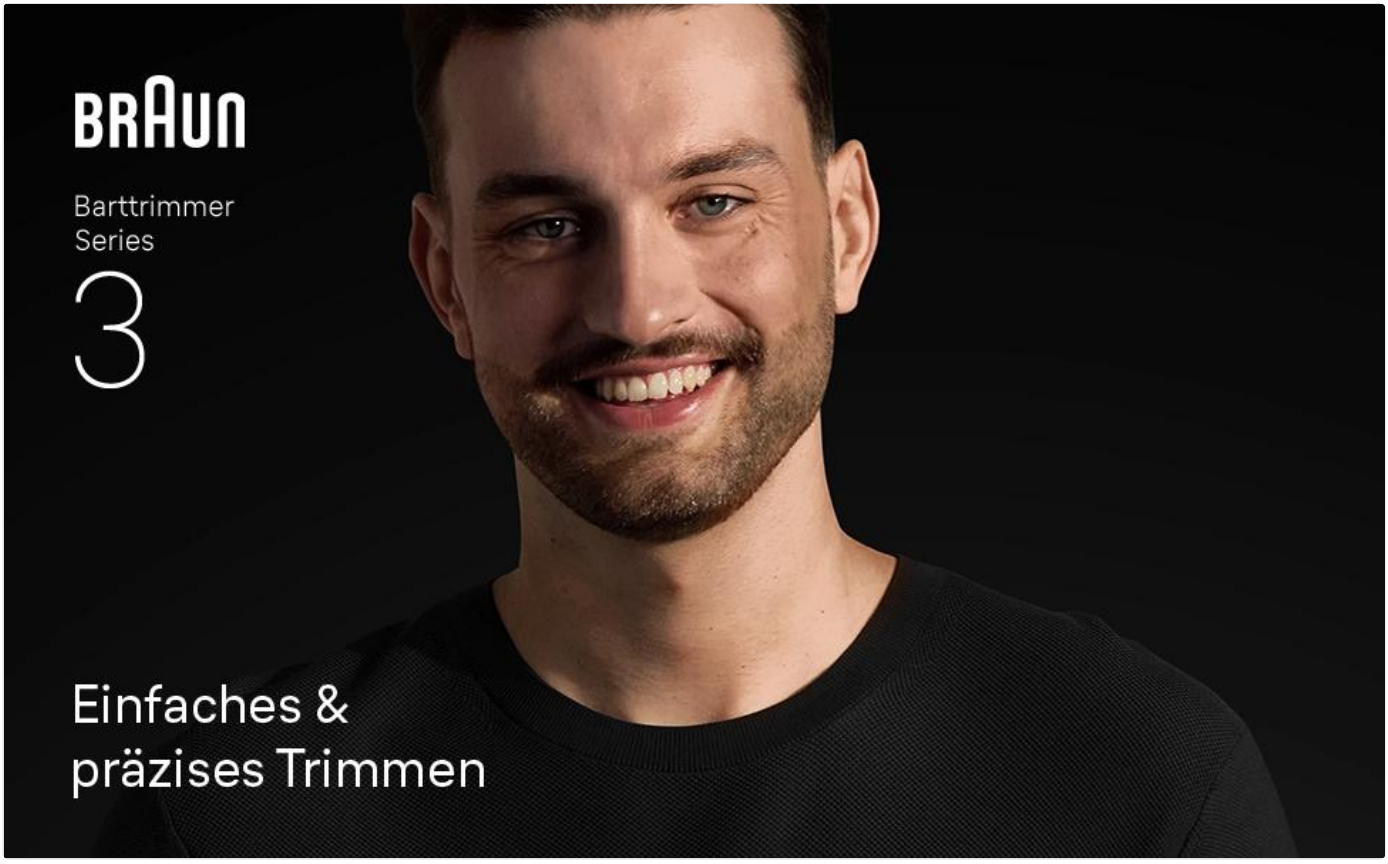

A user demonstrating the precise trimming capability of the Braun Series 3 BT3525 Beard Trimmer on his facial hair.

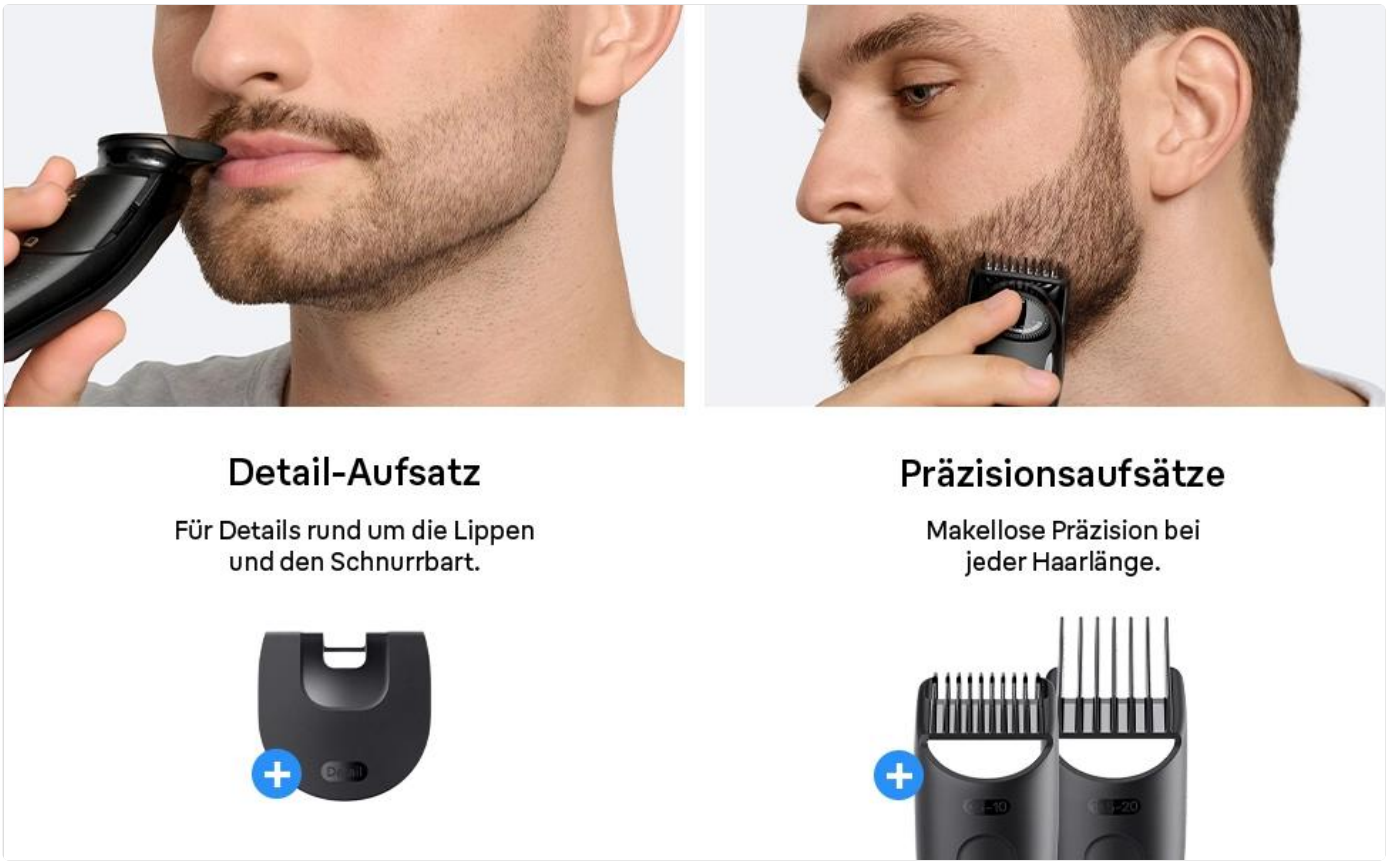

A detailed view of the ultra-sharp stainless steel blade, designed for efficient and precise hair cutting.

6. Maintenance

6.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and disconnect it from the power source.
2. Remove the comb attachment.
3. Use the provided cleaning brush to remove hair clippings from the trimmer head and comb.
4. The trimmer head can be rinsed under running water. Ensure it is completely dry before reattaching or storing. **Do not immerse the entire trimmer in water.**
5. Periodically apply a drop of light machine oil (not included) to the blades for smooth operation.

6.2 Storage

Store the trimmer in a dry place, away from direct sunlight and out of reach of children.

7. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for the recommended time.
Poor trimming performance.	Blades are clogged with hair or dull.	Clean the blades and comb attachment. Ensure blades are oiled. If blades are dull, consider replacement (contact support).
Trimmer makes unusual noise.	Foreign object in the blade area or lack of lubrication.	Clean the blade area thoroughly. Apply a drop of oil to the blades. If the issue persists, discontinue use and contact customer support.

8. Specifications

Feature	Detail
Model Number	BT3525
Brand	Braun
Power Source	Battery Powered
Battery Type	1 LR44 (included)
Blade Material	Stainless Steel
Special Features	Ultra-sharp blade, Precision wheel, Cordless operation
Length Settings	40 settings in 0.5 mm increments
Product Dimensions (L x W x H)	10.5 x 6 x 25.2 cm
Item Weight	203 Grams
Color	Grey
Recommended Use	Face

9. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase.

© 2025 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQWQ7231

More documents and user manuals: **https://manuals.plus/**