Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

eKids WK-070

eKids Wicked Sing-Along Microphone Instruction Manual

Model: WK-070

Introduction

Thank you for purchasing the eKids Wicked Sing-Along Microphone. This product is designed to provide an engaging and interactive musical experience for children, allowing them to amplify their voice and sing along to built-in music with exciting light effects. Please read this manual carefully to ensure proper use and enjoyment of your new microphone.

Key Features

- **Voice Amplification:** Amplify your voice with the push of a button for an enhanced singing experience.
- **Wicked-Inspired Design:** Features cool graphics inspired by the new film, Wicked.
- **Built-in Music:** Play a preview selection of the song 'Defying Gravity' from the film.
- **Flashing Lights:** Dynamic flashing lights add excitement to performances.
- **Durable & Portable:** Lightweight and designed for easy transport and use by children aged 3 and up.



The eKids Wicked Microphone highlighting its key features: built-in music, flashing lights, and a real working microphone.

What's in the Box

- 1 x eKids Wicked Sing-Along Microphone
- 2 x AAA batteries (pre-installed)


Setup

Battery Installation

Your eKids Wicked Sing-Along Microphone comes with 2 AAA batteries pre-installed. If replacement is needed, please follow these steps:

1. Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
2. Install 2 x 'AAA' (R03) size batteries, ensuring the positive (+) and negative (-) terminals are indicated in the compartment.
3. Close the battery compartment door and tighten the screw with a Phillips screwdriver.

Do not over-tighten the screw.

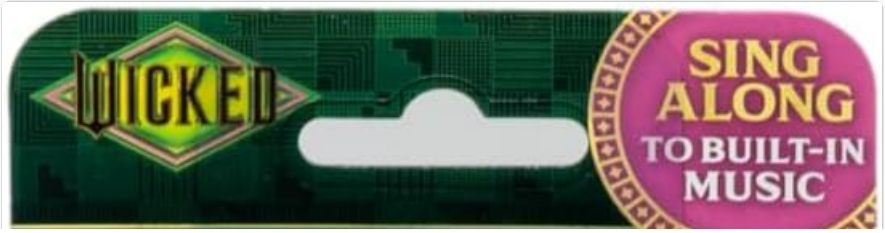


SING-ALONG
MICROPHONE
LIGHTS
UP!
TRY
ME!
3+



Rear view of the microphone, indicating the location of the battery compartment.

Operating Instructions

Microphone Function

To amplify your voice, press and hold the **Microphone Button** (the button with the microphone icon) located on the front of the unit. Speak or sing into the top of the microphone to hear your voice amplified through the speaker.

Built-in Music Playback

To play the built-in music, press the **Song Button** (the button with the music note icon). The microphone will play a preview selection of the song 'Defying Gravity'. You can sing along while the music plays.

Flashing Lights

The microphone features flashing lights at the top, which activate automatically when the microphone is in use (either amplifying voice or playing music), adding a dynamic visual element to your performance.



Detailed diagram showing the Microphone Button, Song Button, Dynamic Speaker, and Flashing Lights on the eKids Wicked Microphone.

Your browser does not support the video tag.

Official product video demonstrating the features and operation of the eKids Wicked Microphone Toy, including voice amplification, built-in music, and flashing lights.

Maintenance

- Clean the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the microphone to moisture, extreme temperatures, or direct sunlight.
- If the unit will not be used for an extended period, remove the batteries to prevent leakage.

Troubleshooting

Problem	Solution
No sound or lights	Check battery installation. Ensure batteries are inserted with correct polarity (+/-). Replace batteries if they are depleted.
Music not playing	Ensure the Song Button is pressed firmly. Check battery level.
Voice not amplifying	Ensure the Microphone Button is pressed and held while speaking. Check battery level.

Specifications

Feature	Detail
Microphone Form Factor	Handheld
Power Source	Battery Powered (2 AAA batteries, included)
Material	Plastic
Item Weight	4.6 ounces
Package Dimensions	10.43 x 3.78 x 1.77 inches
Country of Origin	China
Model Number	WK-070
Color	Black
Recommended Uses	Singing

Warranty and Support

This product is covered by a **One Year Limited Warranty**. For warranty service or support, please visit the official eKids website at www.eKids.com. Please retain your proof of purchase for warranty claims.

Distributed by eKids.

© 2024 eKids. All Rights Reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DQYQVYR9

More documents and user manuals: **https://manuals.plus/**