Cozylady HX-WL3035-24V-20M

Cozylady RGB LED Neon Rope Lights User Manual

Model: HX-WL3035-24V-20M
Brand: Cozylady

Introduction

Thank you for choosing Cozylady RGB LED Neon Rope Lights. This product is designed to enhance your indoor and outdoor spaces with vibrant, customizable lighting. Featuring flexible silicone material, app and remote control, music sync, and timer functions, these lights offer versatile decoration options. This manual provides comprehensive instructions for safe installation, operation, and maintenance of your new LED neon rope lights.

What's in the Box

- 33Ft Neon Strip Light x 2
- 33Ft Adhesive Tape x 2
- Remote Control
- Controller
- Power Supply



Image: Overview of the Cozylady RGB LED Neon Rope Lights package contents, including two rolls of neon strip lights, remote, controller, and power supply.

Safety Information

- Keep the product away from open flames.
- Avoid overheating the light during operation.
- Ensure the installation surface is clean and firm, whether using adhesive or screws.
- The controller and power supply are not waterproof. Ensure they are protected from moisture.
- Do not cut the strip unless absolutely necessary and only at designated cut marks. Improper cutting may damage the product.
- If you encounter any problems with the product, please contact customer support.

Setup and Installation

The Cozylady LED Neon Rope Lights offer two primary installation methods: adhesive tape for smooth surfaces and

screw-fixed buckles for more permanent or uneven surfaces.

Installation Steps:

1. **Step 1: Plan Your Design.** Before installation, decide on the desired shape or pattern for your neon light. The flexible silicone allows for various DIY designs.

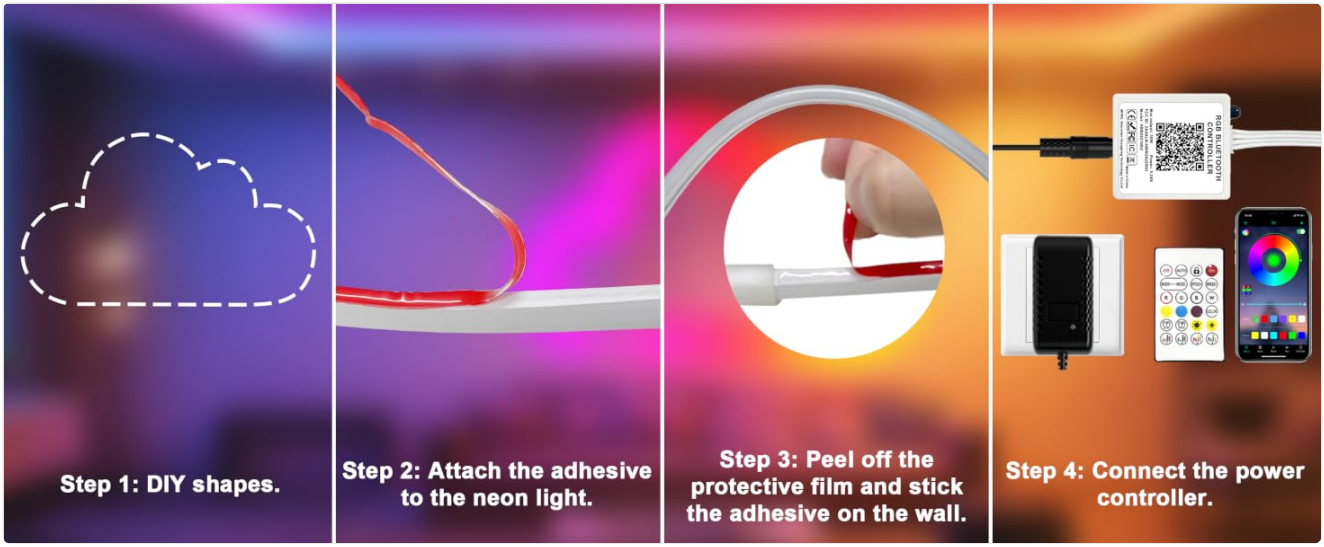


Image: Illustration of planning DIY shapes for the neon light installation.

2. **Step 2: Prepare the Surface.** Ensure the installation surface is clean, dry, and free of dust or grease.
3. **Step 3: Choose Installation Method.**
    - **Adhesive Tape Installation:** For smooth and flat surfaces like mirrors or ceramic tiles.

      Peel off the protective film from the double-sided adhesive tape and firmly press the neon light onto the desired surface. The included 33-foot reinforced double-sided adhesive tape provides strong adhesion.

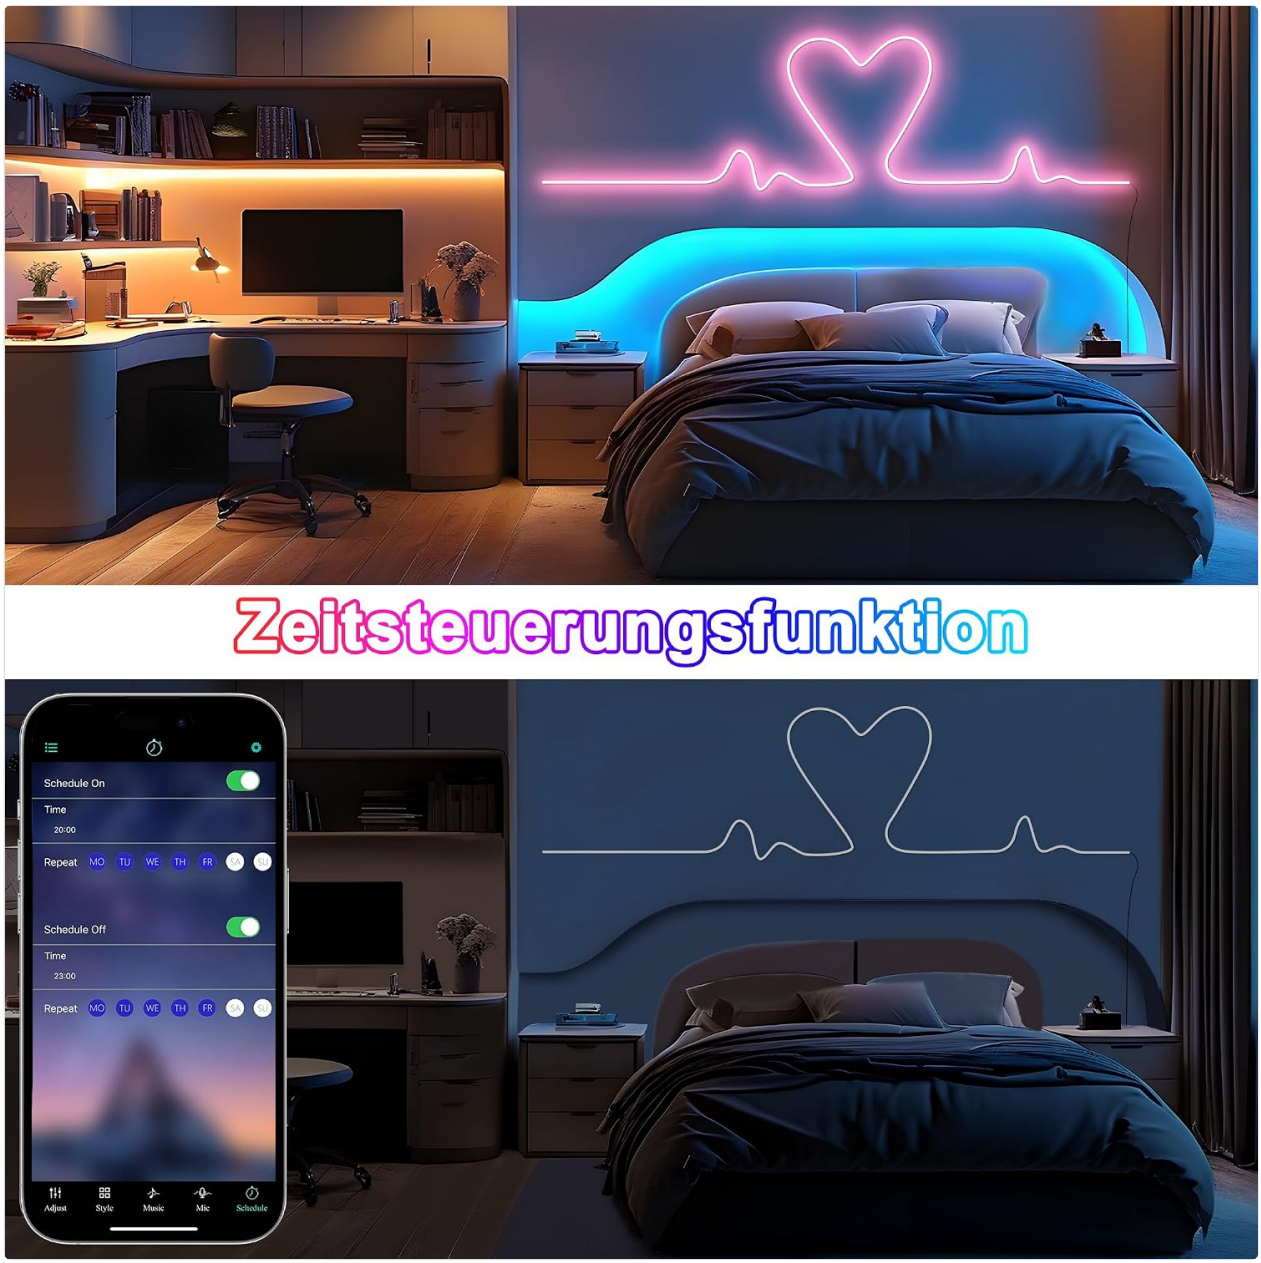


Image: Visual guide for adhesive tape installation, showing peeling the tape and attaching the light.

- **Hole Drilling Installation:** Suitable for lime walls, wooden walls, or surfaces where adhesive may not be sufficient.

  Use the provided screw-fixed buckles. Mark the positions for the buckles according to your design, drill small holes, insert the screws, and secure the buckles. Then, snap the neon light into the buckles.

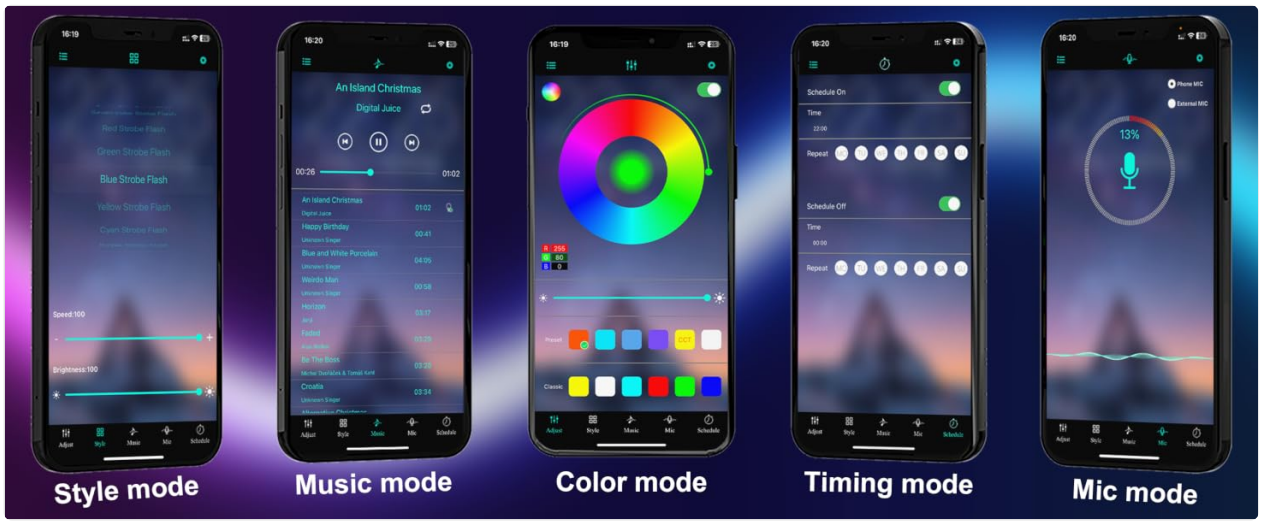


Image: Illustration of the hole drilling method using screw-fixed buckles for secure installation.

4. **Step 4: Connect the Power Controller.** Connect the neon light strip to the controller, and then connect the controller to the power supply. Ensure all connections are secure.



Image: Diagram illustrating the simple connection process of the LED strip to the controller and power supply.

For detailed app download and connection instructions, please refer to the QR code on the controller or visit the official download page: http://www.easytrack.net.cn/download/?116CHUANZHIGUANG=

Operating Instructions

Your Cozylady LED Neon Rope Lights can be controlled via the included remote control or a dedicated smartphone application.

Control Methods:

- **Remote Control:** Use the physical remote to turn the lights on/off, change colors, adjust brightness, and select preset modes.
- **Smartphone App Control:** Download the recommended app (refer to the QR code on the controller or the link in the Setup section). The app offers advanced features and greater customization.



Image: Screenshots of the smartphone application showing various control modes: Style, Music, Color, Timing, and Microphone.

Key Features:

- **Multiple Mode Ambience:** Redefine your moods with various lighting modes. The flexible silicone allows for easy molding into any shape for special home decoration or gaming room designs.



Image: A gaming desk setup with multiple monitors and a PC, enhanced by vibrant RGB neon rope lights creating a dynamic atmosphere.

- **Music Sync Function:** The built-in microphone syncs with any sound, music, and game audio with real-time response. Create a music and color feast, ideal for parties, holidays, and celebrations.



Image: A group of people at a party, with the Cozylady neon lights displaying colors synchronized to music, enhancing the festive mood.

- **Timer Function:** With the app's timer function, you can preset the time at which the LED light will automatically turn on and off, adding convenience to your daily routine.



Image: A smartphone screen displaying the timer scheduling interface for the LED lights, allowing users to set on/off times.

- **Color Customization:** Choose from 16 million colors and adjust brightness to suit your style and mood.

Image: A comparison showing a living room before and after the installation of Cozylady neon lights, demonstrating the transformative effect of customizable lighting.

Maintenance

- **Cleaning:** Gently wipe the silicone rope light with a soft, damp cloth to remove dust or dirt. Do not use harsh chemicals or abrasive cleaners.

- **Water Resistance:** The RGB LED strip light is designed with waterproof technology for outdoor or rainy day use. However, the controller and power supply are NOT waterproof and must be protected from water exposure.

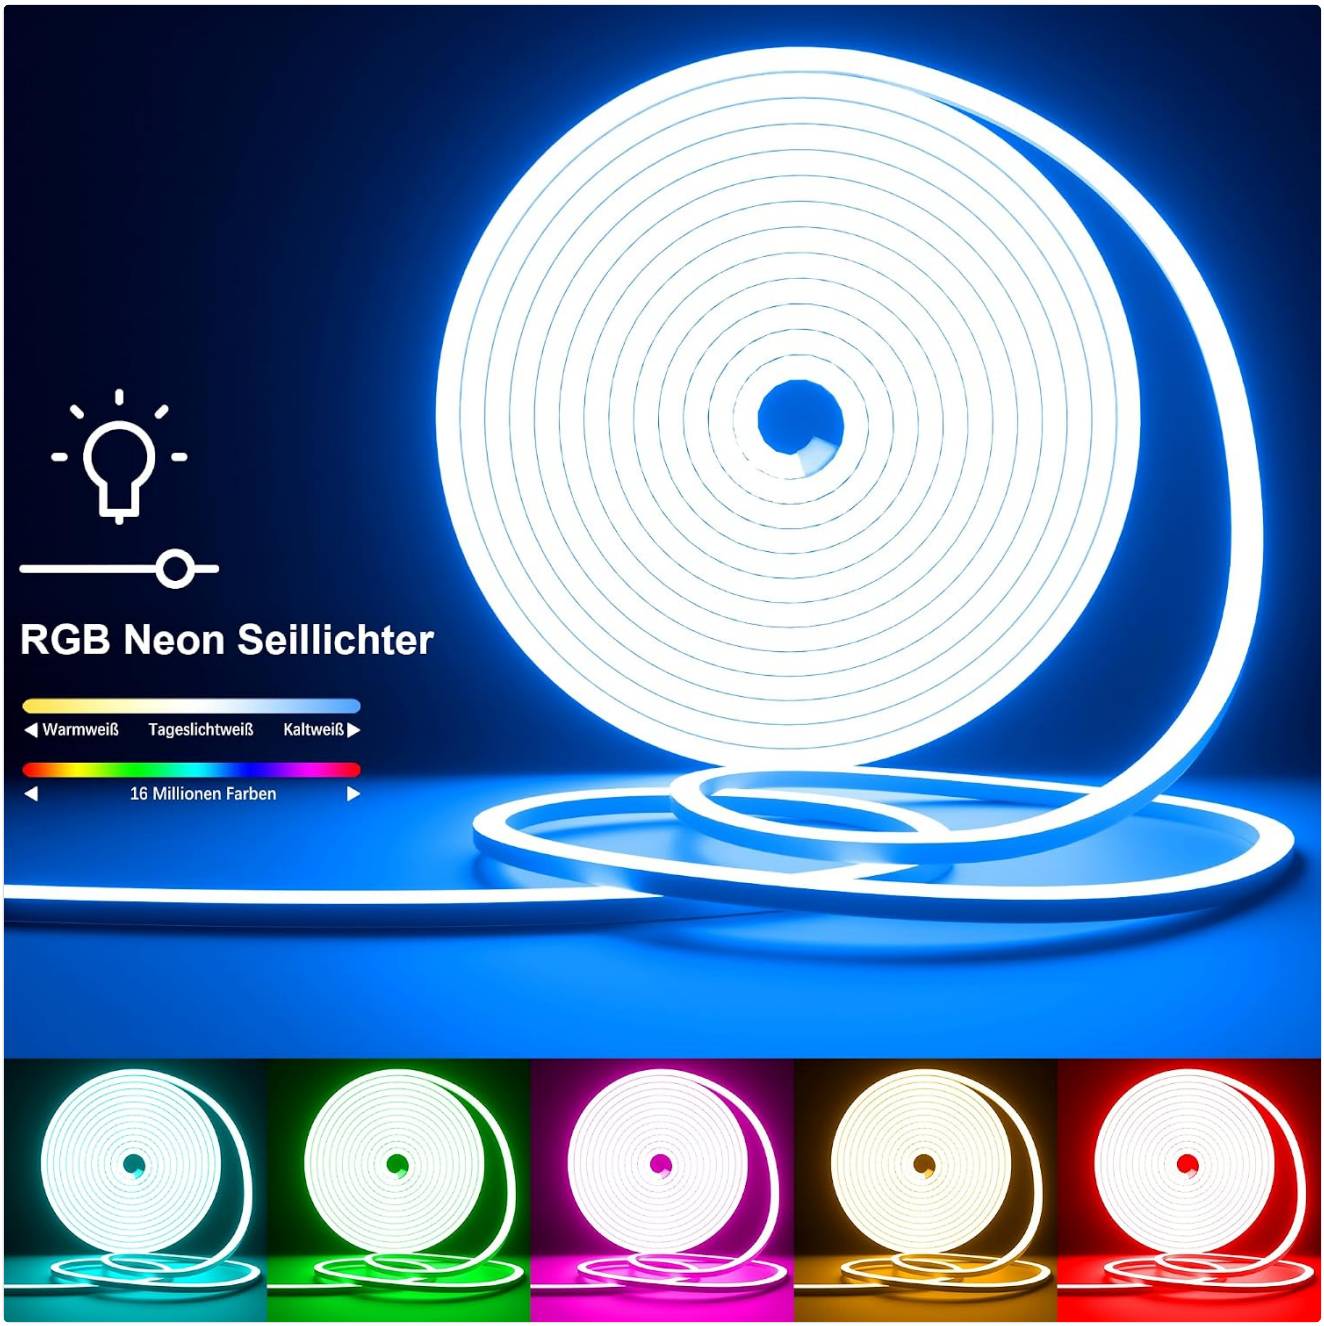


Image: A house exterior at night, decorated with Cozylady waterproof neon lights, showcasing their suitability for outdoor use.

- **Storage:** If storing the lights for an extended period, ensure they are clean and dry. Coil them loosely to prevent kinking or damage. Store in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
Lights do not turn on.	No power, loose connection, faulty power supply/controller.	Check power outlet. Ensure all connections (strip to controller, controller to power supply) are secure. Test with another power source if possible.
Remote control not working.	Battery depleted, remote not pointed at receiver, interference.	Replace remote battery (1 C battery included). Ensure remote is pointed directly at the controller's IR receiver. Remove any obstructions.

Problem	Possible Cause	Solution
App control not connecting.	Bluetooth not enabled, app not paired, controller issue.	Ensure Bluetooth is enabled on your device. Re-pair the device with the app. Restart the app and the controller (by unplugging and replugging the power supply).
Lights are dim or flickering.	Insufficient power, damaged strip, loose connection.	Check power supply. Ensure connections are tight. Inspect the strip for any visible damage.

If you are unable to resolve the issue using the troubleshooting steps above, please contact Cozylady customer support for assistance.

Specifications

Feature	Detail
Brand	Cozylady
Model Number	HX-WL3035-24V-20M
Color	Multicolor
Indoor/Outdoor Usage	Indoor, Outdoor
Special Features	App Control, Corded, Remote Controlled, Timer
Light Source Type	LED
Power Source	AC
Voltage	24 Volts
Wattage	36 watts
Number of Light Sources	1440
Material	Polyimide
Controller Type	App Control, Remote Control
Connectivity Technology	Bluetooth
Water Resistance Level	Water Resistant (Strip only)
Item Weight	10.6 ounces (300 Grams)
Package Dimensions	9.25 x 9.09 x 2.6 inches
Batteries Required	1 C battery (included for remote)
Date First Available	December 20, 2024

Note: Specifications are subject to change without notice.

Warranty and Support

Cozylady products are designed and manufactured to the highest quality standards. For any product-related inquiries, technical support, or warranty claims, please contact our customer service team.

Email: support@cozylady.cn

Please provide your model number (HX-WL3035-24V-20M) and a detailed description of your issue when contacting support to ensure a prompt resolution.

© 2025 Cozylady. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question