Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit RC933 FUB1

ZdalaMit RC933 FUB1 Voice Replacement Remote Control User Manual

Introduction

This manual provides comprehensive instructions for the ZdalaMit RC933 FUB1 Voice Replacement Remote Control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Smart QLED Pro MiniLED TV.

Setup

Battery Installation

The remote control requires two (2) 1.5V AAA Alkaline batteries (not included). To install batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the cover back into place until it clicks securely.

Pairing Instructions

This remote control requires pairing with your TV before use. Follow these steps to pair the remote:

1. Ensure your TV is powered on and in Google TV mode.
2. Hold the remote control within 3 feet (approximately 1 meter) of your TV.
3. Simultaneously press and hold the **HOME** button and the **OK** button on your remote control.
4. Continue holding both buttons until a pairing confirmation message appears on your TV screen.
5. Follow any on-screen prompts to complete the pairing process. If prompted to press the Google Assistant button for the first time, do so to finalize the connection.




123
CH
LIST
NETFLX
prime video
YouTube
T
CHANNEL



Image: Front view of the ZdalaMit RC933 FUB1 remote control, showing all buttons and their layout.

Operating Your Remote

Button Functions

Power Button ( ): Turns the TV on or off.

Mute Button ( ): Mutes or unmutes the TV audio.

Volume Down Button (-): Decreases the TV volume.

123 Button: Accesses the numeric keypad for channel input or other functions.

Back/Return Button (↶): Returns to the previous screen or menu.

Navigation Ring (Up, Down, Left, Right, OK): Used to navigate menus and select items. The central button is **OK** for selection.

Channel Up/Down Buttons (CH ˆ / CH ˇ): Changes TV channels up or down.

Home Button ( ): Returns to the TV's main home screen.

Menu Button (≡): Opens the TV's main menu or context-sensitive options.

Info Button (i): Displays information about the current program or selected item.

TV Input Button ( ): Cycles through available input sources (HDMI, AV, etc.).

Settings Button (⚙): Opens the TV's settings menu.

List Button: Accesses a list of channels or other content.

Netflix Button: Direct access to the Netflix application.

Prime Video Button: Direct access to the Prime Video application.

YouTube Button: Direct access to the YouTube application.

T Channel Button: Direct access to the T Channel application.

Voice Control

The ZdalaMit RC933 FUB1 remote control features voice control capabilities, typically powered by Google Assistant. To use voice control:

1. Press and hold the **Microphone Button** ( ) located near the top of the remote.
2. Speak your command clearly into the remote control. For example, you can say "Open Netflix," "Search for action movies," or "What's the weather?"
3. Release the Microphone Button when you have finished speaking. The TV will process your command.



Image: Front view of the remote control, highlighting the microphone button used for voice commands.

Maintenance

Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Always use new 1.5V AAA Alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

Troubleshooting

Remote not responding:

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the TV.
- Re-pair the remote control with the TV using the pairing instructions.

Voice control not working:

- Ensure the remote is properly paired with the TV.
- Check the TV's internet connection, as voice commands often require online processing.
- Speak clearly and hold the microphone button throughout your command.

Buttons are sticky or unresponsive:

- Clean the remote control's surface with a soft, dry cloth. Avoid using liquids.

Specifications

Brand	ZdalaMit
Model	RC933 FUB1
Power Supply	2 x 1.5V AAA Alkaline Batteries
Special Feature	Voice Search
Color	Black (Remote body is silver/grey)
Product Dimensions	6.75 x 1.59 x 0.55 inches (17.15 x 4.04 x 1.4 cm)
Item Weight	1.41 ounces (40 grams)
Compatible Devices	Television

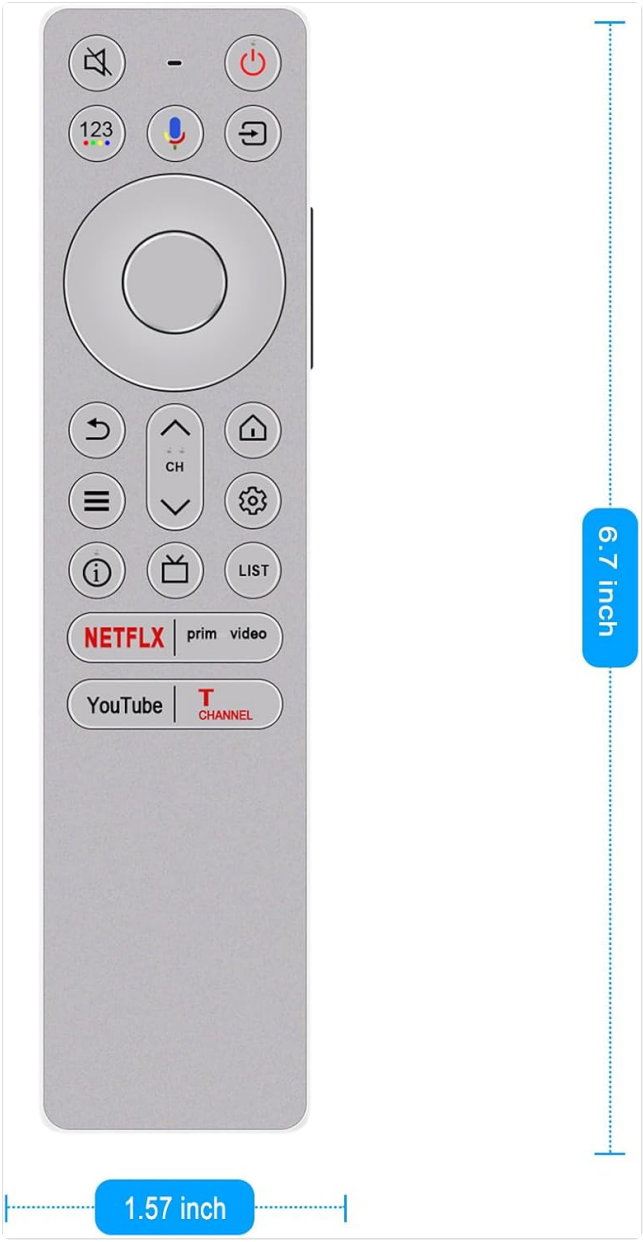


Image: The ZdalaMit RC933 FUB1 remote control with its length (6.7 inches) and width (1.57 inches) indicated.

Compatible TV Models

This ZdalaMit RC933 FUB1 Voice Replacement Remote Control is compatible with the following Smart QLED Pro MiniLED TV models:

- 65Q10B
- 75Q10B
- 85Q10B
- 98Q10B
- 50C755
- 55C755
- 65C755
- 75C755
- 85C755

- 98C755
- 98C855
- 65C855
- 75C855
- 85C855

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DR7T39N5

More documents and user manuals: **https://manuals.plus/**