Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

boAt Energyshroom PB401

boAt Energyshroom PB401 20000mAh 22.5W Fast Charging Power Bank User Manual

Model: Energyshroom PB401

1. Introduction and Overview

Thank you for choosing the boAt Energyshroom PB401 Power Bank. This device is designed to provide reliable and fast charging for your electronic devices on the go. With its high capacity and multiple charging technologies, it ensures your devices stay powered throughout your day.



Image: The boAt Energyshroom PB401 Power Bank, a compact and powerful charging solution.

2. Product Features

- **20000mAh Capacity:** A powerful 20000mAh lithium polymer battery with smart power management for extended device usage.
- **2-Way 22.5W Fast Charging:** Supports Quick Charge 3.0, Power Delivery, and PPS for swift charging of both the power bank and connected devices.
- **Multiple Output Ports:** Equipped with 2 USB-A output ports, 1 Type-C two-way port, and 1 Micro USB input port for versatile device compatibility.
- **Compact and Lightweight Design:** Engineered for portability, making it easy to carry in bags or by hand.
- **Pass-Through Charging:** Allows simultaneous charging of the power bank and connected devices.
- **12-Layer Smart IC Protection:** Advanced safety features to protect against short-circuit, overcharging, and over-discharging.
- **Durable Aluminum Casing:** High-temperature and scratch-resistant aluminum casing ensures long-term durability.



Image: The power bank's 20000mAh capacity ensures multiple charges for your devices.

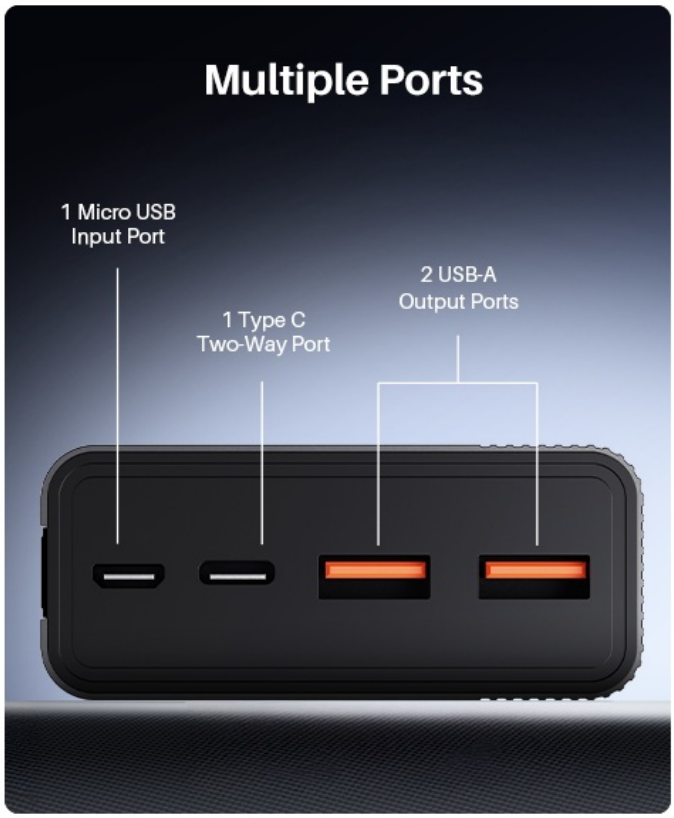




Image: The power bank supports 2-Way 22.5W Fast Charging for quick power delivery.



Image: Multiple ports including Micro USB, Type-C, and USB-A for diverse charging needs.

3. Setup

Before initial use, it is recommended to fully charge your boAt Energyshroom PB401 Power Bank. This ensures optimal performance and battery calibration.

1. **Unpack:** Carefully remove the power bank and all accessories from the packaging.
2. **Inspect:** Check the power bank for any visible damage. Do not use if damaged.
3. **Initial Charge:** Connect the power bank to a suitable power adapter using either the Micro USB or Type-C input port. Allow it to charge until all indicator lights are solid, indicating a full charge.

4. Operating Instructions

4.1 Charging the Power Bank

To charge your Energyshroom PB401 Power Bank:

1. Connect a compatible charging cable (USB-A to Micro USB or USB-C to USB-C) to the power bank's input port (Micro USB or Type-C).
2. Connect the other end of the cable to a USB wall adapter or a computer's USB port. For faster charging, use a 22.5W or higher Power Delivery (PD) compatible adapter with the Type-C port.
3. The LED indicators on the power bank will illuminate to show the charging status. When fully charged, all LEDs will remain solid.

4.2 Charging Devices with the Power Bank

To charge your electronic devices:

1. Connect your device's charging cable to one of the power bank's output ports (USB-A or Type-C).

2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The LED indicators will show the remaining power level.
4. The power bank supports pass-through charging, allowing it to be charged while simultaneously charging other devices.



Image: The power bank can charge multiple daily essentials like smartphones, smartwatches, and earbuds.

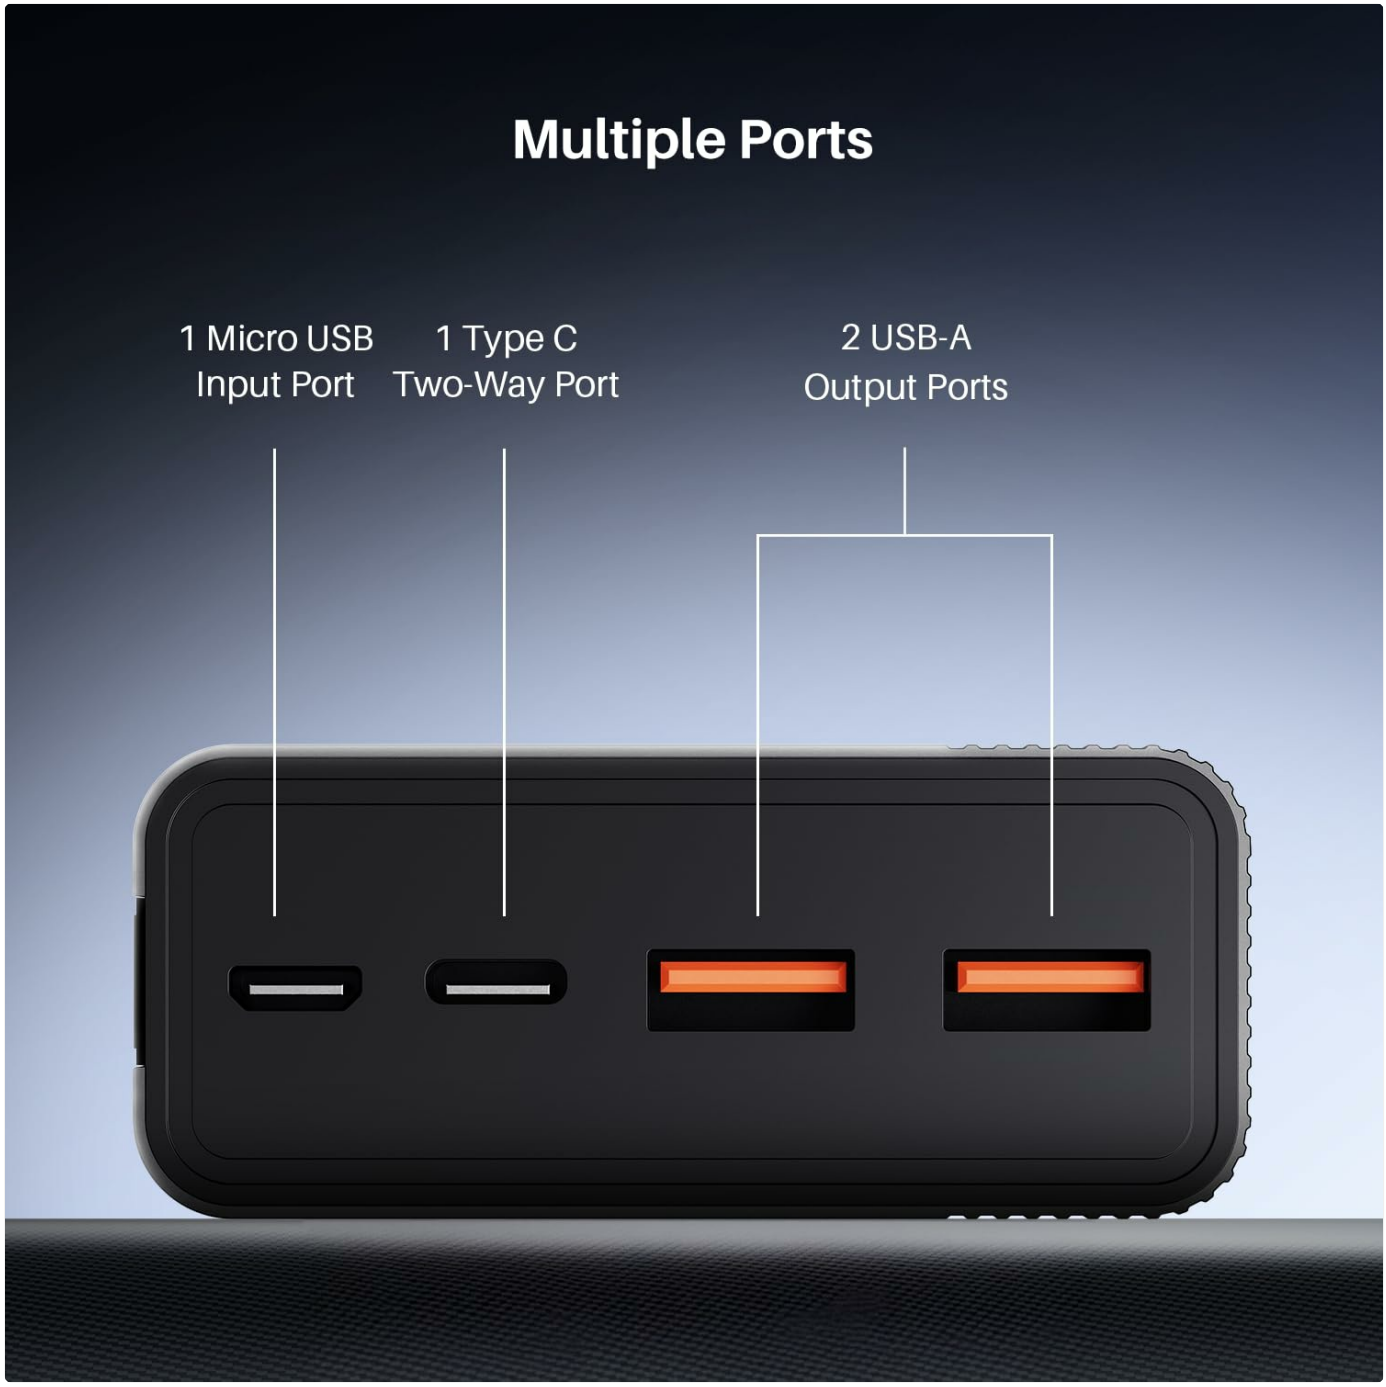


Image: The ergonomic and portable design makes the power bank easy to handle and carry.

5. Safety Information

Please read and follow these safety guidelines to prevent damage to the power bank or injury to yourself:

- Do not expose the power bank to extreme temperatures (above 60°C or below 0°C).
- Avoid dropping, hitting, or disassembling the device.
- Keep the power bank away from water, moisture, and flammable materials.
- Use only certified charging cables and adapters.
- Do not attempt to replace the internal battery.
- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations.



Image: The 12-layer smart IC protection system safeguards against various electrical hazards.

6. Troubleshooting

If you encounter issues with your power bank, refer to the following common solutions:

- **Power bank not charging:** Ensure the charging cable and adapter are working correctly and are securely connected. Try a different cable or adapter.
- **Device not charging from power bank:** Check if the power bank has sufficient charge. Ensure the cable connecting your device to the power bank is functional and properly connected.
- **Slow charging:** Verify that your charging cable and adapter support fast charging. Some devices may limit charging speed based on their battery status.
- **LED indicators not working:** If the power bank is not responding, try fully discharging it and then recharging it. If the issue persists, contact customer support.

7. Specifications

Feature	Detail
Model Number	Energyshroom PB401
Battery Capacity	20000mAh
Charging Power	22.5W (2-Way Fast Charging)
Input Ports	Micro USB, USB Type-C
Output Ports	2x USB-A, USB Type-C

Feature	Detail
Battery Cell Composition	Lithium Polymer
Item Weight	300 g
Package Dimensions	16.5 x 10.7 x 3.4 cm
Country of Origin	India

8. Warranty and Support

The boAt Energyshroom PB401 Power Bank comes with a**1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures peace of mind.

For warranty claims, technical support, or any product-related queries, please visit the official boAt support website or contact their customer service.

Online Support: https://support.boat-lifestyle.com

boAt Store on Amazon: Visit the boAt Store



Image: The durable aluminum casing ensures product longevity and protection.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0DR8QTD8Y

More documents and user manuals: **https://manuals.plus/**