ECONTROLLY RC933 FUB1

ECONTROLLY RC933 FUB1 Voice TV Remote Control User Manual

Model: RC933 FUB1

1. Introduction

This manual provides instructions for the ECONTROLLY RC933 FUB1 Voice TV Remote Control. This remote is designed to replace your original TV remote and is compatible with various 4K Smart TV models, including 85Q10B, 98Q10B, 65Q10B, 65C855, 75C855, 85C855, 75Q10B, 65C755, 75C755, 85C755, 98C755, 50C755, 55C755, and 98C855. It features voice control functionality for enhanced user experience.







Figure 1: Front view of the RC933 FUB1 Remote Control.

2. Setup

2.1 Battery Installation

The remote control requires AA ALKALINE batteries for operation. Rechargeable batteries are not supported. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

2.2 Pairing the Remote Control

To enable voice control and full functionality, the remote must be paired with your TV. This process is typically done in Google TV mode.

1. Ensure your TV is powered on and in Google TV mode.

2. Hold the remote control within 3 feet (approximately 1 meter) of your TV.
3. Simultaneously press and hold the **"HOME"** button and the **"OK"** button on your remote control.
4. Continue holding both buttons until a pairing confirmation message appears on your TV screen.
5. Once paired, the remote control is ready for use.

3. Operating Instructions

The RC933 FUB1 remote control provides intuitive access to your TV's functions, including navigation, volume, channel control, and dedicated app buttons.

3.1 Basic Functions

- **Power Button ( ):** Turns the TV on or off.
- **Mute Button ( ):** Mutes or unmutes the TV audio.
- **Volume Up/Down (-/+):** Adjusts the TV volume.
- **Channel Up/Down (CH ⌃/⌄):** Changes TV channels.
- **Navigation Pad (Circle with Up/Down/Left/Right):** Navigates menus and selects items. The center button acts as **OK/Enter**.
- **Home Button (⌂):** Returns to the TV's home screen.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Settings Button (⚙):** Accesses TV settings.
- **Input/Source Button ( ):** Changes the TV input source.
- **List Button:** Displays a list of channels or content.
- **Netflix, Prime Video, YouTube, T-Channel Buttons:** Direct access to these streaming applications.

3.2 Voice Control

After successful pairing, you can use the voice control feature to issue commands to your TV.

1. Press the **Voice Assistant Button ( )**, typically located near the top of the remote.
2. Speak clearly into the microphone located on the remote control.
3. Examples of commands include: "Open Netflix," "Search for action movies," "What's the weather?" or "Turn up the volume."



Figure 2: Remote control in use with a television.

4. Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AA ALKALINE batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, moisture, and extreme temperatures.

5. Troubleshooting

If you encounter issues with your remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with fresh AA ALKALINE batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- **Voice Control Not Working:**
  - Ensure the remote control is properly paired with your TV (refer to Section 2.2).
  - Make sure you are pressing the Voice Assistant button before speaking.
  - Speak clearly and directly into the remote's microphone.
- **Remote Not Pairing:**
  - Ensure the TV is in Google TV mode.
  - Keep the remote within 3 feet of the TV during the pairing process.
  - Try removing and reinserting the batteries, then attempt pairing again.
  - If issues persist, consult your TV's user manual for specific remote pairing instructions.

6. Specifications

Feature	Detail
Model	RC933 FUB1
Brand	ECONTROLLY
Product Dimensions	6.75 x 1.59 x 0.56 inches
Item Weight	1.76 ounces
Power Source	2 x AA ALKALINE Batteries (not included)
Special Feature	Voice Control, Pre-Programmed
Compatible Devices	Television (Specific 4K Smart TV models)
Max Number of Supported Devices	1



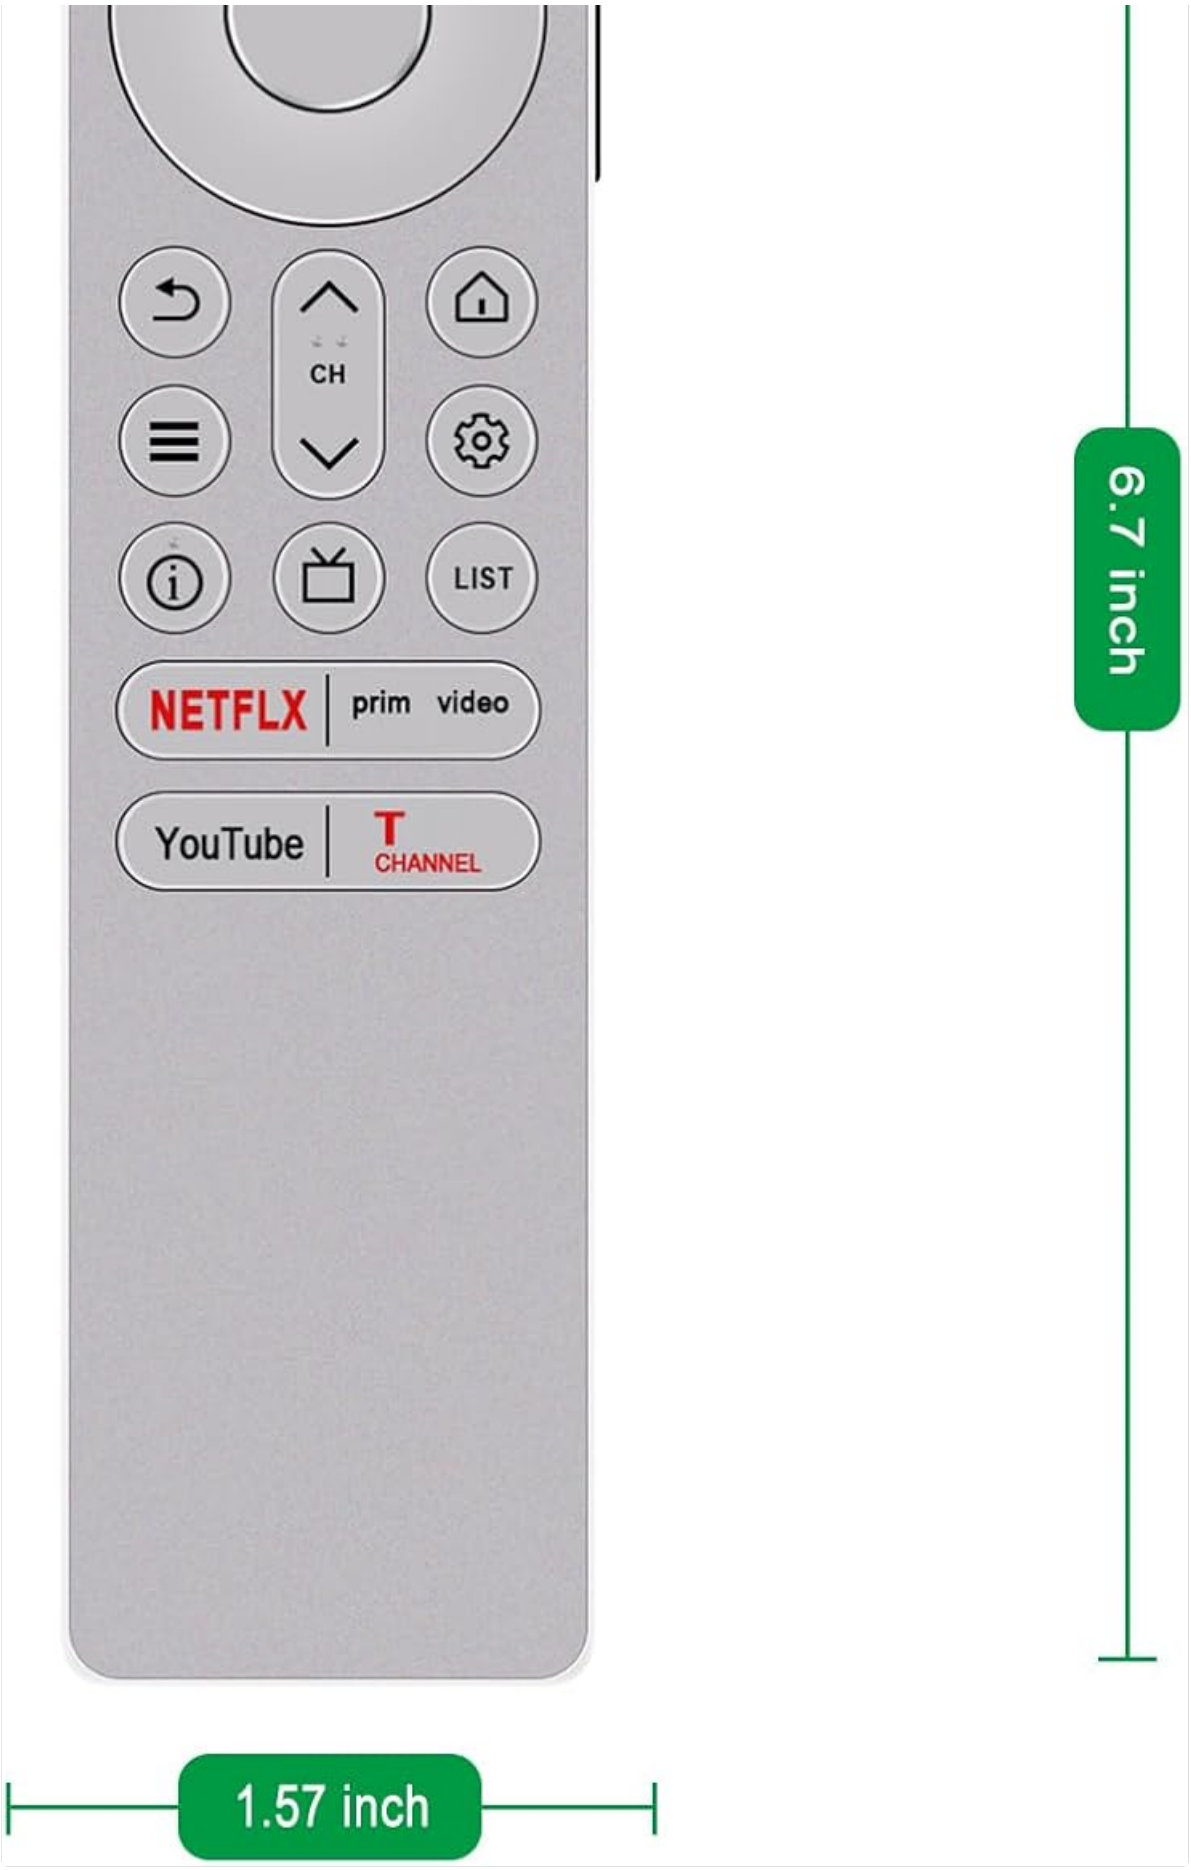


Figure 3: Dimensions of the RC933 FUB1 Remote Control.

7. Warranty Information

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for warranty purposes.

8. Support

For further assistance or technical support, please contact the retailer or the manufacturer directly. You may find contact information on the product packaging or the retailer's website. When contacting support, please have your product model (RC933 FUB1) and purchase details readily available.

© 2024 ECONTROLLY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question