ECORELAX YK-E138C

ECORELAX YK-E138C Electric Gooseneck Kettle Instruction Manual

Model: YK-E138C

1. Product Overview

The ECORELAX YK-E138C Electric Gooseneck Kettle is designed for precise water heating, ideal for coffee, tea, and other hot beverages. Featuring a 1-liter capacity and 1200W power, it offers rapid heating, accurate temperature control via an OLED display, and a convenient keep-warm function. Constructed from food-grade stainless steel, this kettle ensures durability and safety.

2. Important Safety Instructions

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact manufacturer for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the kettle is properly seated on its power base before operation.
- This kettle features an **automatic shut-off** and **dry-boiling protection** for enhanced safety.
- If the kettle stops working or causes a circuit breaker to trip, discontinue use immediately and contact customer support.

3. Package Contents

Verify that all items are present in the package:

- ECORELAX Electric Gooseneck Kettle (YK-E138C)
- Power Base
- Lid
- Instruction Manual

4. Product Diagram

Familiarize yourself with the components of your ECORELAX kettle.



This image illustrates the internal components and material of the ECORELAX YK-E138C kettle, highlighting the stainless steel spout, anti-scald stainless steel lid, and stainless steel interior, ensuring food-grade safety.

1. **Gooseneck Spout:** Designed for precise pouring control.
2. **Lid:** Removable lid for filling and cleaning.
3. **Handle:** Ergonomic, BPA-free handle for comfortable grip.
4. **Kettle Body:** 1-liter capacity, food-grade stainless steel.
5. **OLED Display:** Shows current and set temperatures.
6. **Control Buttons:** For power, temperature adjustment, and timer functions.
7. **Power Base:** Connects to the power outlet and heats the kettle.
8. **Max Fill Line:** Indicates the maximum water level inside the kettle.

5. Setup

1. **Unpack:** Carefully remove all packaging materials from the kettle and its components.


2. **Initial Cleaning:** Before first use, fill the kettle with water to the maximum fill line. Boil the water and then discard it. Repeat this process 2-3 times to remove any manufacturing residues and potential plastic odors.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface.
4. **Connect Power:** Plug the power cord into a standard electrical outlet. Ensure the voltage matches your local power supply.
5. **Position Kettle:** Place the kettle securely onto the power base.

6. Operating Instructions

6.1 Filling the Kettle

- Remove the lid and fill the kettle with fresh, cold water.
- Do not fill below the minimum mark or above the maximum fill line (1 Liter) to prevent dry-boiling or overflow.
- Replace the lid securely.

6.2 Power On/Off and Temperature Setting

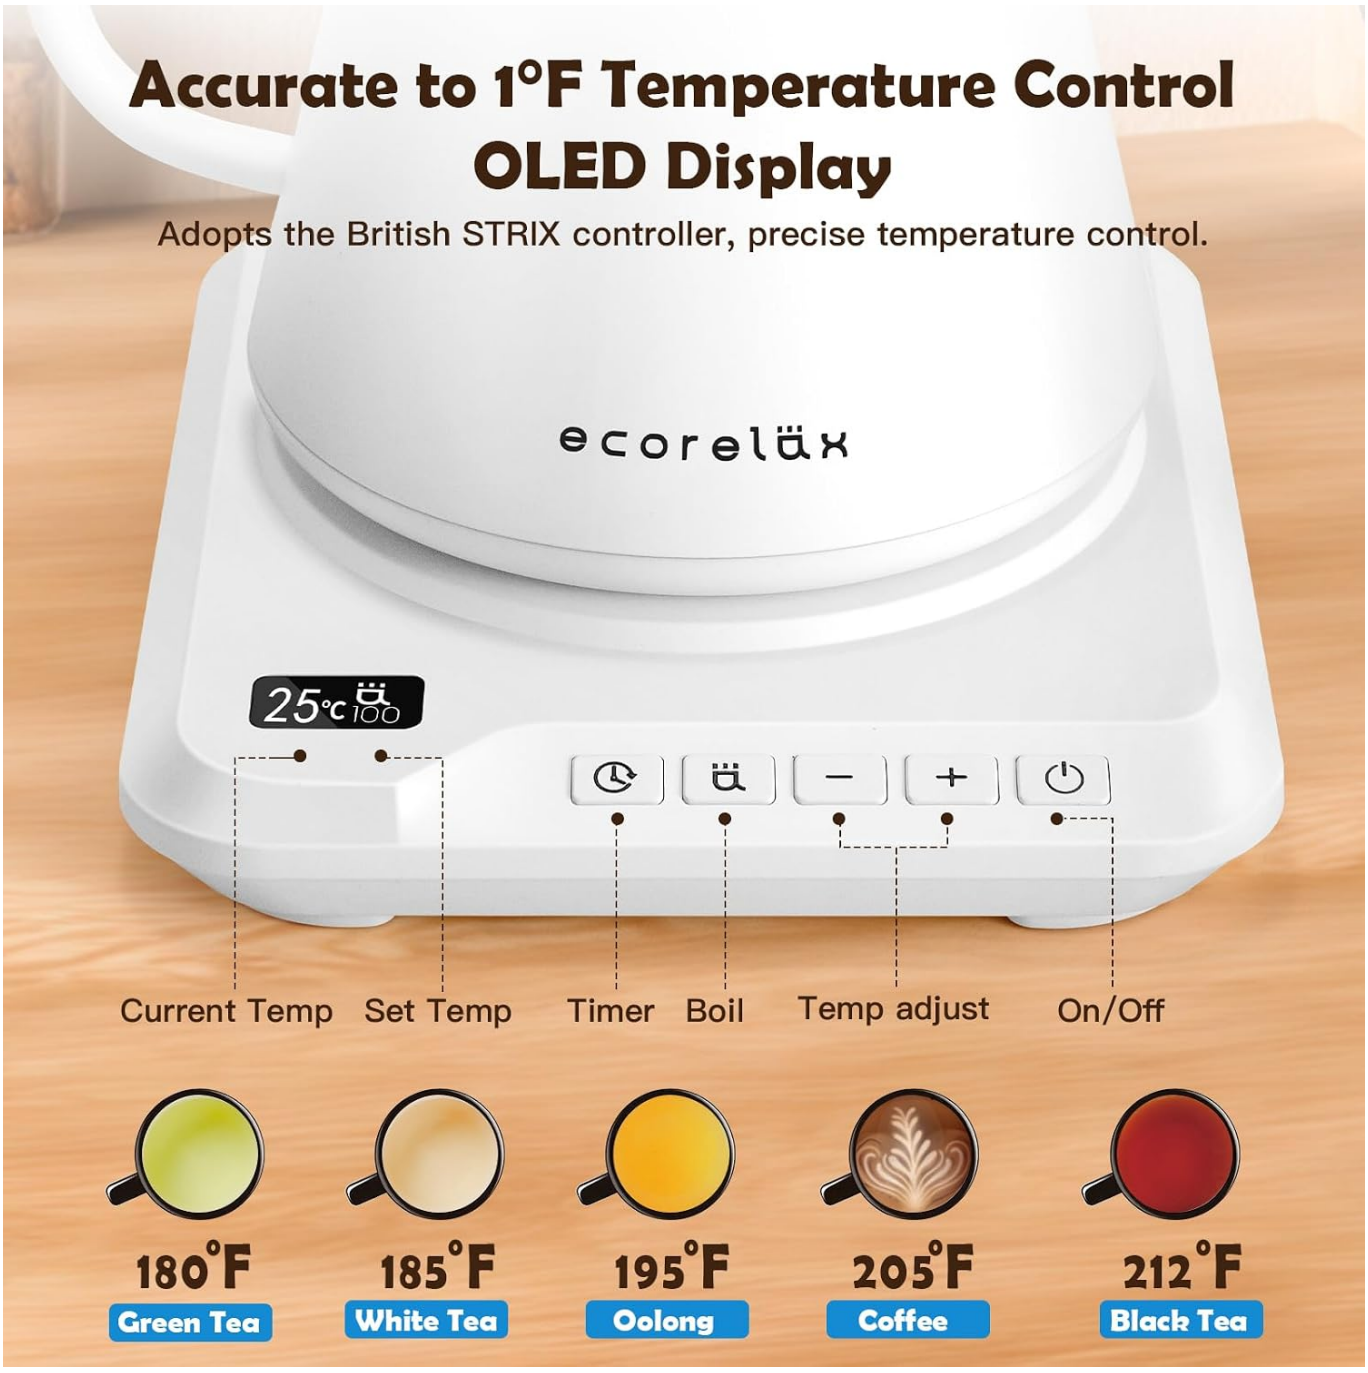

This image displays the control panel of the ECORELAX YK-E138C kettle, showing the OLED screen with current and set temperatures, along with buttons for timer, boil, temperature adjustment (+/-), and power on/off. Recommended temperatures for various beverages are also shown.

1. Place the filled kettle on the power base.
2. Press the **On/Off** button to activate the kettle. The OLED display will illuminate.
3. Use the **+** and **-** buttons to select your desired temperature. The OLED display will show both the current water temperature and your set temperature.
4. Press the **Boil** button (often indicated by a kettle icon) to start the heating process. The kettle will heat water rapidly, typically within 3-4 minutes for a full liter, operating at approximately 59 dB.
5. Once the set temperature is reached, the kettle will automatically stop heating.

6.3 Keep Warm Function



This image highlights the safety and convenience features of the ECORELAX YK-E138C kettle, including its ability to keep water warm for up to 2 hours, automatic shut-off, and dry-boiling protection.

- After reaching the desired temperature, the kettle's built-in NTC thermistor will maintain the water temperature for up to 2

hours.

- After 2 hours, the kettle will automatically shut off.

6.4 Pouring



This image demonstrates the ECORELAX YK-E138C kettle's precise gooseneck spout and ergonomic handle, designed for optimal control when pouring water, especially for pour-over coffee or tea.

- The gooseneck spout is designed for a controlled and steady flow, which is particularly beneficial for pour-over coffee and delicate teas.
- Hold the ergonomic handle firmly and pour slowly to achieve the desired flow rate.

7. Cleaning and Maintenance

Regular cleaning and maintenance will prolong the life of your kettle.

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.

- Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the kettle or the power base in water or any other liquid.
- The interior of the kettle is made of stainless steel and is easy to clean. For stubborn stains, use a soft sponge with mild dish soap.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
  - Fill the kettle with 1 part white vinegar and 2 parts water.
  - Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
  - Pour out the mixture and rinse the kettle thoroughly with fresh water several times.
  - Alternatively, use a commercial descaling solution following the product's instructions.
- Ensure all parts are completely dry before storing or using again.

8. Troubleshooting

If you encounter issues with your kettle, refer to the following common problems and solutions:

- **Kettle not heating:**
  - Ensure the power cord is securely plugged into a working outlet.
  - Verify the kettle is properly seated on the power base.
  - Check if the On/Off button has been pressed.
- **Kettle not turning on:**
  - Check your household circuit breaker.
  - Ensure the power outlet is functional by testing with another appliance.
- **Water has an unusual taste (e.g., plastic-like):**
  - This can sometimes occur with new appliances. Perform the initial cleaning steps (boil and discard water) several more times.
  - Ensure the lid is properly closed and no plastic components are in direct contact with the water during boiling.
- **Kettle stops working or trips circuit breaker:**
  - Immediately unplug the kettle.
  - Do not attempt to use it again. This indicates a serious electrical fault.
  - Contact ECORELAX customer support for assistance.
- **Pouring is too fast or awkward:**
  - The gooseneck spout is designed for precision. Practice pouring slowly and at different angles to find the optimal flow for your needs.

9. Specifications

Model Number	YK-E138C
Brand	ECORELAX

Capacity	1 Liter
Power	1200 Watts
Material	Food-grade Stainless Steel
Dimensions (L x W x H)	21.6 cm x 19.1 cm x 30.5 cm
Special Features	Automatic Shut-off, Dry-Boiling Protection, Precise Temperature Control, Keep Warm Function (up to 2 hours), OLED Display, Low Noise Operation
Components Included	Kettle, Power Base, Lid

10. Warranty and Support

For warranty information, technical support, or any questions regarding your ECORELAX YK-E138C Electric Gooseneck Kettle, please contact ECORELAX customer service. Refer to the product packaging or the official ECORELAX website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question