Merexcint MX-60074-B

Merexcint Crystal Ceiling Fan with Light and Remote

Model: MX-60074-B

Introduction

Thank you for purchasing the Merexcint Crystal Ceiling Fan with Light and Remote. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new ceiling fan. Please read this manual thoroughly before installation and keep it for future reference.



Image: The Merexcint 18-inch Crystal Ceiling Fan with Light and Remote, showcasing its modern design with a black metal cage and clear crystals, installed in a room with a remote control in hand.

Safety Information

To reduce the risk of electrical shock, fire, or personal injury, always follow these basic safety precautions:

- Read all instructions carefully before beginning installation.
- Consult a qualified electrician for installation if you are not familiar with electrical wiring.
- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (approximately 12.23 pounds).
- Do not operate the fan with damaged wiring or if it is not functioning properly.
- Keep hands, hair, and clothing away from moving fan blades.
- Do not attempt to repair or modify the fan yourself. Contact customer support for assistance.

Package Contents

Carefully unpack your ceiling fan and inspect the contents to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer service immediately.

- Ceiling Fan Unit (with integrated motor, light fixture, and crystal cage)
- Remote Control
- Two Downrods (4.92" and 7.97" lengths)
- Mounting Hardware Kit
- Instruction Manual

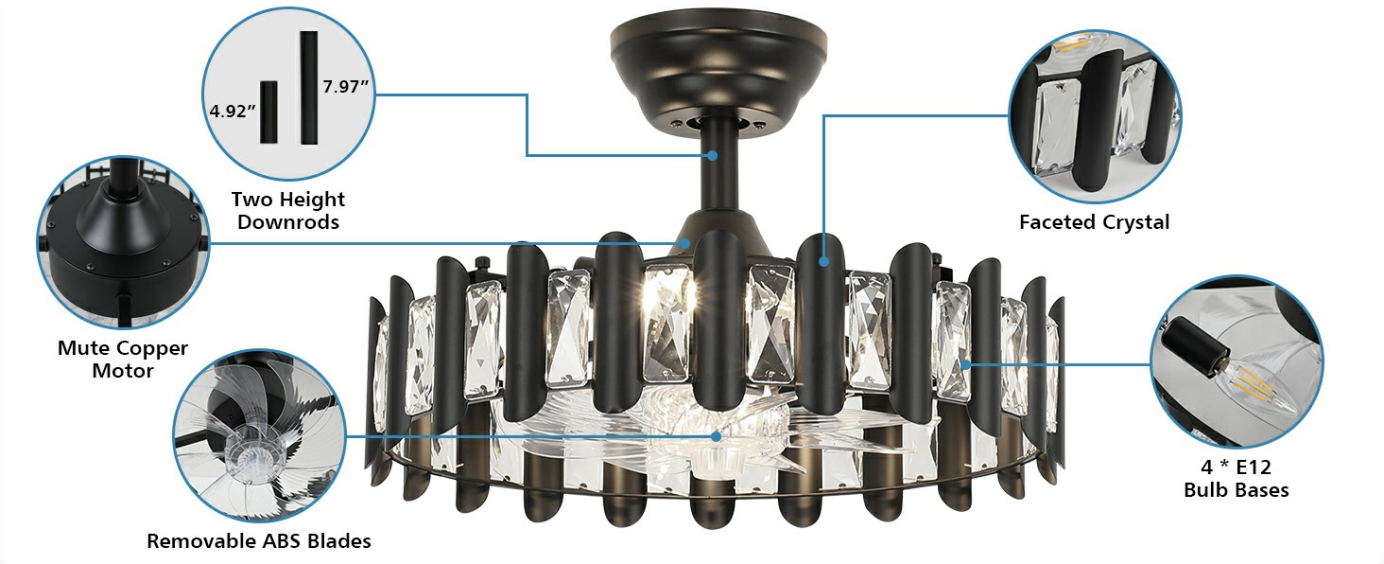


Image: Diagram showing key components including the mute copper motor, removable ABS blades, faceted crystals, E12 bulb bases, and the two included downrods.

Setup and Installation

This ceiling fan is designed for easy installation. However, for safety, it is recommended to consult a professional electrician if you are unsure about any steps. Ensure the power supply is disconnected before starting installation.

1. **Prepare the Mounting Location:** Ensure the electrical box is securely attached to the building structure and can support the fan's weight.
2. **Assemble the Downrod:** Choose the appropriate downrod (4.92" or 7.97") for your ceiling height and attach it to the fan motor assembly.
3. **Wire the Fan:** Connect the fan's electrical wires to the household wiring according to the provided wiring diagram in the detailed installation manual.
4. **Mount the Fan:** Securely attach the fan assembly to the mounting bracket on the electrical box.
5. **Install Bulbs:** Insert four E12 base bulbs (not included) into the light sockets.
6. **Final Checks:** Ensure all connections are secure and the fan is properly mounted before restoring power.



Image: Illustration demonstrating both standard downrod mounting and angled mounting options for ceilings sloped up to 22 degrees.

Operating Instructions

Your Merexcint ceiling fan comes with a convenient remote control for easy operation of all functions.

Remote Control Functions:

- **Light ON/OFF:** Press the light button to turn the light on or off.
- **Fan ON/OFF:** Press the fan button to turn the fan on or off.
- **Speed Control (1-6):** Adjust the fan speed from 1 (lowest) to 6 (highest) to suit your comfort.
    - *Speed 1-2:* Smooth Wind
    - *Speed 3-4:* Medium Wind
    - *Speed 5-6:* High Speed
- **Reversible Motor:** Press the reversible motor button to switch between summer and winter modes.
    - *Summer Mode:* Downward airflow for rapid cooling.
    - *Winter Mode:* Upward airflow to balance heating and circulate warm air.
- **Timer Settings (1H, 2H, 4H):** Set the fan to automatically turn off after 1, 2, or 4 hours.
- **Natural Wind Mode:** (If available on your remote) Alternates between fast and slow speeds to simulate natural breeze.



Image: Detailed diagram of the remote control, illustrating buttons for light, fan on/off, reversible motor, fan speeds (1-6), and timer settings (1H, 2H, 4H).

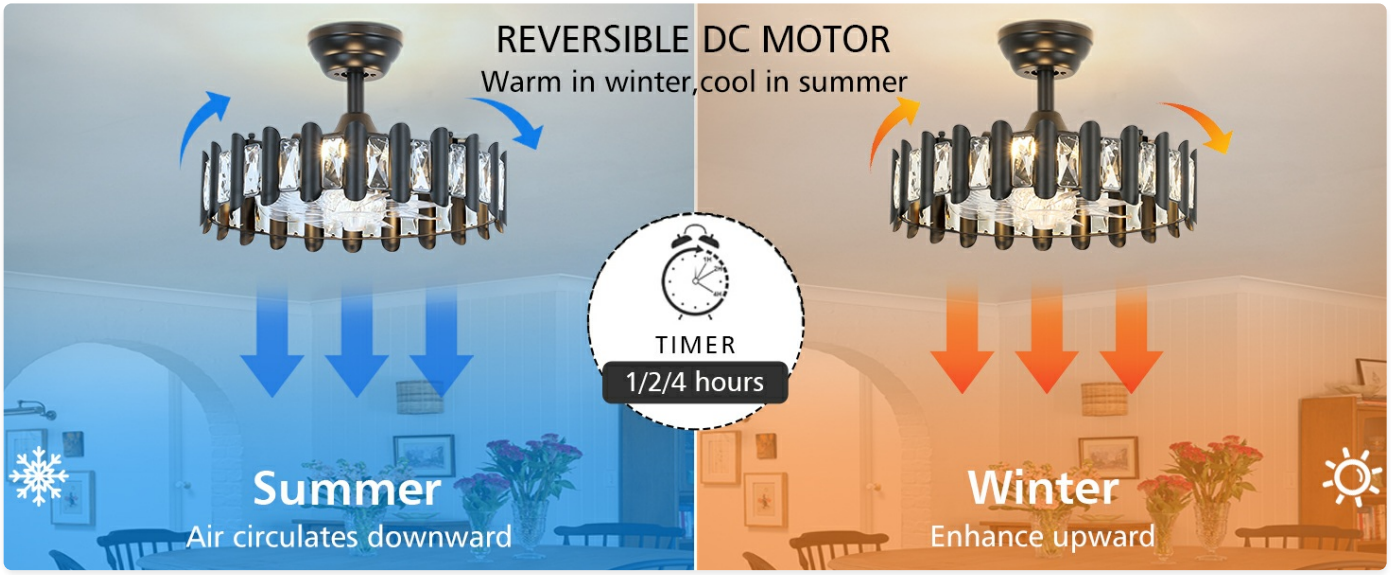


Image: Visual representation of the reversible DC motor function, showing downward airflow for summer cooling and upward airflow for winter heat circulation, along with timer options.

Quiet Operation:

The Merexcint ceiling fan features an ultra-quiet DC motor, operating at noise levels below 30dB, ensuring a comfortable and peaceful environment, especially suitable for bedrooms.



Image: Depiction of the fan's 6-speed control and its silent DC motor, highlighting its low noise level (30dB) compared to typical conversation or other ceiling fans, ideal for sleeping.

Maintenance

Regular maintenance will ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Bulb Replacement:** The fan uses E12 base bulbs. Ensure power is off and bulbs have cooled before replacing.
- **Blade Cleaning:** The ABS fan blades can be wiped clean with a soft cloth.
- **Tighten Screws:** Periodically check and tighten all screws on the fan and mounting hardware to ensure secure operation.

Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start.	No power supply; loose wiring; remote control battery low.	Check circuit breaker; ensure all connections are secure; replace remote control batteries.
Light does not turn on.	Bulbs are faulty or not installed correctly; loose wiring.	Replace bulbs; ensure bulbs are screwed in tightly; check wiring connections.
Fan wobbles.	Loose mounting screws; unbalanced blades.	Tighten all mounting screws; ensure blades are securely attached and balanced.
Remote control not working.	Battery low or incorrectly inserted; remote not paired.	Replace battery; ensure correct polarity; refer to remote pairing instructions (if applicable).

If the problem persists after attempting these solutions, please contact Merexcint customer support.

Specifications

Feature	Detail
Brand	Merexcint
Model Name	MX-60074-B
Color	Black-74
Product Dimensions (D x W x H)	17.71"D x 17.71"W x 11.02"H
Canopy Diameter	5.9"
Adjustable Height Bar	7.87" + 4.92" (two downrods included)
Power Source	DC
Voltage	100-120V
Light Type	E12*4 (bulbs not included)
Max Wattage per Bulb	40W
Motor Type	DC variable frequency (pure copper)
Number of Speeds	6
Reversible Motor	Yes
Noise Level	Below 30 dB
Timer Settings	1H, 2H, 4H
Control Method	Remote
Material	Metal, ABS fan blades, K9 Crystals
Recommended Room Size	70 to 90 sq.ft
Indoor/Outdoor Usage	Indoor
Item Weight	12.23 pounds
UPC	645707957945

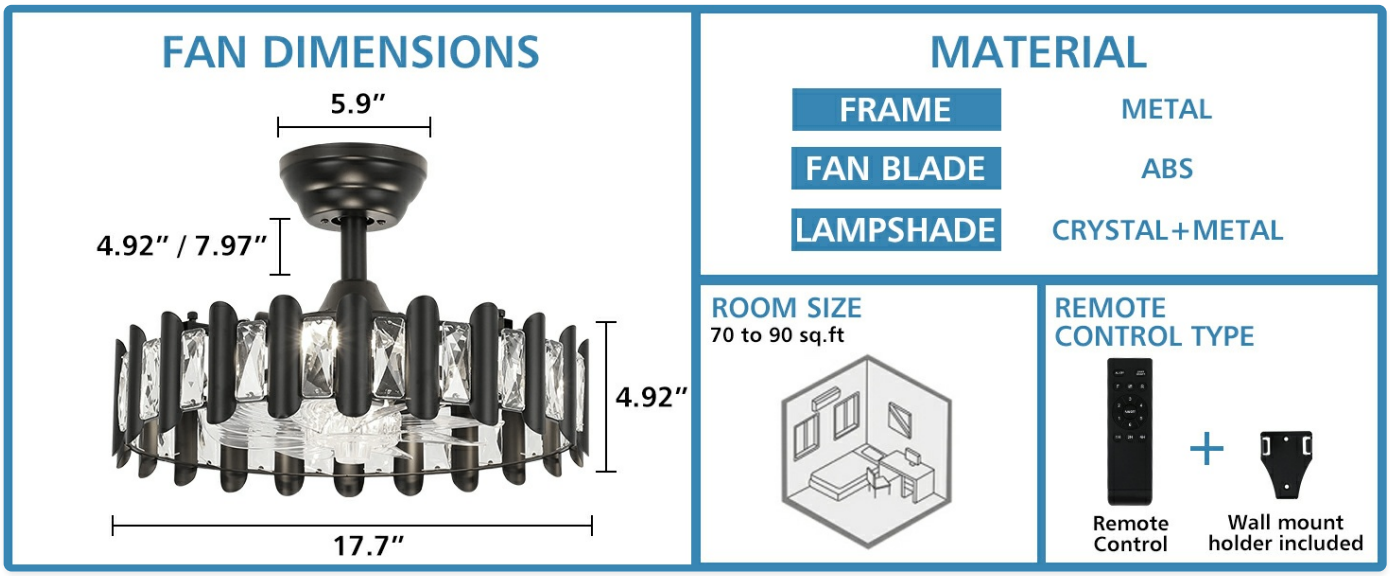


Image: Infographic detailing fan dimensions (17.7" diameter, 4.92" height with short downrod), materials (metal frame, ABS fan blades, crystal+metal lampshade), recommended room size (70-90 sq.ft), and remote control type.

Warranty and Support

Merexcint provides dedicated customer service for your product. If your ceiling fan is damaged during transportation, we offer a free exchange. For any questions or concerns regarding your modern fandelier, please do not hesitate to contact us. Our goal is to ensure your satisfaction.
Please refer to your purchase documentation for specific warranty terms and contact information.

© 2025 Merexcint. All rights reserved.